




Service Manual

Nakamichi OMS-4 OMS-4A OMS-4E OMS-40

Compact Disc Player

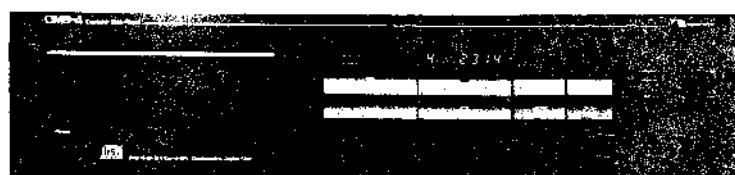

CONTENTS

1. GENERAL	3
2. REMOVAL PROCEDURES	4
2.1 TOP COVER ASS'Y AND BOTTOM COVER ASS'Y	4
2.2 SERVO P.C.B. ASS'Y	4
2.3. FRONT PANEL ASS'Y	4
2.4. CONTROL & DISPLAY P.C.B. ASS'Y	4
2.5. MAIN P.C.B. ASS'Y AND DISC MECHANISM ASS'Y	4
2.6. CHUCK ARM ASS'Y AND DISC TRAY ASS'Y	5
2.7. LASER PICKUP ASS'Y	5
2.8. DISC MOTOR	5
3. ADJUSTMENT PROCEDURES	6
3.1. INSTRUMENTS AND GAUGE	6
3.2. PARTS LOCATION FOR ADJUSTMENT	6
3.3. LASER POWER CHECK	7
3.4. VCO ADJUSTMENT ON MAIN P.C.B. ASS'Y	7
3.5. ADJUSTMENT OF SERVO P.C.B. ASS'Y	8
3.6. DISTORTION ADJUSTMENT	9
3.7. OPERATION CHECK	10
4. MECHANISM ASS'Y AND PARTS LIST	11
4.1. SYNTHESIS	11
4.2. CHASSIS ASS'Y	12
4.3. FRONT PANEL ASS'Y	13
4.4. TOP COVER ASS'Y	13
4.5. BOTTOM COVER ASS'Y	13
4.6. DISC MECHANISM ASS'Y	14
4.7. LOADING GEAR ASS'Y	15
4.8. CHUCK ARM ASS'Y	15
5. MOUNTING DIAGRAMS AND PARTS LIST	16
5.1. MAIN P.C.B. ASS'Y	16
5.2. SERVO P.C.B. ASS'Y	18
5.3. SEARCH P.C.B. ASS'Y	20
5.4. CONTROL AND DISPLAY P.C.B. ASS'Y	20
5.5. SIGNAL PROCESS P.C.B. ASS'Y	22
5.6. D F/F P.C.B. ASS'Y	22
5.7. DAC P.C.B. ASS'Y	23
5.8. RAM P.C.B. ASS'Y	23
5.9. ANALOG FILTER P.C.B. ASS'Y	23
5.10. HEADPHONE AMP. P.C.B. ASS'Y	24
5.11. TERMINAL P.C.B. ASS'Y	24
5.12. PHOTO TRANSISTOR P.C.B. ASS'Y	24
5.13. PHOTO DIODE P.C.B. ASS'Y	24
6. IC BLOCK DIAGRAMS	25
7. SCHEMATIC DIAGRAM	34
8. WIRING DIAGRAM	35
9. BLOCK DIAGRAM	36
10. SPECIFICATIONS	37

1. GENERAL

1.1 PACKING MATERIALS and OWNER'S MANUAL

The OMS-4/4A/4E/40 is equipped with the Remote Control Unit RM-4-CD.
The Remote Control Unit RM-4CD will be supplied per unit as for space parts.

<u>Part No.</u>	<u>Description</u>	<u>Q'ty</u>
0C81615A	Carton Box OMS-4	1
0C81612A	Carton Box OMS-4A	1
0C81616A	Carton Box OMS-4E	1
0C81617A	Carton Box OMS-40	1
0D04640B	Owner's Manual (English)	1
0D04642A	Owner's Manual (Japanese)	1
0D04641A	Owner's Manual (English/German/French)	1
CA80519A	Remote Control Unit	1

1.2 WARNING

1.2.1 IN SERVICE MANUAL

This unit uses an invisible semiconductor laser to pick up the digital signal on the disc. Since the laser can take the signal without contact, there's no anxiety of rubbing down the disc and the Pickup Ass'y.

But you must treat the laser with the greatest of care. In servicing, please pay attention to the following.

- 1) Avoid direct exposure to beam.
Laser can be radiated when the interlocks fail or are defeated.
- 2) Do not break up the Laser Pickup Ass'y.
- 3) Referred to in item 2.7 Laser Pickup Ass'y on page 5.

1.2.2 LASER SPECIFICATION

The laser provided in the unit is GaAlAs semiconductor laser. The theory of the laser emitting is the same as the light emitting of LEDs. The difference is that the laser has only one wavelength and is coherent.

One of the characteristics of laser diodes is that the threshold level can be changed accordance with the surrounding temperature. To correct this characteristic, the laser diode used in this unit provides a monitor photo diode and controls the output power level of the laser to be constant.

The Laser Pickup Ass'y consists of a laser diode, 6-split photodiode, object lens, beam splitter and coils. The object lens moves forward or back by the focus servo coil and also moves left or right by the tracking servo coil. The laser passes through the prisms and the lenses and is emitted through the object lens. The power of it is decreased to 0.3mW passing through these optical instruments. The laser reflected by the disc passes through the optical instruments again and detected by the 6-split photo diode.

1.2.3 CAUTION

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamp, or if the resistance from the chassis to either side of the power cord is less than 240k ohms, the unit is defective.

WARNING – DO NOT return the unit to the customer until the problem is located and corrected.

1.2.4 Main P.C.B

The Main P.C.B. Ass'y C230, C231, C501 – C509, C510, C520, C351, C353, C215, are attached with Sony Bond SC12N.

After replacing any of these components, be certain to apply them with Sony Bond SC12N.

2. REMOVAL PROCEDURES

2.1. Top Cover Ass'y and Bottom Cover Ass'y

- (1) Refer to Fig. 2.1.
- (2) Remove F01 and F02, then lift and remove F03 (Top Cover Ass'y).
- (3) Remove F04, F05, F06 and F07, then lift and remove F08 (Bottom Cover Ass'y).

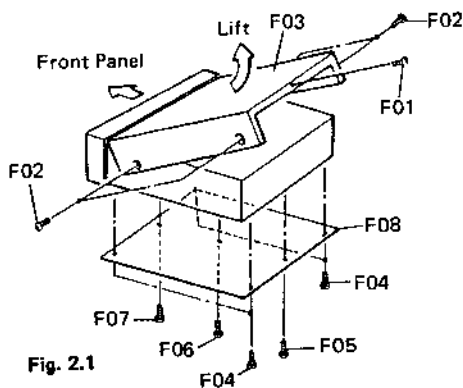


Fig. 2.1

2.2. Servo P.C.B. Ass'y

- (1) Refer to Fig. 2.2 and Fig. 2.3.
- (2) Remove the Top Cover Ass'y and the Bottom Cover Ass'y referred to in item 2.1.
- (3) Remove F01 and F02 (P.C.B. Support) and five connectors (CN-101, CN-102, CN-103, CN-202 and CN-203), then F03 (Servo P.C.B. Ass'y).

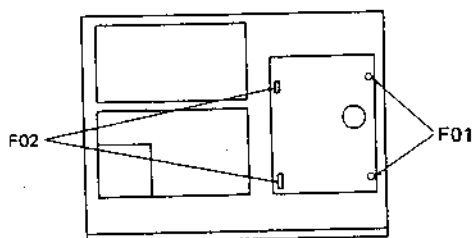


Fig. 2.2

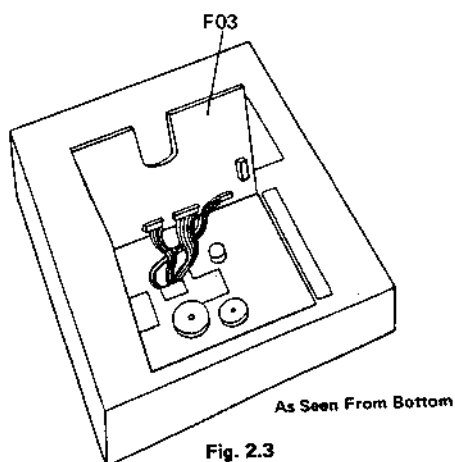


Fig. 2.3

2.3. Front Panel Ass'y

- (1) Refer to Fig. 2.4 and Fig. 2.5.
- (2) Remove the Top Cover Ass'y and the Bottom Cover Ass'y referred to in item 2.1.
- (3) Eject the Disc Tray Ass'y and remove F01 (Disc Drawer Cover) by pressing it down with your fingers.
- (4) Remove F02 and F03, then release the latches located on both sides of the Chassis.
- (5) Remove two connectors (CN-401 and CN-402), then F04 (Front Panel Ass'y).

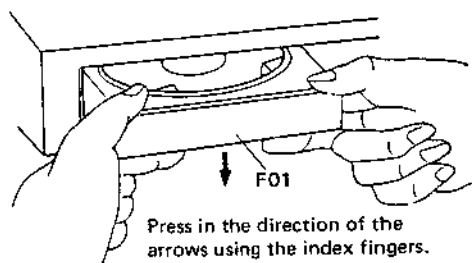


Fig. 2.4

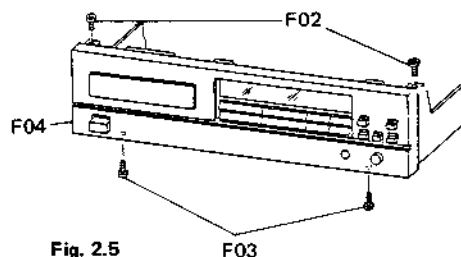


Fig. 2.5

2.4. Control & Display P.C.B. Ass'y

- (1) Refer to Fig. 2.6.
- (2) Remove the Front Panel Ass'y referred to in item 2.3.
- (3) Remove F01, then release the latches located on the Front Panel Ass'y, then F02 (Control & Display P.C.B. Ass'y).

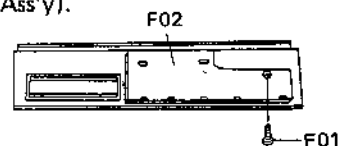


Fig. 2.6

2.5. Main P.C.B. Ass'y and Disc Mechanism Ass'y

- (1) Refer to Fig. 2.7.
- (2) Remove the Front Panel Ass'y referred to in item 2.3.
- (3) Remove F01, F02, F03, F04 (P.C.B. Holder), F05, F06 and F07, then F08 (Main P.C.B. Ass'y).
- (4) Remove F09, then F10 (Disc Mechanism Ass'y).

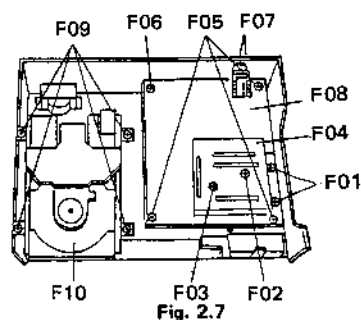


Fig. 2.7

2.6. Chuck Arm Ass'y and Disc Tray Ass'y

- (1) Refer to Fig. 2.8.
- (2) Remove the Front Panel Ass'y referred to in item 2.3.
- (3) Remove F01, then F02 (Chuck Arm Plate), F03 (Chuck Arm Spring), F04 and F05 then F06 (Chuck Arm Ass'y).
- (4) Remove F07 and F08, then F09 (Disc Drawer Guide L), F10 (Disc Drawer Guide R), then F11 (Disc Tray Ass'y).

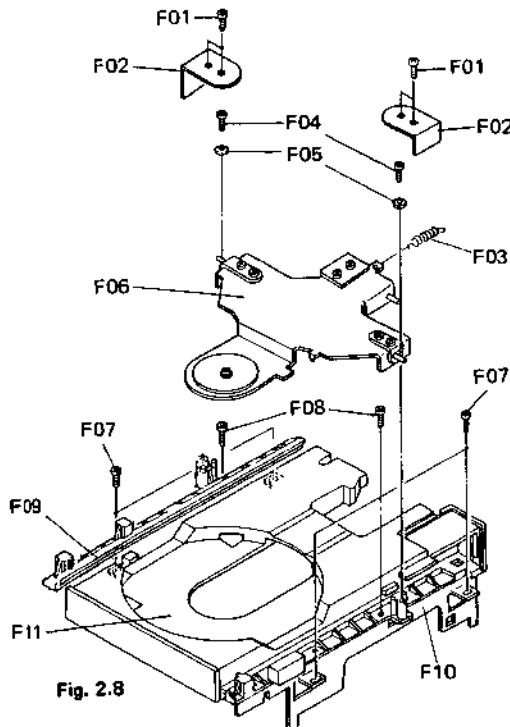


Fig. 2.8

2.7. Laser Pickup Ass'y

- (1) Refer to Fig. 2.9.
- (2) Remove the Disc Tray Ass'y referred to in item 2.6.
- (3) Remove the three connectors (CN-101, CN-102 and CN-103) from the Servo P.C.B. Ass'y.
- (4) Remove F01, then F02 (Laser Pickup Ass'y) along with F03 (Pickup Guide Rail).

NOTE: IF IT IS NOT CERTAIN THAT THE LASER PICK-UP ASS'Y IS DEFECTIVE, DO NOT REMOVE THE THREE CONNECTORS (CN-101, CN-102 and CN-103). IF YOU REMOVE THESE THREE CONNECTORS, THE LASER DIODE OF THE LASER PICKUP ASS'Y WILL BE DAMAGED.

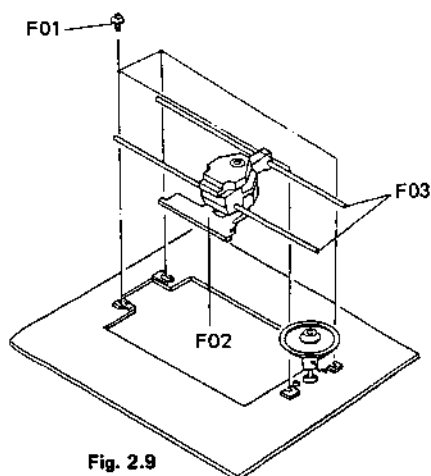


Fig. 2.9

Installing a new Laser Pickup Ass'y

- (1) When installing a new Laser Pickup Ass'y you must connect its three connectors (CN-101, CN-102 and CN-103) to the Servo P.C.B. Ass'y first.
- (2) Then using a grounded tip soldering iron only, remove the short-circuiting solder in the area of the dotted circle as shown in Fig. 2.10; this small P.C.B. which is incorporated with the Laser Pickup Ass'y.

CAUTION: IF THE SHORT-CIRCUITING SOLDER IS REMOVED BEFORE THE THREE CONNECTORS (CN-101, CN-102 and CN-103) ARE CONNECTED, DAMAGE TO THE LASER DIODE OF THE LASER PICKUP ASS'Y COULD OCCUR IN A MATTER OF SECONDS, CAUSING FAILURE OF THE NEW LASER PICKUP ASS'Y.

NOTE: THE LASER PICKUP ASS'Y STOCKED AS SPARE PART, MUST BE SHORTED TO DOTTED CIRCLE OF THE SMALL P.C.B. WHICH IS INCORPORATED WITH THE LASER PICKUP ASS'Y AS SHOWN IN Fig. 2.10.

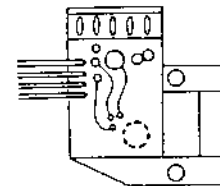


Fig. 2.10

2.8. Disc Motor

- (1) Refer to Fig. 2.11.
- (2) Remove Disc Tray Ass'y referred to in item 2.6.
- (3) Remove F01, then pull up F02 (Turntable B Ass'y)
- (4) Remove F03, then F04 (Disc Motor).

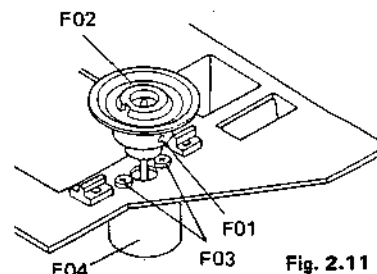


Fig. 2.11

RE-ASSEMBLY OF THE DISC MOTOR:

- (1) Refer to Fig. 2.12.
- (2) When re-assembling the Disc Motor, adjust the height of the turntable using the Turntable Adjustment Gauge (0C82258A).


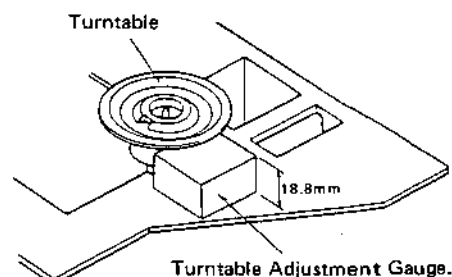


Fig. 2.12

3. ADJUSTMENT PROCEDURES

3.1 Meters and Gauge


- (1) Oscilloscope (15 MHz or more)
- (2) AC Voltmeter
- (3) DC Voltmeter
- (4) Optical Power Meter
- (5) Phillips Test Sample Disc 5/5A
- (6) Sony Test C.D. Type III (YEDS-7)
- (7) Frequency counter
- (8) Distortion Meter
- (9) Turntable Adjustment Gauge (Fig. 3.1)

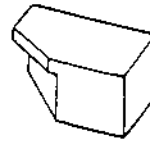

Turntable Adjustment Gauge (0C82258A)

Fig. 3.1

3.2 Parts Location for Adjustment

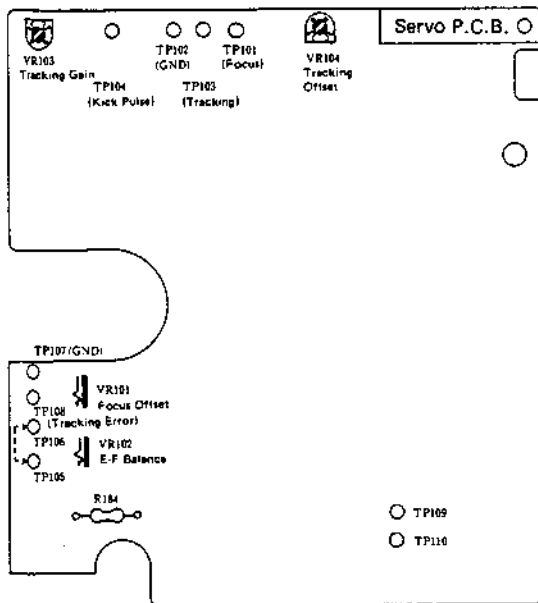

NOTE: The above Semi-fixed VR positions are for initial presetting.

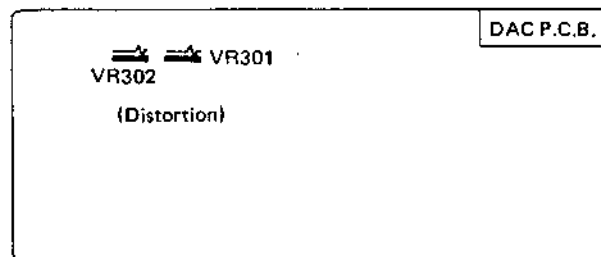
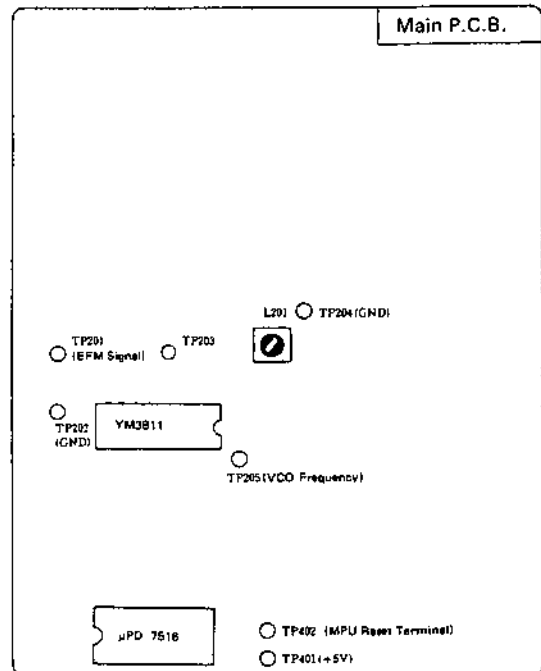


Fig. 3.2

3.3 Laser Pickup Laser Power Check

- (1) Remove the Top Cover Ass'y referred to in item 2.1 on page 4.
- (2) Short-circuit TP105 and TP106 located on the Servo P.C.B. Ass'y.
- (3) Place the optical power meter against the pickup (Fig. 3.3), and check that the laser power is between 0.15mW and 0.4mW.

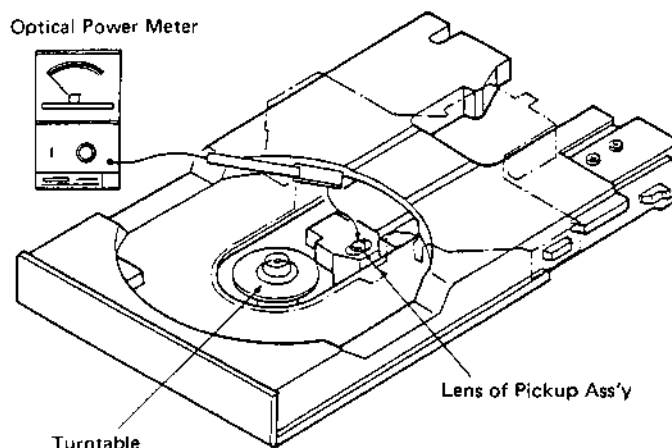


Fig. 3.3

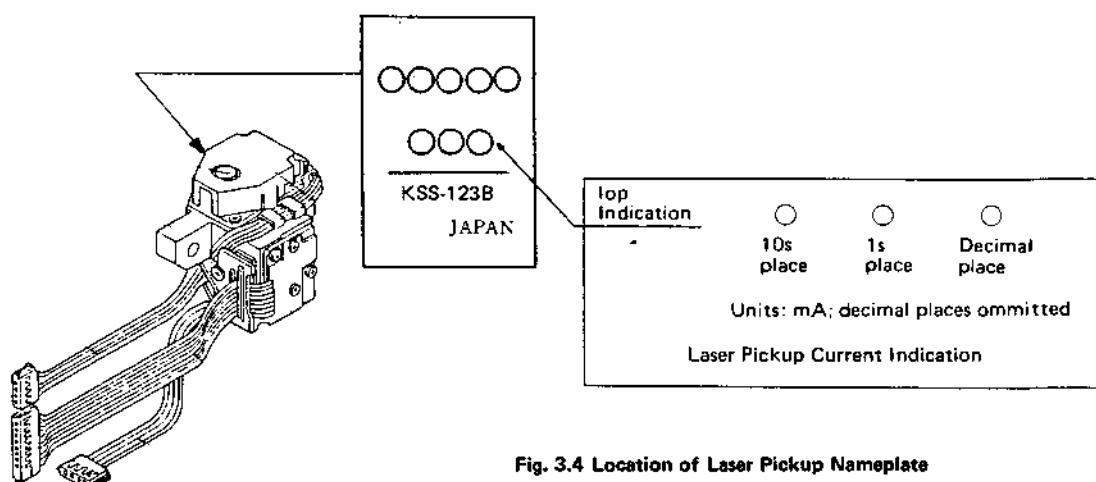


Fig. 3.4 Location of Laser Pickup Nameplate

3.4 Adjustment of VCO on Main P.C.B. Ass'y

3.4.1 VCO Frequency Adjustment (OMS-4 is No signal.)

- (1) Connect the frequency counter to TP205 (VCO Frequency) and TP204 (GND).
- (2) Remove CN-203 connector cord, turn the power switch on, and short-circuit TP201 and TP202.
- (3) Rotate the L201 core and adjust so that the frequency counter shows a value of 4.322MHz.
- (4) After adjusting, turn the power off and connect the CN-203 connector cord.

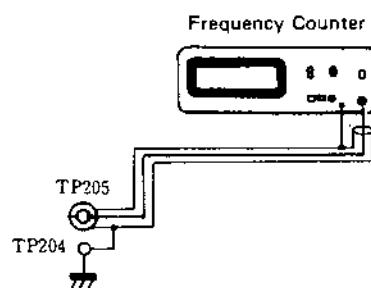


Fig. 3.5

3.5 Adjustment of Servo P.C.B. Ass'y

3-5-1 Setting of initial position of the semi-fixed volume


Before adjusting, preset all semi-fixed volumes are their mechanical center (VR101, 102, 103, 104).

3.5.2 Tracking Offset Adjustment


- (1) Rotate VR103 fully clockwise.
- (2) Short circuit TP105 and TP106, and without inserting a disc adjust VR104 so that the voltage of TP103 (Tracking Coil Output) and TP102 (GND) is $0 \pm 5\text{mV}$.
- (3) Disconnect TP105 and TP106, then preset VR103 to mechanical center.

3.5.3 Focus Offset Adjustment


- (1) Connect a DC voltmeter across R184 (120Ω) on Servo P.C.B. Ass'y.
- (2) Short circuit TP105 and TP106 (Laser Power On) on Servo P.C.B. Ass'y.
- (3) Turn the power switch on, and calculate the current from voltage on both ends of R184, and check that the difference compared to the laser pickup indication (Fig. 3.6) is within $\pm 10\%$ for the negative side. Next turn the power switch off and disconnect the AC voltmeter.
- (4) Turn the power back on, set the Philips Test Sample 5 test disc, and observe the TP201 output waveform (EFM signal).
- (5) Adjust the VR101 so that the EFM signal level becomes high and the waveform becomes distinct, so that the lines are not thick (Fig. 3.6).

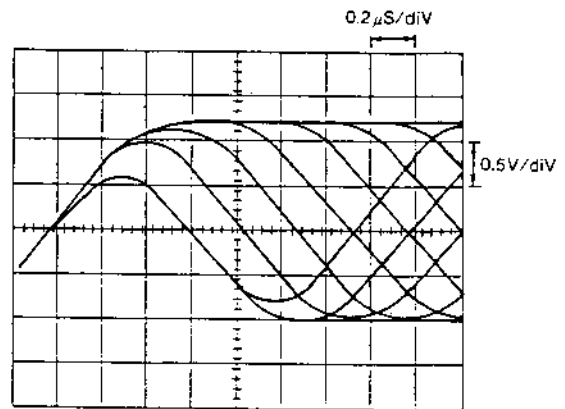

Focus Offset VR (VR101) Adjustment

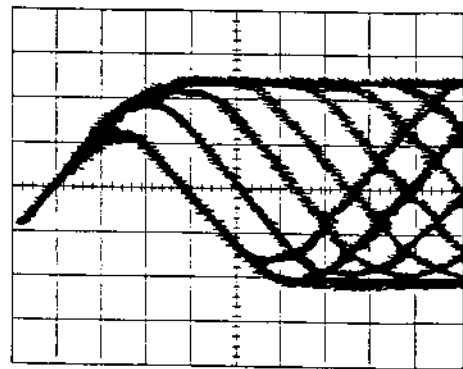

Focus Offset VR (VR101) at Maximum
(Level is high but waveform is unclear)

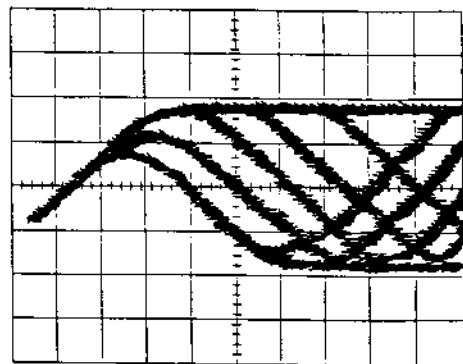

Focus Offset VR (VR101) at Minimum
(Level is low and waveform is unclear)

Fig. 3.6 Focus Offset VR EFM Signal Waveforms

3.5.4 E-F Balance Adjustment (Supplementary Beam Balance Adjustment)

- (1) Turn the power off and use a $10k\Omega$ resistor to short TP105 and TP106.
- (2) Connect the oscilloscope between TP201 (EFM signal) and TP202 (GND), and also between TP108 (Tracking Error) and TP107 (GND).
- (3) Turn the power switch, load the Philips Test Sample 5 test disc and playback from the first selection.
- (4) Connect TP402 (MPU Reset Terminal) and TP401 (+5V) on the Main P.C.B. Ass'y.
(As the microprocessor is in the Reset mode, the LED does not light)
- (5) Rotate VR103 (Tracking) fully clockwise.
 - a) Oscilloscope Ranges
 - b) Voltage Range (AC): CH1 1V
CH2 2V
 - c) (Set trigger on CH2)
 - d) Sweep Range: 1mS
- (6) Observe the tracking error waveforms (Fig. 3.7) and adjust VR102 so that the GND line is positioned at exactly half the waveform P-P value.
- (7) Turn the power switch off, disconnect the oscilloscope, TP401 (+5V) and TP402 (MPU Reset terminal), and set VR103 to the mechanical center.

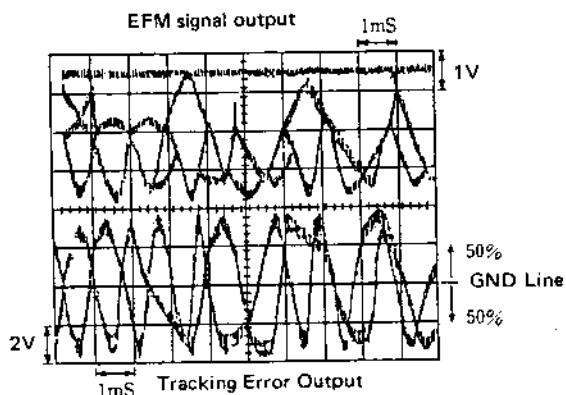


Fig. 3.7

3.6 DISTORTION ADJUSTMENT

(Adjust after the Servo P.C.B. adjustment has been completed) Play the 20th selection on the Sony Type III test disc (1kHz - 60dB). Connect the L.P.F. (20kHz) to the AC voltmeter and the distortion meter. Adjust the VR301/302 so that distortion in the 3% range is as low as possible.

- > Dynamic range is greater than 91 dB.
- < Check to make sure that distortion is below 0.007%.

3.5.5 Tracking Gain Adjustment

- (1) Load the Philips Test Sample 5 test disc (non-scratched), observe the noise voltage on the voltmeter, and adjust VR103 so that the noise voltage on TP103 (Tracking) and TP102 (GND) is $0.26V_{RMS} \pm 0.01V$ (Fig. 3.8).

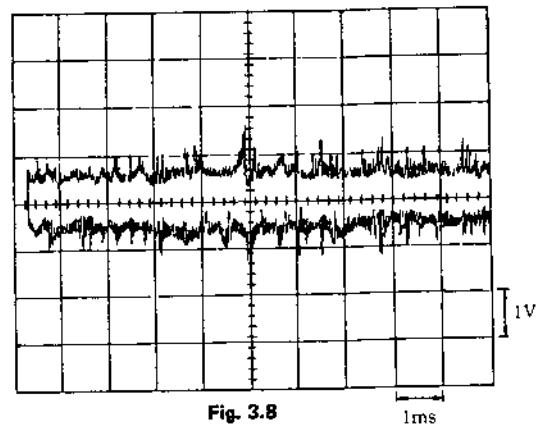


Fig. 3.8

3.5.6 Lens Kick Gain Check

- (1) Connect TP201 (EFM signal) and TP202 (GND) to CH1 on the oscilloscope, and TP104 (lens kick pulse) and TP102 (GND) to CH2.
- (2) Insert the Philips Test Sample 5 test disc and check the size of the TP201 (EFM signal) output waveform (Fig. 3.9).
- (3) Pause at selection 10 on the Philips Test Sample 5 test disc.

Oscilloscope Range:
Voltage Range (AC): CH1 ... 1V
CH2 ... 2V
Sweep Range: 0.2ms

Set a trigger on the leading edge of the TP104 waveform on CH2 (Lens Kick) and observe the TP201 waveform (Fig. 3.10).

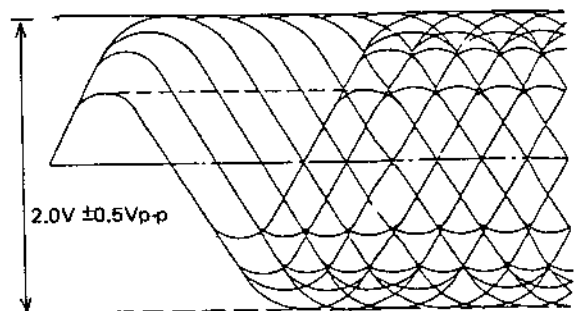


Fig. 3.9 EFM Signal

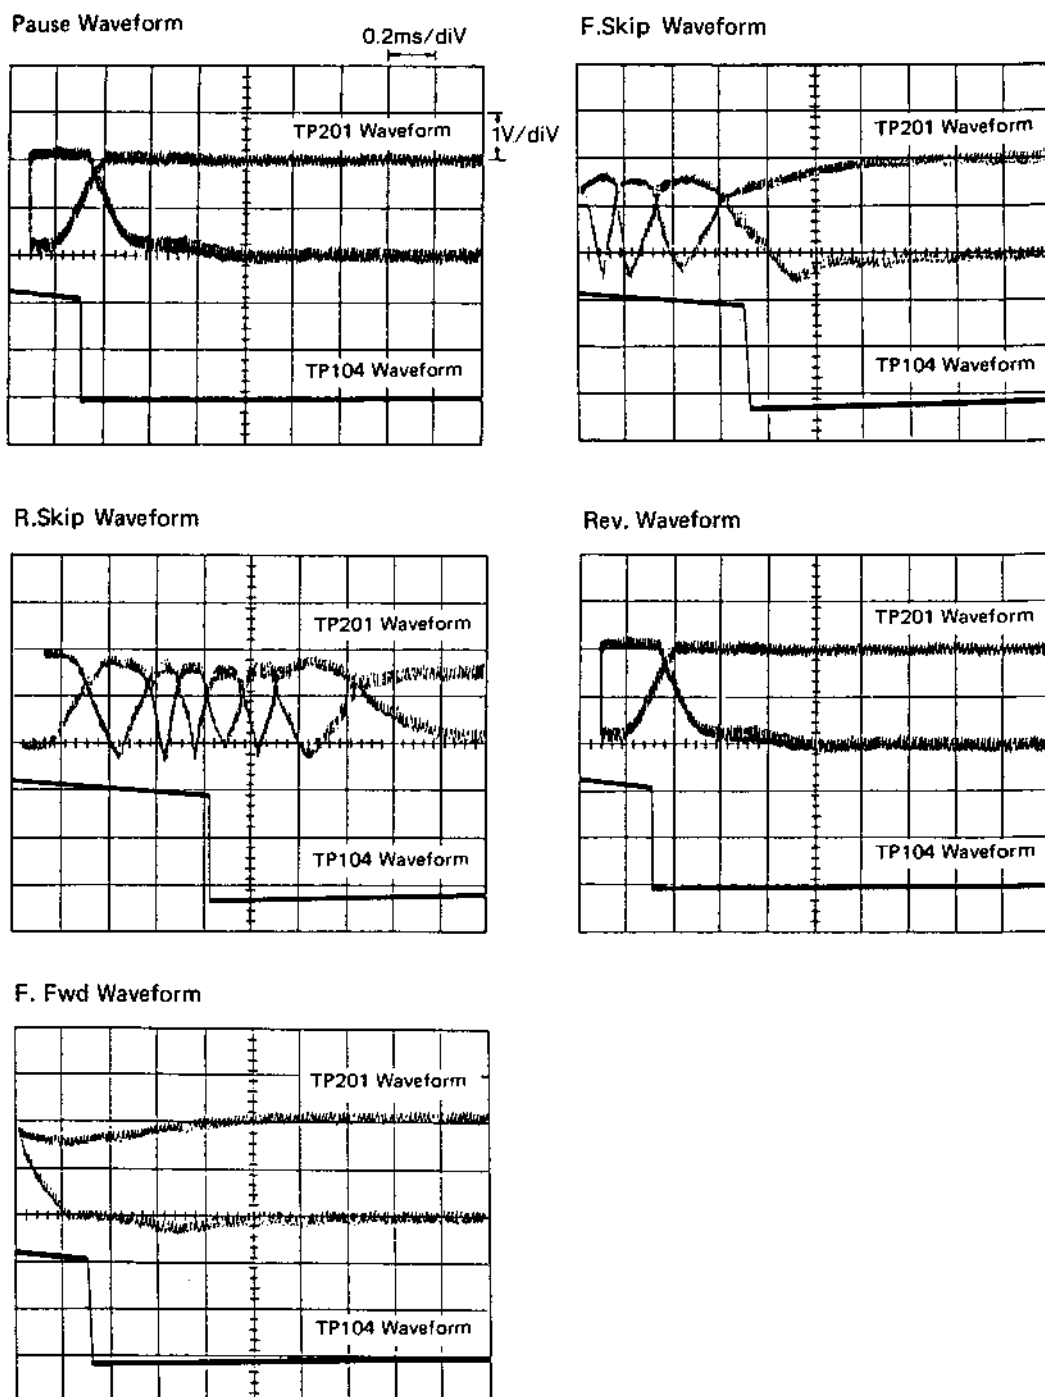


Fig. 3.10 EFM Signal Waveforms Upon Track Jump

3.7 Operation Check


3.7.1 Playability

Use the Philips Test 5A (scratched) test disc, play the following portions and make sure no tracks are jumped.

- (1) Wedge (Interruption)
Selection 6 0'00" – 0'30"
- (2) Black Spot (Black Dot)
Selection 12 1'10" – Selection 13 0'30"
- (3) Fingerprint
Selection 19 0'00" – 0'30"


4. MECHANISM ASS'Y AND PARTS LIST

4.1. Synthesis

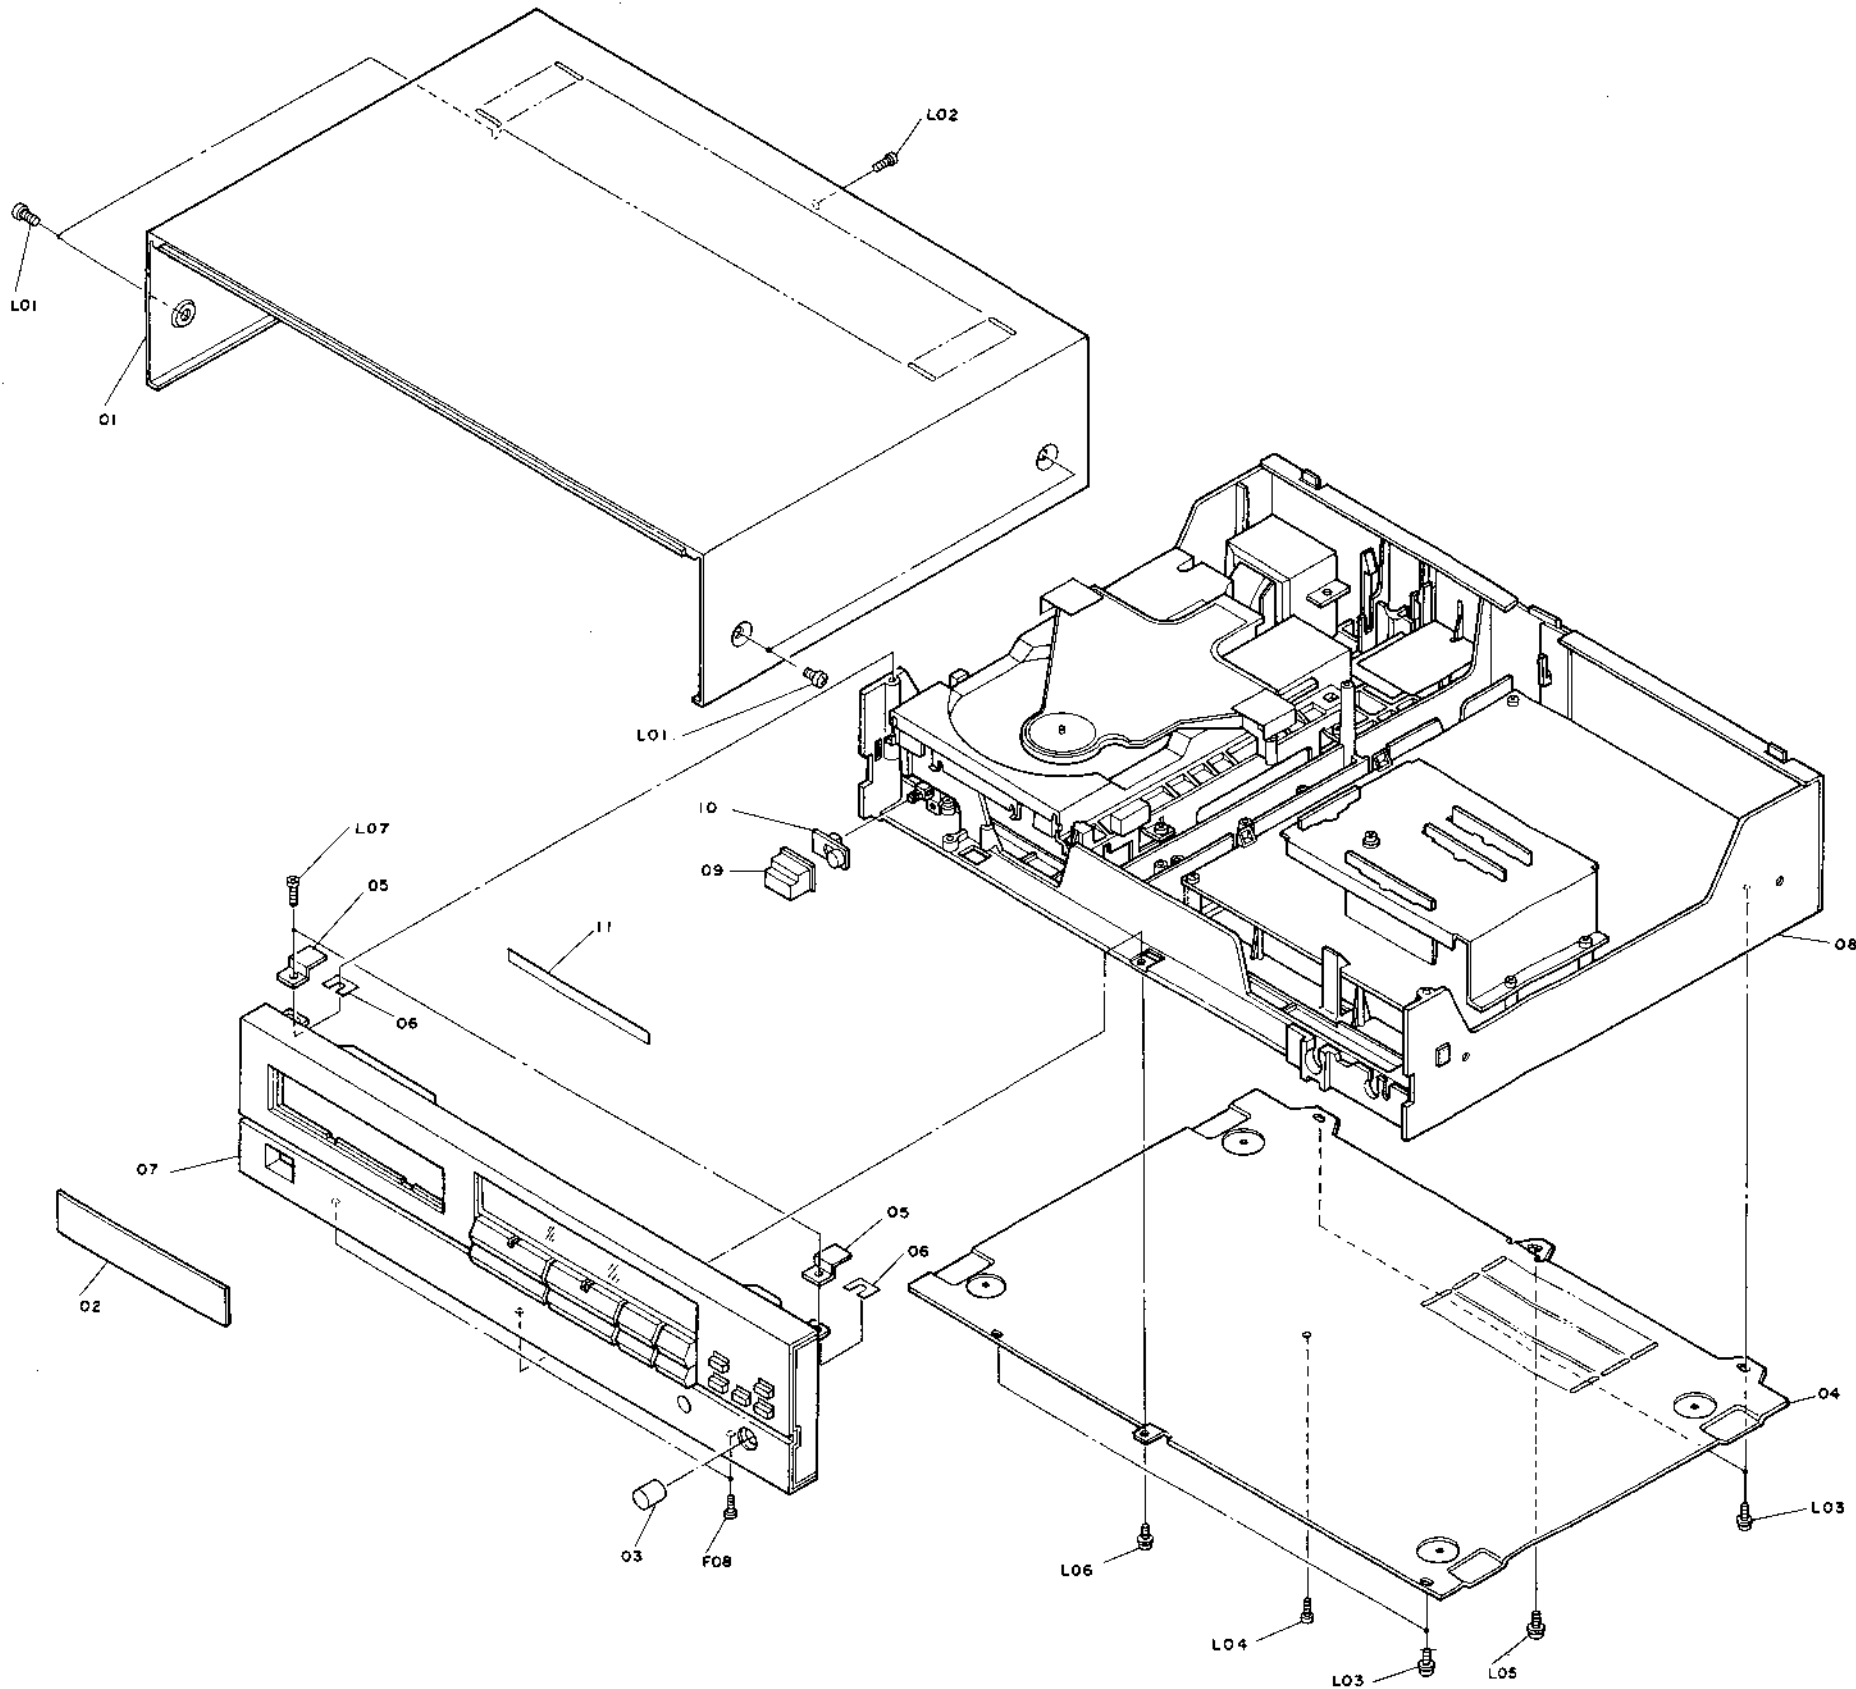


Schematic Ref. No.	Part No.	Description	Q'ty
		Synthesis	
01	CA80511A (0C81483A) (0C81582A) (0C81598A) (0C81652A) (0C82350A) (0C82352A) (0M04377B)	Top Cover Ass'y Top Cover Vibration Isolating Sheet A Top Cover Cushion Cushion Vibration Isolating Sheet B Rubber Cushion Caution Label	1 (1) (1) (2) (1) (2) (1) (1)
02	0C81603A	Disc Tray Cover	1
03	CA80396A	Volume Knob Ass'y	1
04	CA80512A (0C81561A) (0C81479A) (0M04377B) (0M04810A)	Bottom Cover Ass'y Bottom Cover Leg Caution Label Shipping Screw Caution Label	1 (1) (4) (1) (1)
05	0C82351A	Top Cover Support	2
06	0C81651A	Front Panel Spacer	2
07	CA80518A CA80430A CA80510A CA80509A	Front Panel Ass'y (OMS-4) Front Panel Ass'y (OMS-4A) Front Panel Ass'y (OMS-4E) Front Panel Ass'y (OMS-4O)	1 1 1 1
08	CA80524A CA80525A CA80526A CA80527A CA80528A CA80529A	Chassis Ass'y (OMS-4A) Chassis Ass'y (OMS-4E) Chassis Ass'y (OMS-4O) Chassis Ass'y (OMS-4(Canada)) Chassis Ass'y (OMS-4(Australia)) Chassis Ass'y (OMS-4(Other))	1 1 1 1 1 1
09	0C81515A	Power Switch Knob	1
10	0C81605A	Power Switch Joint	1
11	0C81594A	Adhesive Tape 3×30	1
—	0M04813A	UL Approval Label	1
—	0M05608A	Manufacturing Periodic Seal	1
—	0M04113A	LA Approval Label	1
—	—	CSA Approval Label	1
—	0M04434B	EP Approval Label	1
—	0M04814A	Pass Label	1
—	0M04815A	Serial Number Seal	1
L01	0C81642A	BT4×12@Flanged with washer (Black zinc)	4
L02	0C81623A	BT3×18@Pan Projected (Black)	1
L03	0E03368A	BT3×12@Binding with washer	4
L04	0E00888A	BT3×12@Binding	1
L05	0E03391A	BT3×8@Binding Projected	1
L06	0E03365A	BT3×8@Binding Projected (Black Chromate)	1
L07	0E03399A	BT3×12@Countersunk	2
L08	0E00921A	BT3×8@Binding (Black Chromate)	2

4.2. Chassis Ass'y

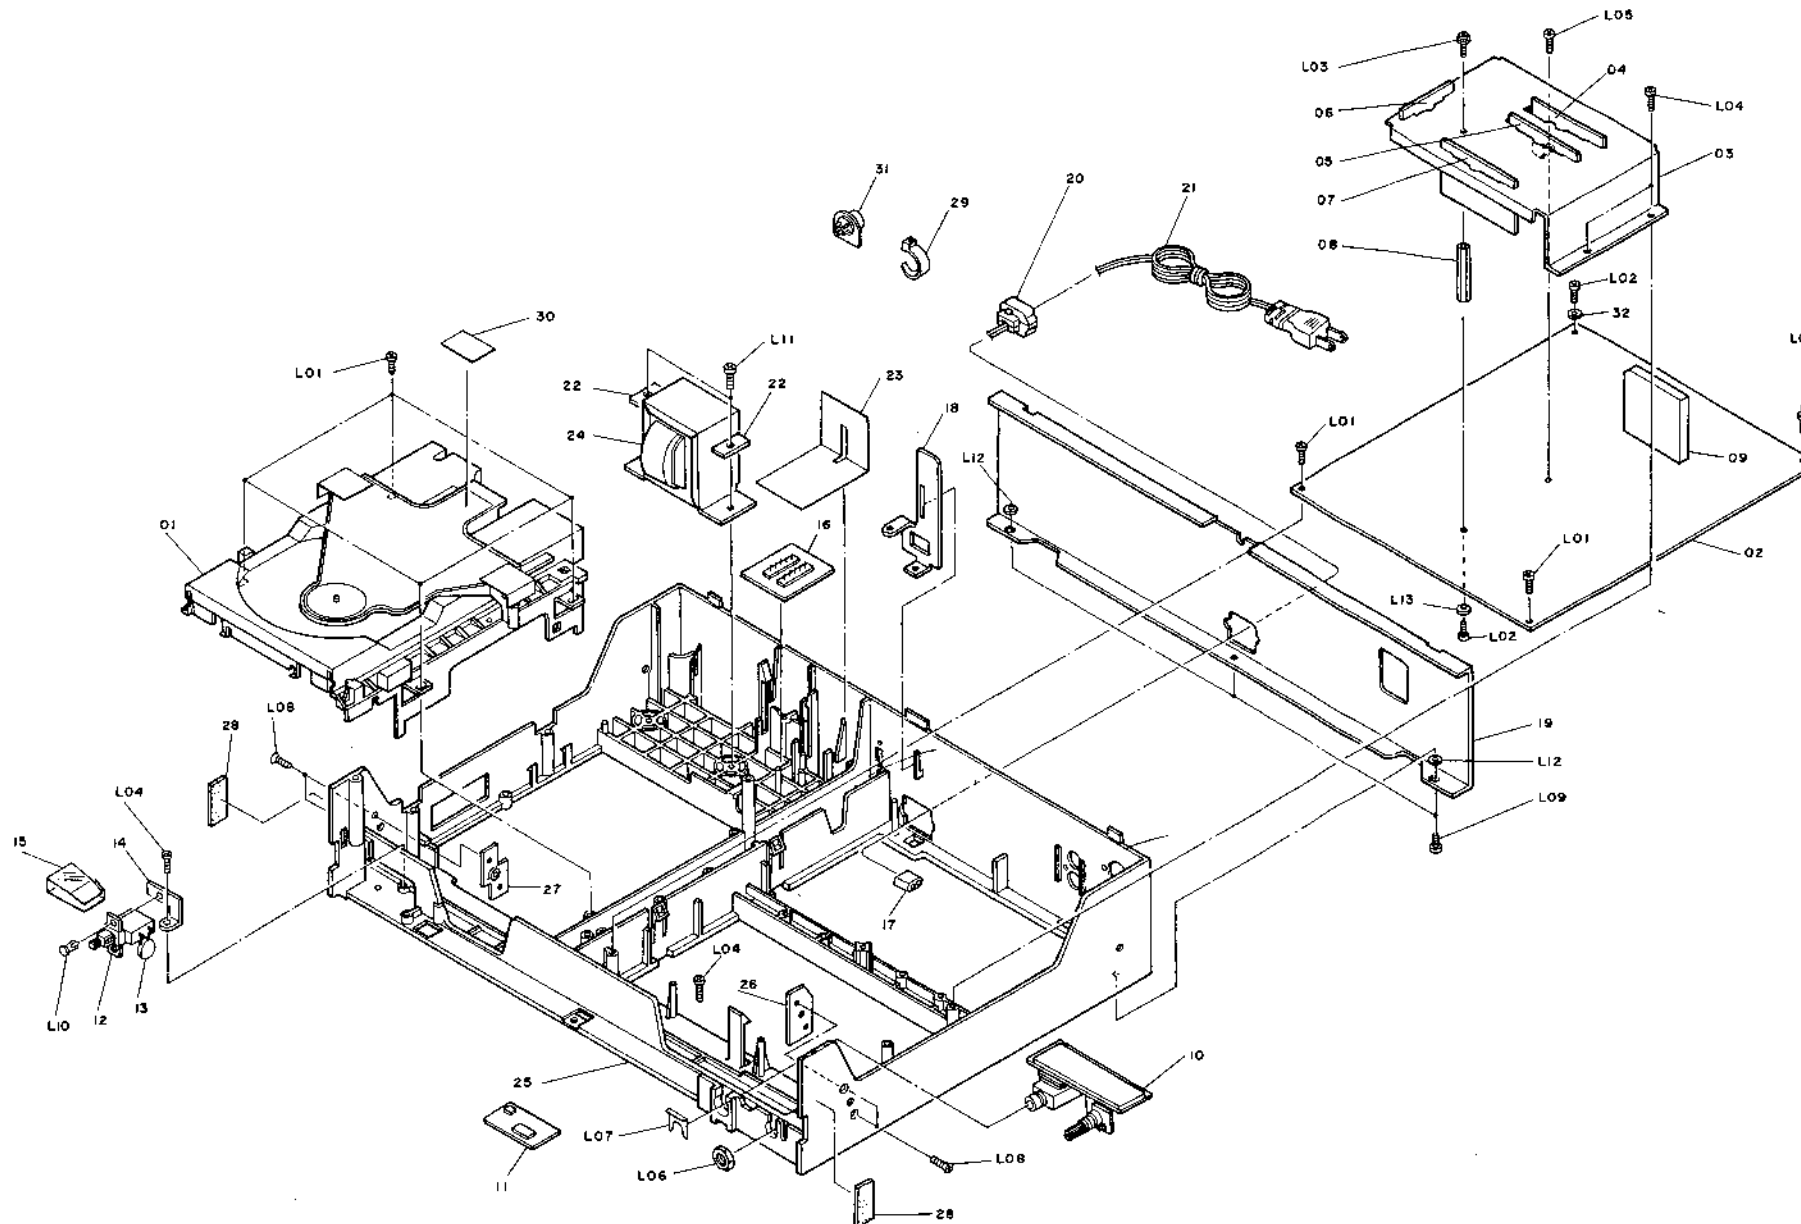


Schematic Ref. No.	Part No.	Description	Q'ty
	CA80524A	Chassis Ass'y (OMS-4A)	
	CA80525A	Chassis Ass'y (OMS-4E)	
	CA80526A	Chassis Ass'y (OMS-40)	
	CA80527A	Chassis Ass'y (OMS-4(Canada))	
	CA80528A	Chassis Ass'y (OMS-4(Australia))	
	CA80529A	Chassis Ass'y (OMS-4(Other))	
01	CA80436A	Disc Mechanism Ass'y	1
02	CA80409A	Main P. C. B. Ass'y	1
03	OC81570A	P. C. B. Holder	1
04	CA80413A	DAC P. C. B. Ass'y	1
05	CA80412A	DF/F P. C. B. Ass'y	1
06	CA80407A	RAM P. C. B. Ass'y	1
07	CA80406A	Signal Process P. C. B. Ass'y	1
08	OC81581A	Stud 50mm	1
09	CA80415A	Analog Filter P. C. B. Ass'y	1
10	CA80410A	Headphone Amp. P. C. B. Ass'y	1
11	CA80514A	Search P. C. B. Ass'y	1
12	OC81890A	Power Switch	1
13	OC82353A	CC 4700pf 400V (M)	1
14	OC81539A	Power Switch Holder	1
15	OC81800A	Power Switch Insulator (OMS-4E)	1
16	CA80416A	Terminal P. C. B. Ass'y	1
17	OC81880A	Ferrite Core	1
18	OC81560A	Bushing Holder	1
19	OC81572A	Rear Panel (OMS-4)	1
	OC81562A	Rear Panel (OMS-4A)	1
	OC81573A	Rear Panel (OMS-4E)	1
	OC81575A	Rear Panel (OMS-40)	1
	OC81574A	Rear Panel (OMS-4(Other))	1
20	OC81472A	Cord Bushing	1
21	OC82300A	Power Cord (OMS-4A & OMS-4(Canada))	1
	OC82303A	Power Cord (OMS-4E)	1
	OC82301A	Power Cord (OMS-40)	1
	OC82356A	Power Cord (OMS-4(Australia))	1
	OC82302A	Power Cord (OMS-4(Other))	1
22	OC81655A	Transformer Reinforce Plate	2
23	OC81983A	Terminal P. C. B. Insulator (OMS-4A & OMS-4(Canada))	1
24	OC81879A	Power Transformer (OMS-4A & OMS-4(Canada))	1
	OC82298A	Power Transformer (OMS-4E)	1
	OC82297A	Power Transformer (OMS-40)	1
	OC82299A	Power Transformer (OMS-4(Other))	1
25	OC81482A	Chassis	1
26	OC81564A	Top Cover Holder R	1
27	OC81563A	Top Cover Holder L	1
28	OC82385A	Cushion	2
29	OC81471A	Insu-Lock L=94mm	5
30	OM04611A	US Laser Caution Label (OMS-4A)	1
31	OC82356A	Voltage Selector (OMS-4(Other))	1
32	OC81519A	Ground Plate	1
	OC81922A	4P Connector Cord	1
	CA80425A	Chassis Wire Ass'y	1
L01	OE03157A	BT3×8@Binding with Washer	7
L02	OE03391A	BT3×8@Binding Projected	2
L03	OE03415A	M3×8@Pan(3A)	1
L04	OE00868A	BT3×8@Binding	4
L05	OE00888A	BT3×12@Binding	1
L06	—	Volume Nut	1
L07	—	Snap Plate	1
L08	OC82418A	M3×8@Countersunk	4
L09	OE00921A	BT3×8@Binding (Black Chromate)	2
L10	OC81625A	Plastic Rivet	1
L11	OE00924A	BT4×16@Binding	2
L12	OC81630A	Washer 3mm Fiber	3
L13	OC81624A	Washer 3.2×8×0.5	1


4.3. Front Panel Ass'y

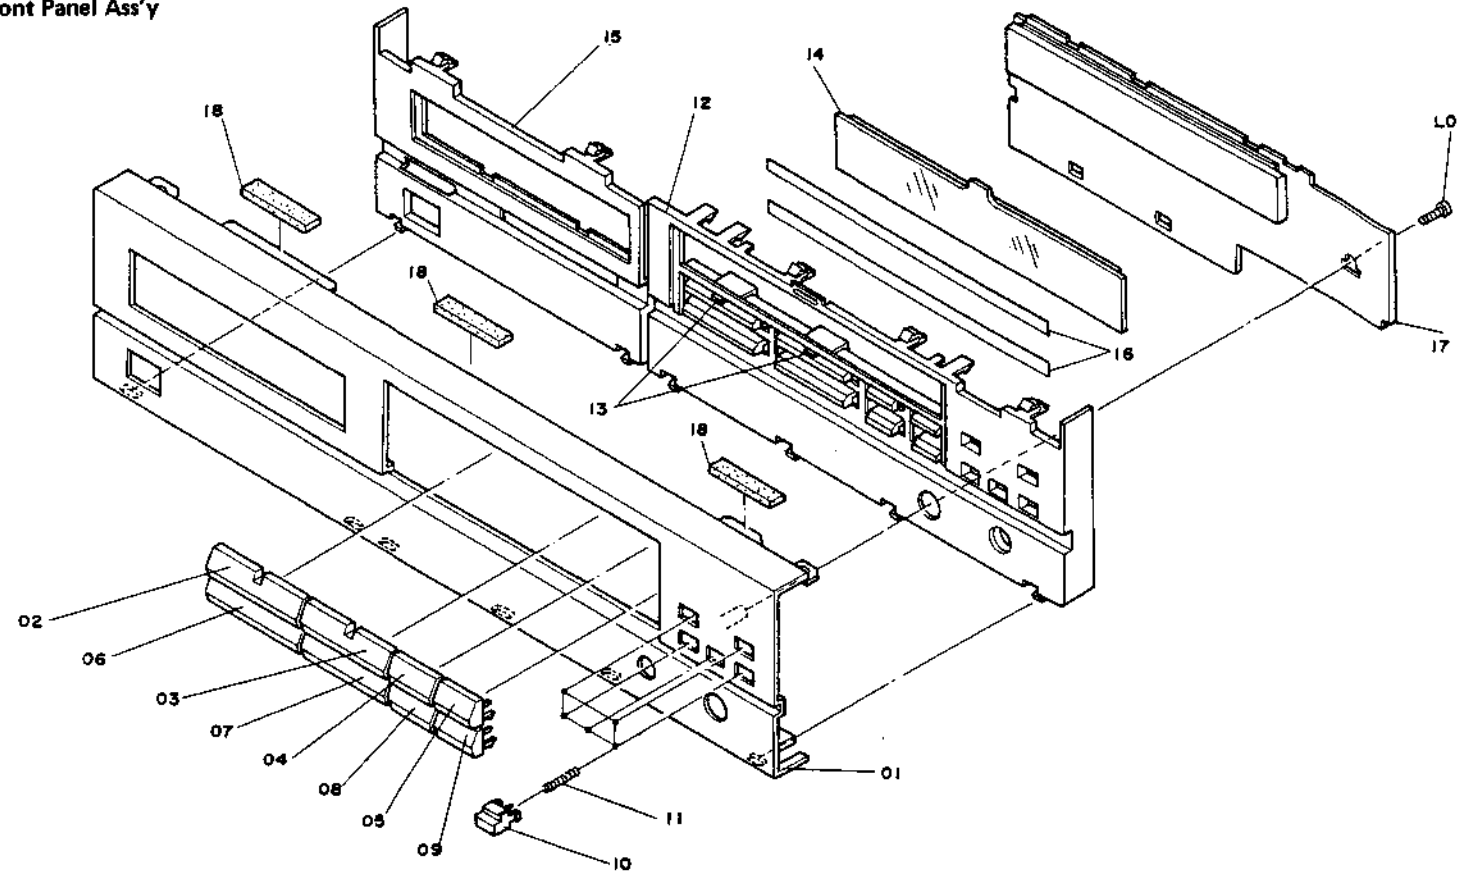

4.4. Top Cover Ass'y

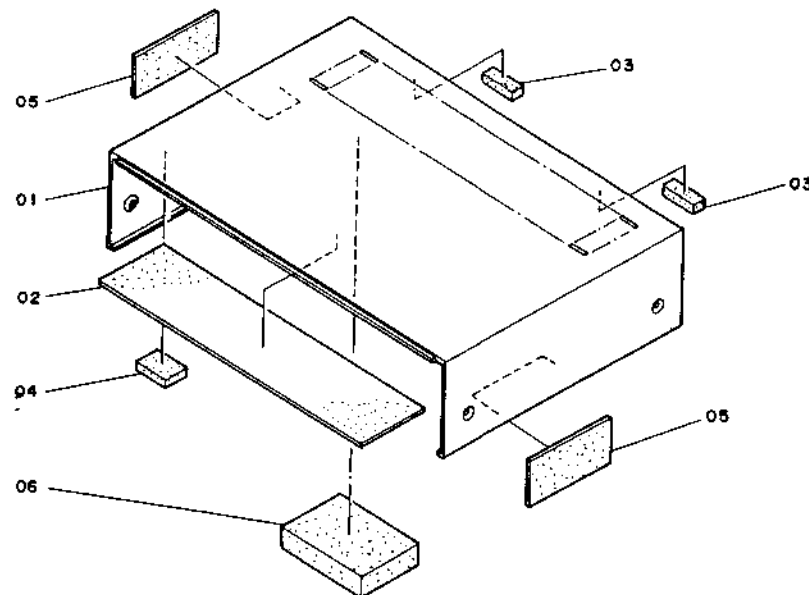


4.5. Bottom Cover Ass'y

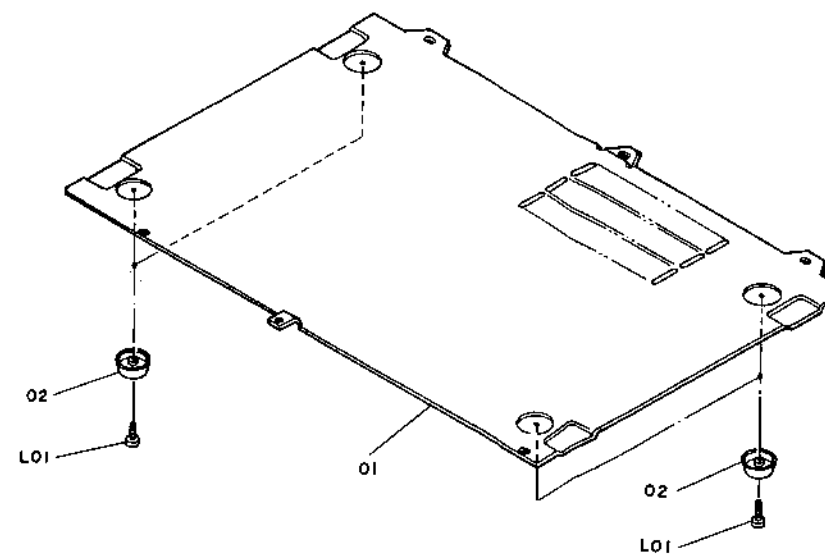


Schematic Ref. No.	Part. No.	Description	Q'ty
01	CA80518A	Front Panel Ass'y (OMS-4)	1
	CA80430A	Front Panel Ass'y (OMS-4A)	1
	CA80510A	Front Panel Ass'y (OMS-4E)	1
	CA80509A	Front Panel Ass'y (OMS-40)	1
	0C81650A	Front Panel (OMS-4)	1
	0C81601A	Front Panel (OMS-4A)	1
	0C81606A	Front Panel (OMS-4E)	1
	0C81607A	Front Panel (OMS-40)	1
	0C81506A	Play Button	1
	0C81507A	Pause Button	1
	0C81510A	R. Skip Button	1
	0C81511A	F. Skip Button	1
	0C81508A	Eject Button	1
	0C81509A	Stop Button	1
	0C81512A	Rev. Button	1
	0C81513A	F. Fwd. Button	1
	0C81514A	Push Button	5
	0C81567A	Button Spring	5
L01	0C81502A	Front Escutcheon R	1
	0C81503A	LED Filter	2
	0C81602A	Acrylic Cover	1
	0C81504A	Front Escutcheon L	1
	0C82354A	Adhesive Tape	2
	CA80414A	Control & Display P.C.B. Ass'y	1
	0C81597A	Top Cover Cushion F	3
	0C82388A	Spacer A	1
	0C82389A	Spacer B	1
	0C82390A	Spacer C	1
	0C82391A	Spacer D	1
	0E00888A	BT3 x 8 Binding	1
01	CA80511A	Top Cover Ass'y	1
	0C81483A	Top Cover	1
	0C81582A	BS Damper A	1
	0C81598A	Top Cover Cushion R	2
	0C81652A	Cushion	1
	0C82350A	BS Damper B	2
01	0C82352A	Rubber Cushion	1
	0C81561A	Bottom Cover	1
	0C81479A	Leg	4
	0E00888A	BT3 x 12 Binding	4

4.6. Disc Mechanism Ass'y

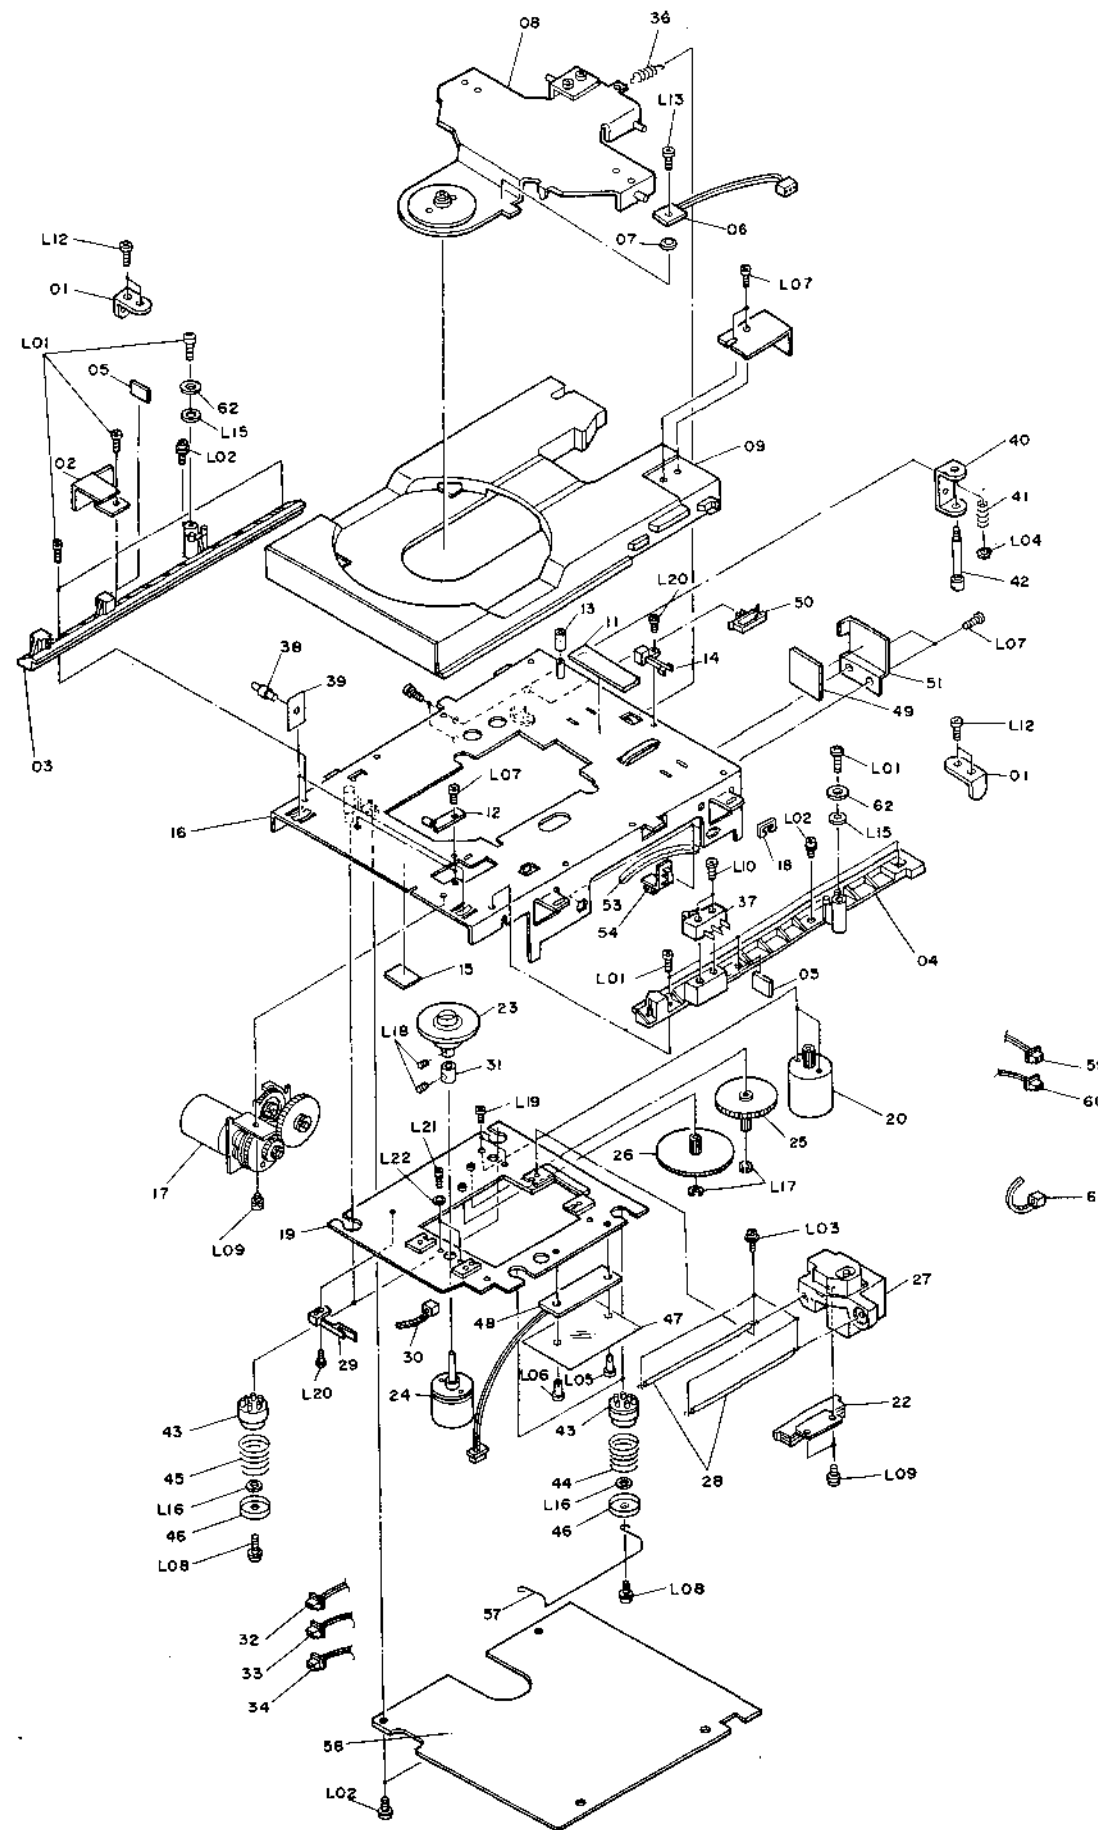


Schematic Ref. No.	Part No.	Description	Q'ty
	CA80436A	Disc Mechanism Ass'y	
01	0C81560A	Chuck Arm Plate	1
02	0C82346A	Disc Tray Guide Plate	1
03	0C81493A	Disc Drawer Guide L	1
04	0C81494A	Disc Drawer Guide R	1
05	0C81568A	Stopper Rubber	2
06	CA80422A	Photo Transistor P. C. B. Ass'y	1
07	0C82349A	Collar	1
08	CA80428A	Chuck Arm Ass'y	1
09	CA80395A	Disc Tray Ass'y	1
10	0C82348A	Disc Tray Plate	1
11	0C81591A	Chuck Cushion	1
12	0C81542A	Disc Support Stopper	2
13	0C81585A	Stopper Cushion	1
14	0C81887A	Leaf Switch MSW1275	1
16	0C81592A	Vibration Isolating Sheet	1
18	CA80399A	Disc Mechanism Chassis Ass'y	1
17	CA80393A	Loading Gear Ass'y	1
18	0C81474A	Wire Clamp	2
19	CA80401A	Sub Chassis B Ass'y	1
20	CA80521A	Feed Motor Ass'y	1
22	CA80391A	Feed Rack Ass'y	1
23	CA80400A	Turntable B Ass'y	1
24	0C81938A	Disc Motor RF-310	1
25	0C81497A	Feed Gear A	1
26	0C81498A	Feed Gear B	1
27	0C81938A	Laser Pickup Ass'y KSS-121B	1
28	0C81535A	Pickup Rail	2
29	0C81888A	Leaf Switch	1
30	0C81660A	Wire Clamp	1
31	0C81558A	Collar	1
32	0C81912A	2P Connector N	1
33	0C81921A	2P Connector Q	1
34	0C81913A	2P Connector E	1
36	0C81557A	Chuck Arm Spring	1
37	0C81886A	Microswitch SS-5GL13	1
38	CA80392A	Roller Ass'y	4
39	0C81543A	Roller Stopper	2
40	0C81544A	Shipping Screw Holder	1
41	0C81538A	Shipping Screw Spring	1
42	0C81545A	Shipping Screw	1
43	0C81536A	Cushion	4
44	0C81538A	Cushion Spring A	4
45	0C81540A	Cushion Spring B	1
46	0C81537A	Cushion Holder	4
47	0C81585A	Insulator	1
48	CA80515A	Photo Diode P. C. B. Ass'y	1
49	0C81588A	Magnet Rubber	1
50	0C82413A	Wire Clamp	1
51	0C82414A	Disc Tray Lock Plate	1
53	0C81475A	Free Bushing 100mm	1
54	0C81473A	P. C. B. Support	2
57	0C81559A	Guide Spring	1
58	CA80405A	Servo P. C. B. Ass'y	1
59	0C81914A	2P Connector G	1
60	0C81915A	2P Connector H	1
61	0C81471A	Insu-Lock L=94mm	6
62	0C82387A	Collar	2
L01	0E00868A	BT3×8@Binding	8
L02	0E03157A	BT3×8@Binding With Washer	4
L03	0C81948A	BT2.6×8@Binding With Washer	6
L04	0E00134A	E-Ring 4mm	1
L05	0C81662A	Plastic Rivet	1
L06	0C81656A	Plastic Rivet 3×8	1
L07	0E03393A	ST2.6×8@Binding	4
L08	0E03418A	M2.6×5@Pan (2A)	6
L09	0C81622A	M2.6×4@Pan (2A)	2
L10	0C81945A	M2×12@Pan	2
L11	0C81624A	Washer	2
L12	0E00792A	BT2.6×6 Pan	6
L13	0E00121A	M2.6×6@Pan	1
L14	0C81948A	Washer 3mm Spring	1
L15	0C82386A	Washer 6×11×1.0(Rubber)	2
L16	0E00071A	Washer 3mm Fiber	4
L17	0C81629A	Washer Plastics2.6×4.6×0.5(Cut)	2
L18	0C81639A	M2×3 Hex Socket Head	2
L19	0C81640A	M2×11.5(4)Cylinder Head	2
L20	0C81940A	M2×6@Pan	2
L21	0C81944A	BT2×5@Pan	2
L22	0C81947A	Washer 2mm Spring	2

4.7. Loading Gear Ass'y

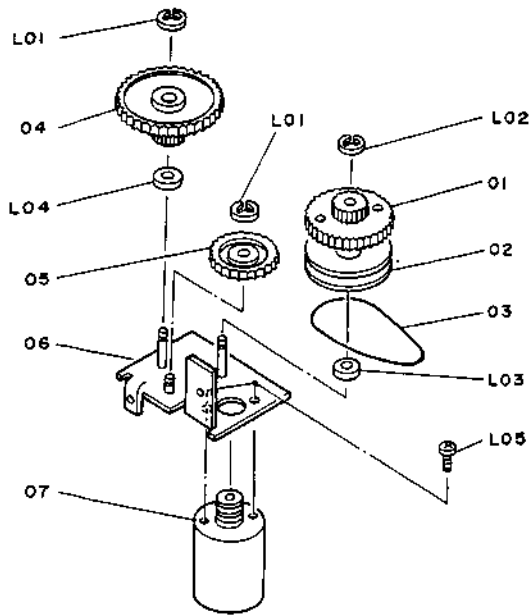

4.8. Chuck Arm Ass'y

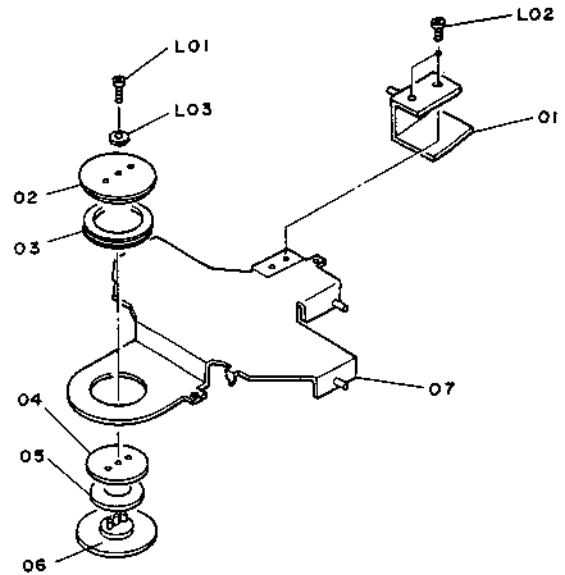

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
	CA80428A	Loading Gear Ass'y		04	0C81534A	Chuck Yoke	1
01	0C81491A	Loading Gear A	1	05	0C81481A	Ring Magnet B	1
02	0C81477A	Loading Pulley	1	06	0C81501A	Magnet Holder B	1
03	0C81478A	Loading Belt	1	07	CA80403A	Chuck Arm Base Ass'y	1
04	0C81484A	Loading Gear B	1	L01	0E03124A	BT2×5⌀ Pan	1
05	0C81485A	Loading Gear C	1	L02	0E03393A	ST2.6×8⌀ Binding	2
06	CA80397A	Loading Gear Holder Ass'y	1	L03	0C81946A	Washer 2.2×5×0.3	1
07	CA80623A	Loading Motor Ass'y	1				
L01	0E00181A	E-Ring 3mm	2				
L02	0C81638A	Washer Plastics 4.1×6.5×0.5(Cut)	1				
L03	0E03393A	Washer FT 6.2×0.13	1				
L04	0C82342A	Washer Plastics 4.1×7×0.5	1				
L05	0E00622A	M3×5⌀ Pan(2A)	2				
	CA80428A	Chuck Arm Ass'y					
01	CA80402A	Chuck Base Ass'y	1				
02	0C81496A	Chuck B	1				
03	0C81590A	Chuck Rubber	1				


5. MOUNTING DIAGRAMS AND PARTS LIST

5.1. Main P.C.B. Ass'y

Notes:


1. Mounting diagram shows a dip side view of the printed circuit board.
2. Diode is 1S2473 unless otherwise specified.
3. Abbreviation for part name:

TR — Transistor, SiD — Silicon Diode, Varicap — Variable Capacitance Diode
RK — Carbon Resistor, RM — Metal Film Resistor, RF — Fail Safe Type Resistor
CE — Electrolytic Capacitor, CM — Mylar Capacitor, CC — Ceramic Capacitor,
CT — Tantalum Capacitor, C — Mica Capacitor
CF — Film Capacitor
CSP — Polystyrene Capacitor
CMM — Metallized Mylar Capacitor

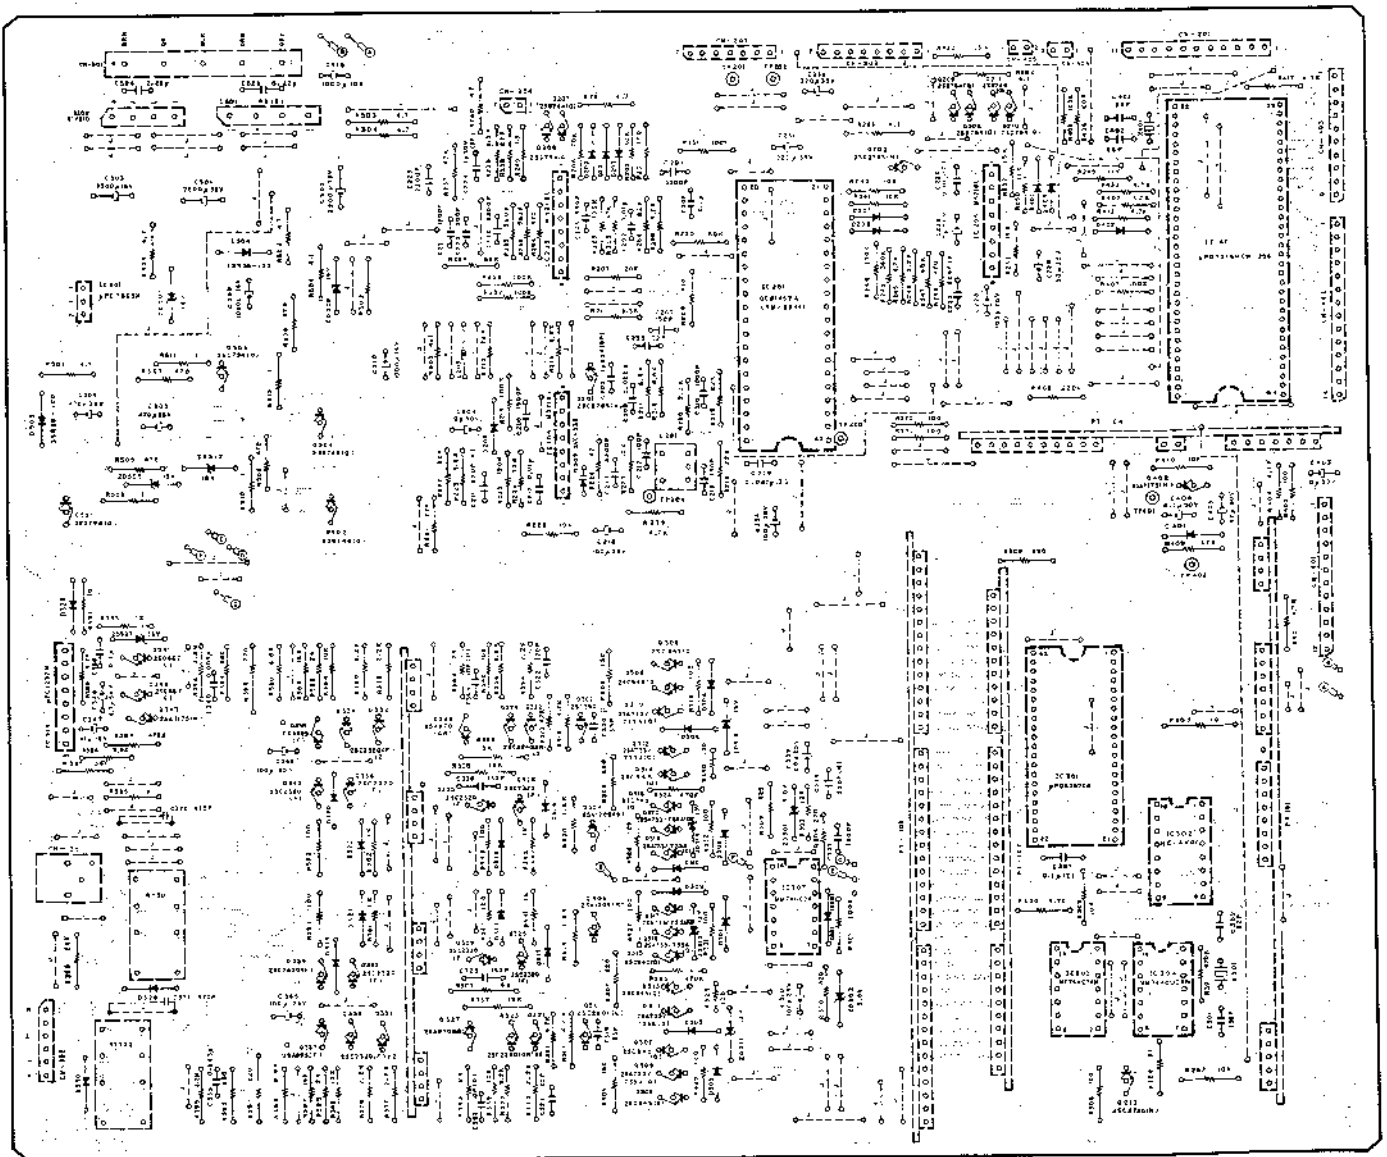

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	CA80408A	Main P. C. B. Ass'y						
IC201	OC81457A	IC YM-3811	R201, 320	OB01679A	RK 100 1/4W J	R393, 394	OB05794A	RK 680 1/4W J
IC204, 205	OC81895A	IC M521BL	325, 328			R395, 398	OB05871A	RK 2.2M 1/4W J
206			327, 328			R397, 398	OB20397A	RK 220 1/2W F
IC301	OC81710A	IC μ PD6352CA	330, 331			R399, 387	OB05508A	RK 56K 1/4W J
IC302	OC81708A	IC HE-AV01	332, 347			R408	OB05625A	RK 220K 1/4W J
IC303	OC81706A	IC MM74HC74N	348, 391			R432	OB05698A	RK 1.5K 1/4W J
IC304	OC82288A	IC MM74HCL104N	392, 308			R501, 504	OB09321A	RF 4.7 1/4W J
IC307	OC81707A	IC MM74HC04N	403	OB01888A	RK 10K 1/4W J	R505, 508	OC81715A	RF 470 1/4W J
IC314	OC81899A	IC UPC1237H	R202, 227			507, 508		
IC401	OC81705A	IC μ PD7516HCW-256	228, 241			R509, 510	OB05695A	RK 1 1/4W J
Q201, 202	OC81867A	S-TR 2SC2785	242, 257			511, 512		
Q206, 208	OC81876A	S-TR 2SD794Q	302, 303			C201, 214	OB01914A	CM 3300PF 50V J
210, 501			339, 340			C202, 212	OB05681A	CM 0.01UF 50V J
503			383, 384			C203	OB41738A	CC 390PF 50V J
Q207, 209	OC81864A	S-TR 2SD744Q	410			C204, 238	OB40289A	CE 10UF 50V
211, 502			R203, 237	OB05641A	RK 47K 1/4W J	403		
504			409			C205, 224	OB09157A	CE 1UF 50V (BP)
Q301, 302	OC81674A	S-TR 2SC2901L	R204	OB05668A	RK 82K 1/4W J	C206, 368	OB01780A	CM 0.1UF 50V J
Q303, 304	OC81670A	S-TR 2SA1208K	R205, 215	OB01889A	RK 100K 1/4W J	C207, 218	OB41743A	CC 150PF 50V J
Q305, 306	OB06251A	S-TR 2SC945Q	231, 232			301		
307, 308			235, 3C1			C208	OB05653A	CM 1500PF 50V J
313, 314			405, 406			C209	OB05582A	CM 0.022UF 50V J
315, 316			407			C210, 303	OB05550A	CF 1000PF 50V J
Q309, 310	OB08013A	S-TR 2SA733	R206, 207	OB09509A	RK 20K 1/4W J	C216, 228	OB01272A	CE 100UF 25V
311, 312			R208, 229	OB01845A	RK 4.7K 1/4W J	229, 234		
317, 318			245, 317			C217	OB41742A	CC 100PF 50V J
319, 320			318, 321			C219	OB09387A	CC 0.047UF 50V Z
Q321, 322	OB10078A	S-TR 2SC2240GR	322, 388			C220, 223	OB01802A	CM 2200PF 50V J
323, 324			3D0, 401			C228	OB09290A	CC 0.01UF 50V Z
Q325, 326	OC80672A	S-TR 2SC2320F	402, 404			C230, 231	OB05831A	CE 220UF 35V
329, 330			412, 417			C239, 302	OB09279A	CC 22PF 50V J
331, 332			433			C304	OB41756A	C 330PF 50V K
333, 334			R209, 248	OB05595A	RK 470 1/4W J	C309, 310	OB40429A	CE 100PF 25V (LN)
335, 336			264			365, 366		
339, 340			R210, 218	OB05815A	RK 22K 1/4W J	C319, 320	OB41758A	C 33PF 100V J
Q327, 328	OB06180A	S-TR 2SA970GR	219, 221			C321, 322	OB41759A	C 120PF 100V J
Q337, 338	OC81869A	S-TR 2SA999F	222, 224			C325, 326	OB51754A	CSP 150P 15V J
Q341, 342	OC81675A	S-TR 2SD667C	238			C339, 340	OB41753A	CSP 3000P 16V J
Q343, 402	OC81868A	S-TR 2SA1175	R211, 223	OB01681A	RK 3.3K 1/4W J	C347	OB01403A	CE 47UF 18V
D201, 202	OB12248A	SI-D 1S2473	239			C348, 404	OB40201A	CE 4.7UF 50V
203, 204			R214, 218	OB01682A	RK 6.8K 1/4W J	C363, 364	OB41757A	C 10PF 100V D
207, 208			217, 389			C367	OB09292A	CC 0.1UF 50V Z
303, 304			390			C370, 371	OB41198A	CSP 470P 180V
307, 308			R220, 246	OB05622A	RK 2.2K 1/4W J	C401, 402	OB41740A	CC 33PF 50V J
309, 310			333, 334			C405	OB40119A	CE 47UF 50V
315, 316			335, 336			C501, 502	OB82358A	CE 2200UF 35V
317, 318			377, 378			C503	OB40235A	CE 3300UF 18V
319, 320			379, 380			C504, 505	OB40107A	CE 470UF 35V LN
321, 322			R225	OB05621A	RK 120K 1/4W J	C509, 510	OC40082A	CE 1000UF 18V
328, 329			R226	OB01705A	RK 47 1/4W J	519		
330, 401			R230	OB05640A	RK 180K 1/4W J	C523, 524	OC82305A	CF 0.22UF 50V J
402, 403			R233, 238	OB05784A	RK 560K 1/4W J			
404			R234, 247	OB05692A	RK 68K 1/4W J			
D209	OC81677A	Varicap SVC333	R243	OB20400A	RK 360K 1/4W J			
D301, 302	OC81687A	ZD RD3.0EB1 (A)	R244	OB05626A	RK 150K 1/4W J			
D305, 306	OB12248A	SI-D 1S2473	R249, 250	OB09334A	RK 11K 1/4W J			
D311, 312	OB12176A	ZD RD13JB1	R251, 252	OB01683A	RK 15K 1/4W J			
313, 314			R260, 261	OB09671A	RK 4.7 1/4W J			
D327	OC81689A	ZD RD13EB1 (A)	262, 263					
D351	OC82294A	SI-D 1SS97	3D3, 3D4					
D501	OB06183A	SI-D RB151	R270, 271	OB01713A	RK 33 1/4W J			
D502	OB06181A	SI-D S1VB10	R301, 323	OB01884A	RK 470K 1/4W J			
D503, 504	OB12365A	SI-D 1SR36-100	324, 384					
D505, 506	OC81690A	ZD RD16EB1 (A)	R304	OB05930A	RF 220 1/4W J			
507, 508			R305, 306	OB05795A	RK 150 1/4W J			
X301	OC81884A	XTAL 8.6436MHz	R307, 308	OB09882A	RK 620 1/4W J			
X401	OC81883A	Ceramic Resonator 4MHz	R309, 310	OB24128A	RF 820 1/4W J			
3B5	OB05778A	RK 1M 1/4W J	R319, 320	OB05814A	RK 1.8K 1/4W J			
3B6	OB05675A	RK 3.9K 1/4W J	R337, 338	OB01683A	RK 15K 1/4W J			
R3C9	OB05930A	RF 220 1/4W J	3C7, 3C8					
R3D1	OB05936A	RF 10 1/4W J	R341, 342	OB01857A	RK 1.0K 1/4W J			
R3D9	OB20403A	RK 51 1/4W J	381, 382					
RY301, 302	OC81889A	Relay RKT-12	383					
			R343, 344	OB20402A	RK 24 1/4W J			
			385, 386					
			R387, 388	OB20399A	RK 16K 1/4W J			

5.2. Servo P.C.B. Ass'y

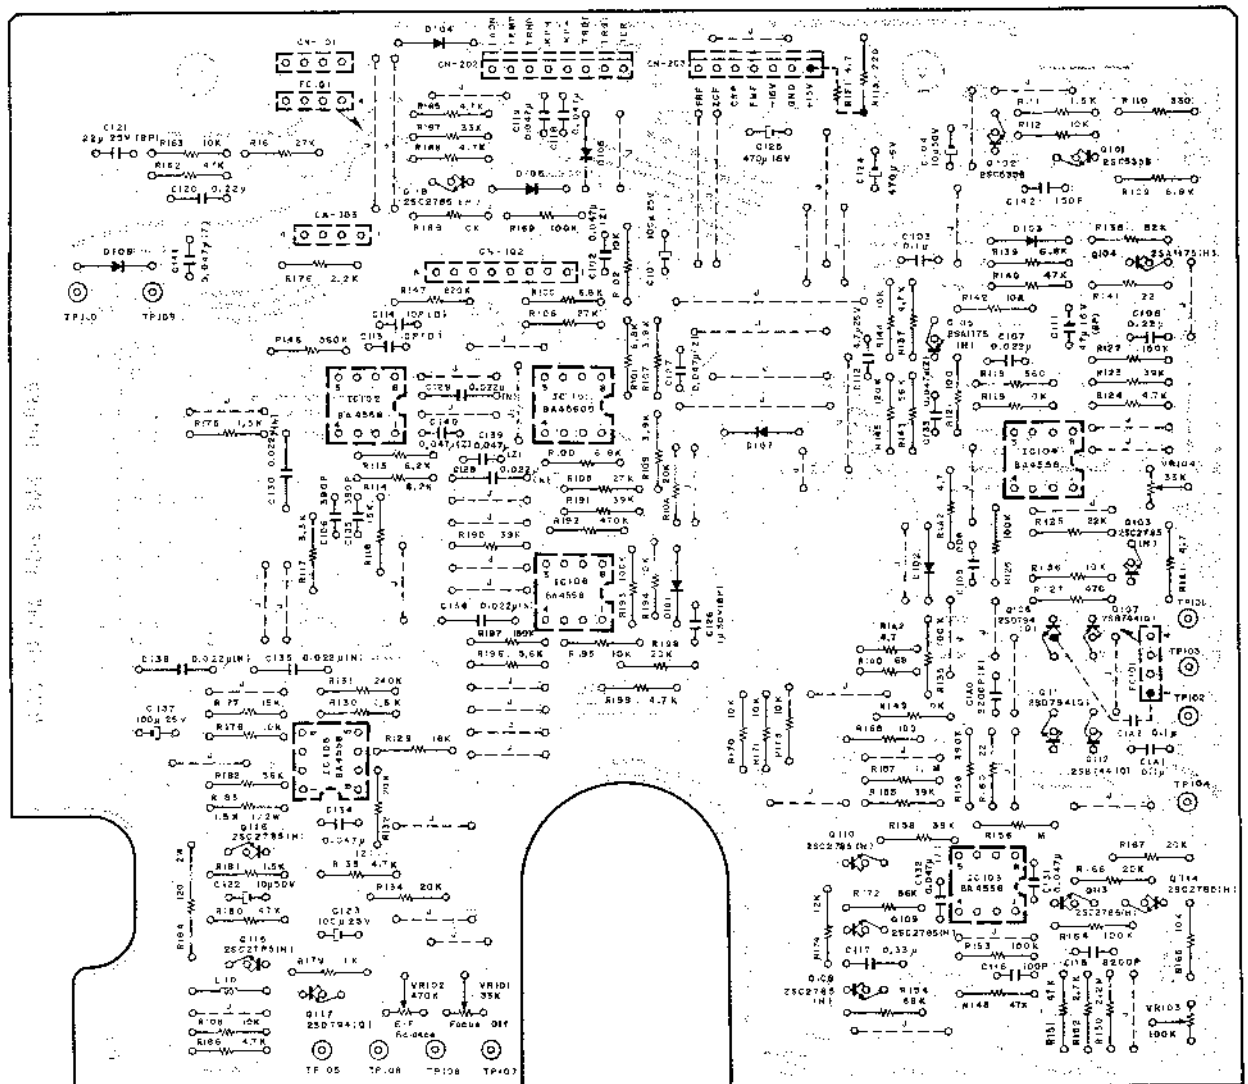


Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	CA80405A	Servo P. C. B. Ass'y			
IC101	OB11277A	IC BA4560-D	R145	OB05621A	RK 120K 1/4W J
IC102, 103	OB11268A	IC BA4568	R147	OB09320A	RK 820K 1/4W J
104, 105			R150	OB05671A	RK 2.2M 1/4W J
106			R152	OB05629A	RK 2.7K 1/4W J
Q101, 102	OC81671A	S TR 2SC535B	R154	OB05692A	RK 68K 1/4W J
Q103, 108	OC81667A	S TR 2SC2785 H	R156	OB05776A	RK 1M 1/4W J
109, 110			R157	OB05681A	RK 1.1M 1/4W J
113, 114			R159	OB05676A	RK 390K 1/4W J
115, 116			R176	OB05622A	RK 2.2K 1/4W J
118			R179	OB01857A	RK 1K 1/4W J
Q104, 105	OC81666A	S TR 2SA1175 H	R183	OB05698A	RK 1.5K 1/4W J
Q106, 111	OC81676A	S TR 2SD794 Q	R184	OC81717A	RM 120 1/4W J
117			R187	OB05609A	RK 33K 1/4W J
Q107, 112	OC81664A	S TR 2SB744 Q	R192	OB01884A	RK 470K 1/4W J
D101, 102	OB12248A	SI-D 1S2473	R196	OB01887A	RK 5.6K 1/4W J
103, 104			C101, 123	OB01272A	CE 100UF 25V
105, 106			1A0		
107, 108A			C102, 131	OB09387A	CC 0.047UF 50V Z
VR101	OC81789A	Semi VR 33K	132, 133		
VR102	OC81790A	Semi VR 470K	134		
VR103	OC81791A	Semi VR 100K	C103, 1A1	OB01780A	CM 0.1UF 50V J
VR104	OC81787A	Semi VR 33K	C104, 122	OB40289A	CE 10UF 50V
W202	OC81919A	8P Connector Cord	C105, 106	OB41738A	CC 390PF 50V J
W203	OC81918A	7P Connector Cord	C107	OB05582A	CM 0.022UF 50V J
R1A1, 1A2	OB09671A	RK 4.7 1/4W J	C113, 114	OB09277A	CC 10PF 50V D
L101	OC81880A	Coil 10uH (K)	C115	OB05814A	CM 8200PF 50V J
R10A, 198	OB09509A	RK 20K 1/4W J	C116	OB41735A	CC 100PF 50V J
1A0	OB01704A	RK 68 1/4W J	C119	OB05796A	CM 0.047UF 50V J
R101, 109	OB01882A	RK 6.8K 1/4W J	C128, 129	OC81836A	CC 0.022UF 16V N
10C, 10D			130, 135		
139			136, 138		
R102, 10B	OB01888A	RK 10K 1/4W J			
112, 119					
R105, 106	OB05743A	RK 27K 1/4W J			
161					
R107, 108	OB05675A	RK 3.9K 1/4W J			
R110	OB05577A	RK 3.30 1/4W J			
R111, 175	OB05698A	RK 1.5K 1/4W J			
181					
R113	OB01833A	RK 220 1/4W J			
R114, 115	OB09271A	RK 8.2K 1/4W J			
R116, 177	OB01883A	RK 15K 1/4W J			
R117	OB01881A	RK 3.3K 1/4W J			
R118, 146	OB05575A	RK 560 1/4W J			
R121	OB01679A	RK 100 1/4W J			
R122, 197	OB05626A	RK 150K 1/4W J			
R123, 155	OB01854A	RK 39K 1/4W J			
158, 190					
191					
R124, 133	OB01846A	RK 4.7K 1/4W J			
137, 185					
186, 188					
199					
R125	OB06615A	RK 22K 1/4W J			
R126, 193	OB01889A	RK 100K 1/4W J			
R127	OB05578A	RK 470 1/4W J			
R129	OB05580A	RK 18K 1/4W J			
R130	OB09565A	RK 1.6K 1/4W J			
R131	OB09483A	RK 240K 1/4W J			
R132, 134	OB09509A	RK 20K 1/4W J			
166, 167					
R135, 153	OB01889A	RK 100K 1/4W J			
164, 168					
169					
R136, 142	OB01888A	RK 10K 1/4W J			
144, 149					
163, 165					
170, 171					
173, 178					
189, 194					
195					
R138	OB05668A	RK 82K 1/4W J			
R140, 148	OB05641A	RK 47K 1/4W J			
151, 162					
180					
R141, 160	OB05579A	RK 22K 1/4W J			
R143, 172	OB05508A	RK 56K 1/4W J			
182					




Schematic Ref. No.	Part No.	Description
	CA80514A	Search P. C. B. Ass'y
IC1001	0C81893A	IC SN74HC00N
Q1001	0C81888A	S-TR 2SA1175 H
D1001	0B12248A	SI-D 1S-2473
R1001	0B01846A	RK 4.7K 1/4W J
R1002	0B01867A	RK 1K 1/4W J
R1003	0B05829A	RK 2.7K 1/4W J
C1001	0B05582A	CM 0.022UF 50V J
C1002	0B09387A	CC 0.047UF 50V Z
C1003	0B05881A	CM 0.010UF 50VJ

Schematic Ref. No.	Part No.	Description
	CA80414A	Control & Display P. C. B. Ass'y
Q801, 803, 804 805, 808 813, 814 815, 818 817	0C81888A	S-TR 2SC2021 R
Q807, 808 809, 810 811, 812	0C82293A	S-TR 2SC1545B
D803, 804 805, 808 807, 808	0B12248A	SI-D 1S2473
R801 R803 R805 R808 R809, 810 811, 812 813, 814 R815, 818 R817, 818 838, 837 838, 839 840	0B01706A 0B05815A 0B09671A 0B05575A 0B01889A	RK 47 1/4W J RK 22K 1/4W J RK 4.7K 1/4W J RK 580 1/4W J RK 100K 1/4W J
R819, 820 821, 822 823, 824 825, 834 R828, 827 828, 829 830, 831 832, 833	0B05795A 0B01857A	RK 150 1/4W J RK 1K 1/4W J
S802, 803 804, 806 808, 807 808, 809 810, 811 812, 813	0B01704A 0B01713A 0C81885A	RK 68 1/4W J RK 33 1/4W J Tact SW

5.5. SIGNAL Process P.C.B. Ass'y

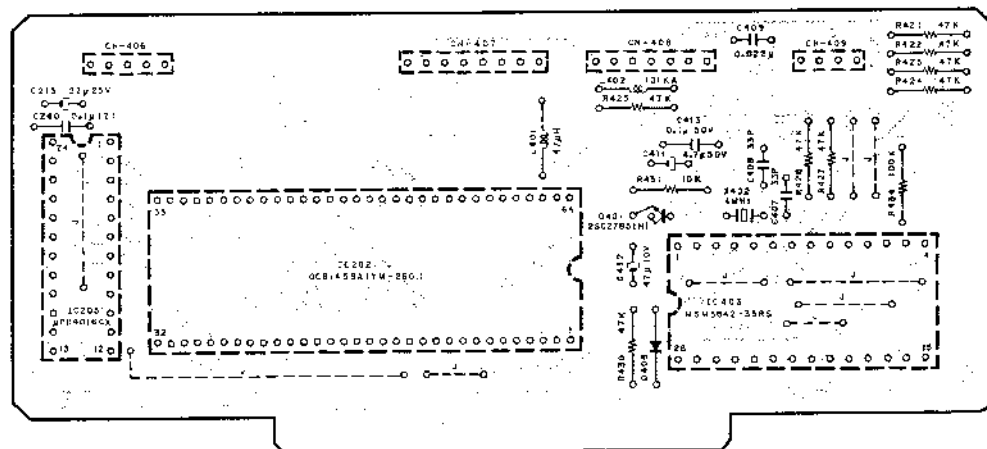


5.6. D F/F P.C.B. Ass'y

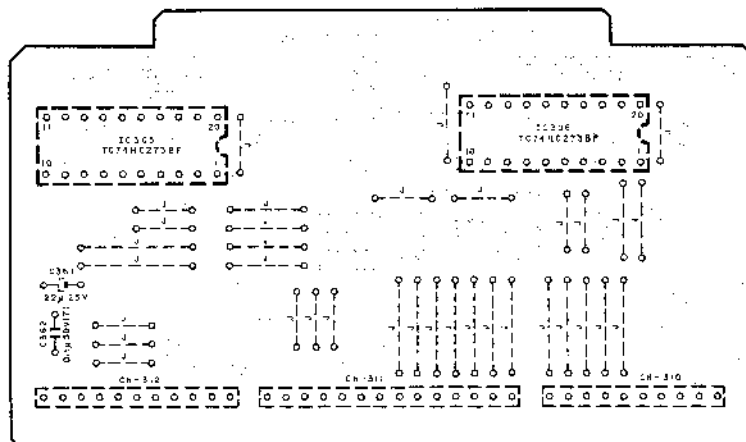


Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	CA80406A	Signal Process Ass'y		CA80412A	D F/F P. C. B. Ass'y
IC202	0C81458A	IC YM-2601	IC305, 306	0C82292A	TC 74HC 273P
IC203	0C81709A	IC UPD4016CX	C361	0B40221A	CE 22UF 25V
IC403	0C81702A	IC MSM5842-35RS	C362	0B09292A	CC 0.1uF 50V Z
L401, 402	0C82332A	Coil 100uH (K)			
Q401	0C81667A	S-TR 2SC2785 H			
D405	0B12246A	SI-D 1S2473			
R421, 422	0B01706A	RK 47K 1/4W J			
423, 424					
425, 426					
427, 430					
R431	0B01888A	RK 10K 1/4W J			
R434	0B01889A	RK 100K 1/4W J			
C362, 413	0B09292A	CC 0.1uF 50V Z			
X402	0C81893A	Ceramic Resonator 4MHz			
C407, 408	0B41073A	CC 33PF 50V K			
C409	0B05582A	CM 0.022uF 50V J			
C411	0B40201A	CE 4.7uF 50V			
C412	0B40441A	CE 47uF 10V			


5.10. Headphone Amp P.C.B. Ass'y

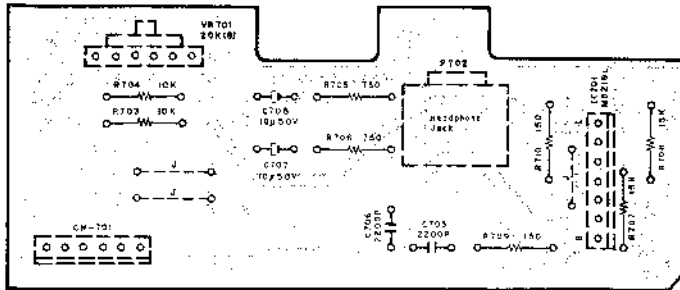


5.11. Terminal P.C.B. Ass'y

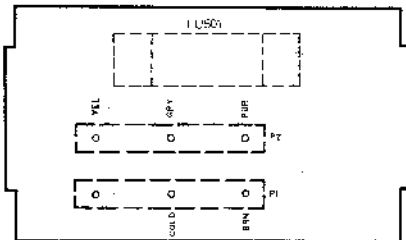

 5.12. Photo Transistor P.C.B. Ass'y



5.13. Photo Diode P.C.B. Ass'y

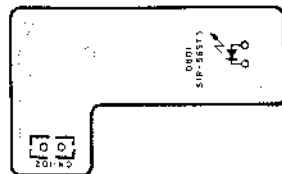

Schematic Ref. No.	Part No.	Description
IC901 VR901 R901, 902 R903, 904 R905, 906 R907, 908 R909, 910 C905, 906 C907, 908 P901	CA80410A 0C81695A 0C81786A 0B05936A 0B01888A 0B01683A 0B09924A 0B05795A 0B41233A 0B040289A 0C81891A	Headphone P. C. B. Ass'y IC M5218 L VR 20KA RF 22 1/4W J RK 10K 1/4W J RK 15K 1/4W J RK 750 1/4W J RK 150 1/4W J CP 2200pF 100V J CE 10UF 50V Headphone Jack
FU501	CA80416A 0C81902A — 0C82415A 0C82412A	Terminal P. C. B. Ass'y 3P Terminal Ⓢ Terminal P. C. B. Fuse 630mA 250V (OMS-4E) Fuse 1A 250V (OMS-4 / 4A / 40)
TR801	CA80422A 0C81680A 0C81915A —	Photo Transistor P. C. B. Ass'y Photo TR PH-102 2P Connector Cord Photo Transistor P. C. B.
D801	CA80515A 0C82337A 0C81926A —	Photo Diode P. C. B. Ass'y LED 51R-56ST3 2P Post Photo Diode P. C. B.


6. IC BLOCK DIAGRAM

IC201 Terminal Functions

Terminal number	Terminal code	I/O	Outline of functions
1	VDD	I	+5V power supply terminal
2 3	VCOX VCOI	O I	The LC resonance circuit is connected between these terminals. These terminals are used for the VCO clock oscillation (average 8.6436MHz).
4	PCO	O	This is the VCO clock control output terminal. This sets the VCO clock oscillation circuit so that the frequency increases when the average DC voltage between these terminals is high.
5 20	VCC VSS	I I	These are the grounding terminals.
6 7	EFMX EFMX	O O	Connect to the EFM signal slice level control circuit. This is the amplification-limited EFM signal output terminal. $8 > 7$. The gain of $7 > 6$ is 15.
8	EFMI	I	EFMI signal (1 – 2 VPP) into this terminal
9	SYEQ	O	This is the monitor output terminal that gives a "H" level signal when the synchronization signal of the EFM signal and the synchronization signal of the internal counter correspond.
10 11	DM + DM -	O O	These are the DISC Motor output terminals, connected to the disc motor driver circuit. It is not possible for both terminals to register "H" simultaneously.
12	FCS	O	This is the focusing output terminal.
13	FZC	I +	Based on the focus error signal, an "L" signal will be input when the focus point is reached.
14	FRF	I	An "H" signal will be entered into this terminal when reflected light is received.
15	H _F	I	The EFM envelope signal (amplitude logic level) is entered into this terminal.
16	TER	I	The tracking error signal (amplitude logic level) is entered into this terminal.
17	TEST	I +	This test terminal is to be grounded, and contains pull-up resistors.
34	TCL	I +	This test terminal is ungrounded, and contains pull-up resistors.
18	TROF	O	This is the output terminal that switches off the tracking signal of the tracking servo circuit.
19	TRGL	O	This output terminal minimizes the gain of the tracking servo circuit.
20	TRHD	O	This output terminal holds the tracking error signal of the tracking servo circuit while KP+ or KP- (see below) are being output.
22 23	KP + KP -	O O	These output terminals are for the track kick function, and are connected to the tracking servo circuit.
24	FEOF	O	This output terminal is used to switch off the input signal of the feed servo circuit.
25 26	FEM + FEM -	O O	This request output terminal is connected to MPU, and requests that connected to the feed servo circuit.
27	WQ	O	This request output terminal is connected to MPU, and requests that data be sent from SVC > MPU.

Terminal number	Terminal code	I/O	Outline of functions
28	R/W	0	This output terminal is connected to MPU, and is used for the switching of the data transmission mode. When R/W = "L", data is transmitted from SVC > MPU, and when R/W = "H", data is transmitted from MPU > SVC.
29	DOUT	0	This data output terminal is connected to MPU. When R/W = "L", data can be transmitted from SVC > MPU according to the SCK clock input.
30	DIN	1	This data input terminal is connected to MPU. When R/W = "H", data is transmitted from MPU > SVC according to the SC key clock input.
31	SCK	1	Connected to MPU, this terminal is for the clock input, required for data transmission.
32	XFSY	1	This is the frame synchronization signal (7.35kHz) input terminal, connected to the SCG output.
33	$\phi 4$	1	This is the crystal clock (4.321MHz) input terminal, connected to the SGP output.
35	RCX	1 +	Connected to MPU, this terminal is for the clock input, required for the subcode transmission. It is disconnected when not being used.
36	VFSY	0	This is the VCO frame synchronization signal (average 7.35kHz) output terminal, connected to MPU. Detecting the change from "H" > "L", this can be used as a request signal, requesting that the subcode be transmitted from SVC > MPU.
37	SUB	0	This is the subcode output terminal, connected MPU. The subcode can be transmitted from SVC > MPU according to the RCK clock input.
38	DSY	0	This is the synchronization signal output terminal for the serial signals (see below), connected to the SGP input.
39	DATA	0	This is the serial signal output terminal for the 8 bit EFM demodulation signals and the 5 bit control signals, connected to the SGP input.
40	CK	0	This is the VCO clock (average 4.321MHz) output terminal, connected to the SGP input.


IC MOS YM3811
IC201

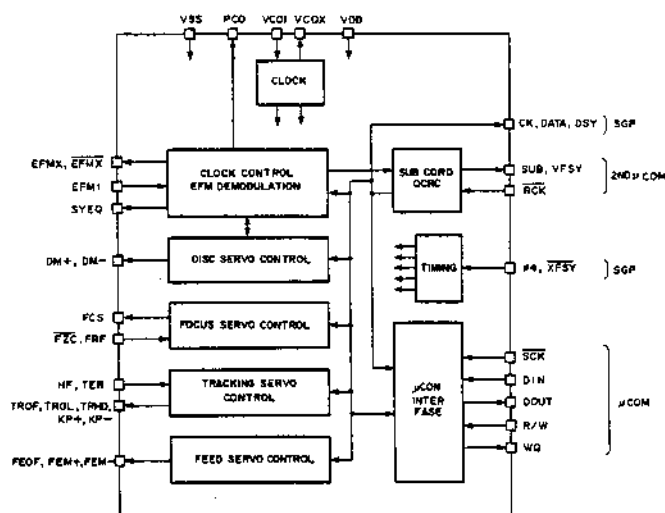

4. IC202 Terminal Functions

Terminal number	Terminal code	I/O	Outline of functions
1 17	VSS VSS	I I	These are the grounding terminals.
2 3 7 8	$\overline{\text{TEST 1}}$ $\overline{\text{TEST 2}}$ $\overline{\text{TEST 3}}$ TCL	I+ I+ I+ I+	These test terminals are ungrounded, and contain pull-up resistors.
4	CK	I	This is the VCO clock (average 4,3218MHz) input terminal, connected to the SVC output.
5	DATA	I	This is the serial signal input terminal for the 8 bit EFM demodulation signals and the 5 bit control signals, connected to the SVC output.
6	DSY	I	This is the synchronization signal input terminal for the serial signals (see above), connected to the SVC output.
9	$\phi 4$	O	This is the crystal clock (4.3218MHz) output terminal, connected to the SVC input.
10	$\overline{\text{XFSY}}$	I/O	This is the frame synchronization signals (7.35kHz) output terminal, connected to the SVC input. (During test operations, the synchronization can be resynchronized by setting this terminal to the "L level".)
11 12 13 14 15 16 18 19 20 21 24	A0 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10	O O O O O O O O O O O	These are the address output terminals, connected to the RAM address terminals.
22	$\overline{\text{WE}}$	O	This is connected to the RAM WE terminal. When a "L level" signal is registered, the RAM will be set to the WRITE mode.
23	$\overline{\text{OE}}$	O	This is connected to the RAM OE terminal. When a "L level" signal is registered, the RAM will be set to the READ mode.
25 26 27 28 29 30 31 32	D8 D7 D6 D5 D4 D3 D2 D1	I/O I/O I/O I/O I/O I/O I/O I/O	These are connected to the RAM data terminals. The output mode is set when the cycle at the data input terminal is WE = "L", and the input mode is set when the cycle is WE = "H".
33	DEP	O	This is the output terminal for the audio frequency characteristics switching signals of the audio filter. The emphasis will be required when "H" is registered.


Terminal number	Terminal code	I/O	Outline of functions
34	$\overline{Q1}$	0	Connected to the DAC input, the parallel signals are output by way of the internal digital filter from these terminals. The output is in alternation from the left and right channels. The output rate for each channel is 88.2kHz. Connect either Q16 or ($\overline{Q16}$), according to the DAC to be used.
35	$\overline{Q2}$	0	
36	$\overline{Q3}$	0	
37	$\overline{Q4}$	0	
38	$\overline{Q5}$	0	
39	$\overline{Q6}$	0	
40	$\overline{Q7}$	0	
41	$\overline{Q8}$	0	
42	$\overline{Q9}$	0	
43	$\overline{Q10}$	0	
44	$\overline{Q11}$	0	
45	$\overline{Q12}$	0	
46	$\overline{Q13}$	0	
47	$\overline{Q14}$	0	
48	$\overline{Q15}$	0	
49	$\overline{Q16}$	0	
50	Q16	0	
51	$\phi 2$	0	This is the crystal clock (2.1609MHz) output.
52	SDO	I/O	This is the serial signal output for the DAC. Using a $\phi 2$ clock beat rate, the signals are output from LSB in the order of L channel 24 bit – R channel 25 bit.
53	SDSY	0	This is the synchronization signal output for the above serial signals. The level is "H" for L channel and "L" for R channel.
56	TEST	I+	This test terminal contains pull-up resistors, and is normally disconnected. Using an "L" signal, it is also possible to input serial signals with the same format as the above serial signals from the SDO terminal into the digital filter.
54	C1F1	0	This monitor output terminal depicts the C1 and C2 error correction operation mode.
55	C1F2	0	
57	C2F1	0	
58	C2F2	0	
59	R/L	0	This is the output terminal for the channel allocation signal of the DAC analog output. "H" is for the R channel, and "L" is for the L channel.
60	SWR	0	This is the deglitch signal for the respective channels of the DAC analog output.
61	SWL	0	
62	VDD	I	This is the +5V power supply terminal.
63	XIN	I	A crystal oscillator is connected between these terminals, which are used for the crystal clock (8.6436MHz) oscillation.
64	XOUT	0	

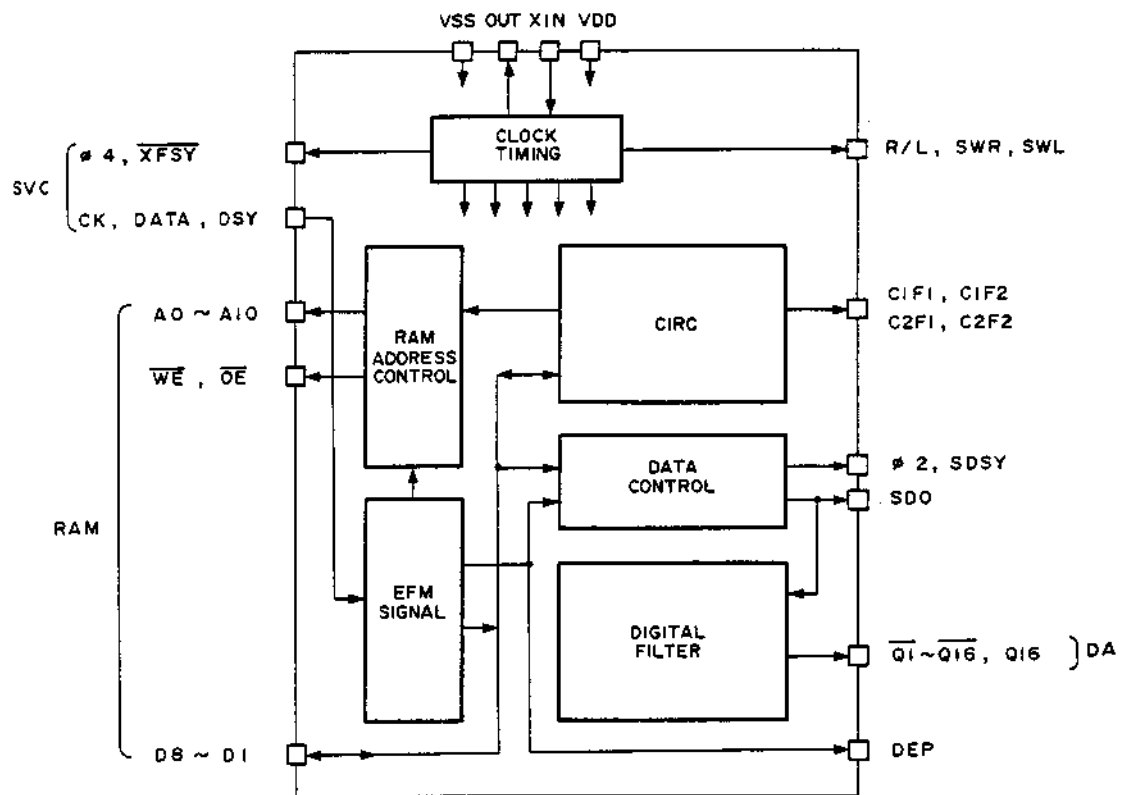


IC MOS YM-2601F

PIN	Port Name	Cord	Function	I/O	Active Level	RESET
1	P20	ADD8	External RAM address	O	H	L
2	P21	WE	External RAM line signal	O	L	H
3	P22	R/W	3531 R/W	O	H	L
4	P23	D-OSG	Tray opening driving	O	H	L
5	RESET					
6	PPO	Non used				
7	NC					
8	P00	WQ	3531 read request	I	H	*
9	SCK	SCK	3531 serial clock	O	L	H
10	SO	DIN	3531 Data in	O	H	L
11	SI	D OUT	3531 Data out	I	H	*
12	P60	KI 4	Key input port	I	H	*
13	P61	IR	Remote control data	I	H	*
14	P62	LA-ON	Laser ON	O	H	L
15	P63	DISC	Disc detection	I	H	*
16	P50	DATA 0	External RAM address remote control data input	I/O	H	*
17	P51	DATA 1	External RAM address remote control data input	I/O	H	*
18	P52	DATA 2	External RAM address remote control data input	I/O	H	*
19	P53	DATA 3	External RAM address remote control data input	I/O	H	*
20	P10	KI 0	Key input port	I	H	*
21	P11	KI 1	Key input port	I	H	*
22	P12	KI 2	Key input port	I	H	*
23	P13	KI 3	Key input port	I	H	*
24	NC					
25	P40	ADD 0	External RAM address remote control data input	I/O	H	*
26	P41	ADD 1	External RAM address remote control data input	I/O	H	*
27	P42	ADD 2	External RAM address remote control data input	I/O	H	*
28	P43	ADD 3	External RAM address remote control data input	I/O	H	*
29	EVENT	Non used				
30	X2					
31	X1					
32	Vss					


Pin	Port Name	Code	Function	I/O	Active Level	RESET
33	S7	Ph	Segment h	O	H	L
34	S6	Pg	Segment g	O	H	L
35	S5	Pf	Segment f	O	H	L
36	S4	Pe	Segment e	O	H	L
37	S3	Pd	Segment d	O	H	L
38	S2	Pc	Segment c	O	H	L
39	S1	Pb	Segment b	O	H	L
40	S0	Pa	Segment a	O	H	L
41	T15/S15	PAUSE LED	Pause LED static	O	H	L
42	T14/S14	PLAY LED	Play LED static	O	H	L
43	T13/S13	DISC LED	Disc LED static	O	H	L
44	T12/S12	STANDBY LED	Standby LED static	O	H	L
45	T11/S11	D-CSG	Tray closing driving	O	H	L
46	T10/S10	RECEIVE LED	Remote control code reception	O	H	L
47	T9/S9	T9	Index display 10	O	H	L
48	T8/S8	T8	Index display 1	O	H	L
49	T7	T7	Track display 10	O	H	L
50	T6	T6	Track display 1	O	H	L
51	T5	T5	Mode display A	O	H	L
52	T4	T4	Mode display A	O	H	L
53	T3	T3	Time display minute 10	O	H	L
54	T2	T2	Time display minute 1	O	H	L
55	T1	T1	Time display seconds 10	O	H	L
56	T0	T0	Time display seconds 1	O	H	L
57	V LOAD					
58	V PRE					
59	P30	ADD 4	External RAM address	O	H	*
60	P31	ADD 5	External RAM address	O	H	*
61	P32	ADD 6	External RAM address	O	H	*
62	P33	ADD 7	External RAM address	O	H	*
63	INT 1	OPEN/ CLOSE	OPEN/CLOSE key	I		*
64	VDD					

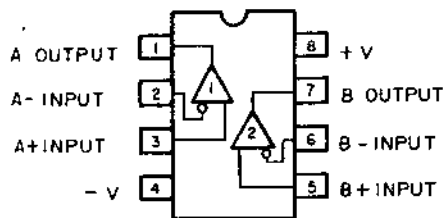


Operational Amp.
IC M5220L, NJM4560D,
BA4558
M5218L

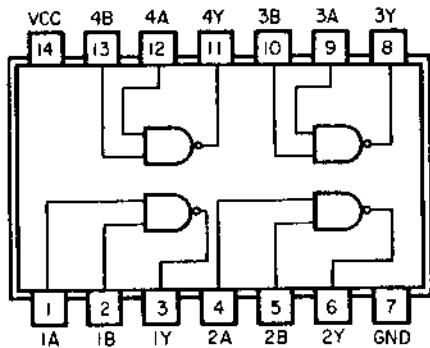

NAND GATE MOS IC SN74HC00N

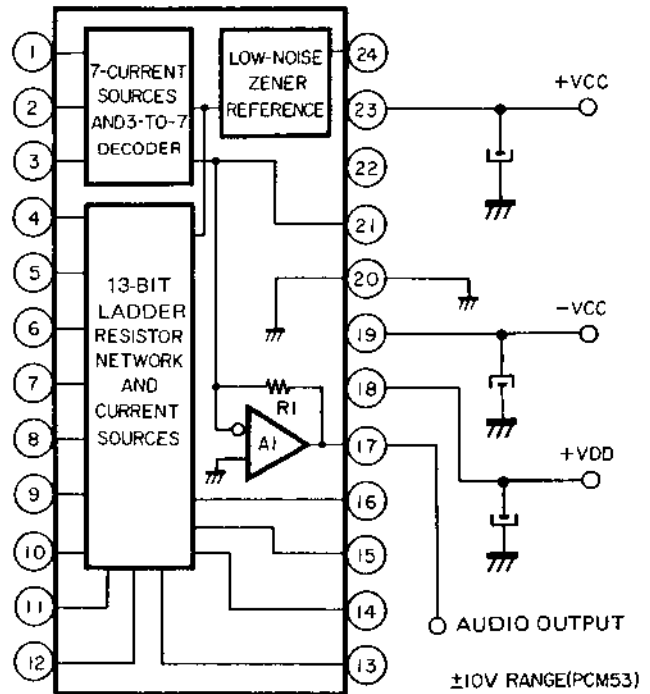



IC PCM54JP

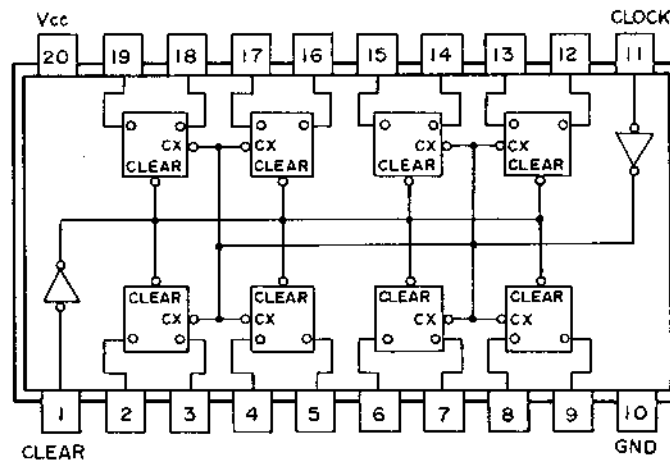


74HC273


7. SCHEMATIC DIAGRAM

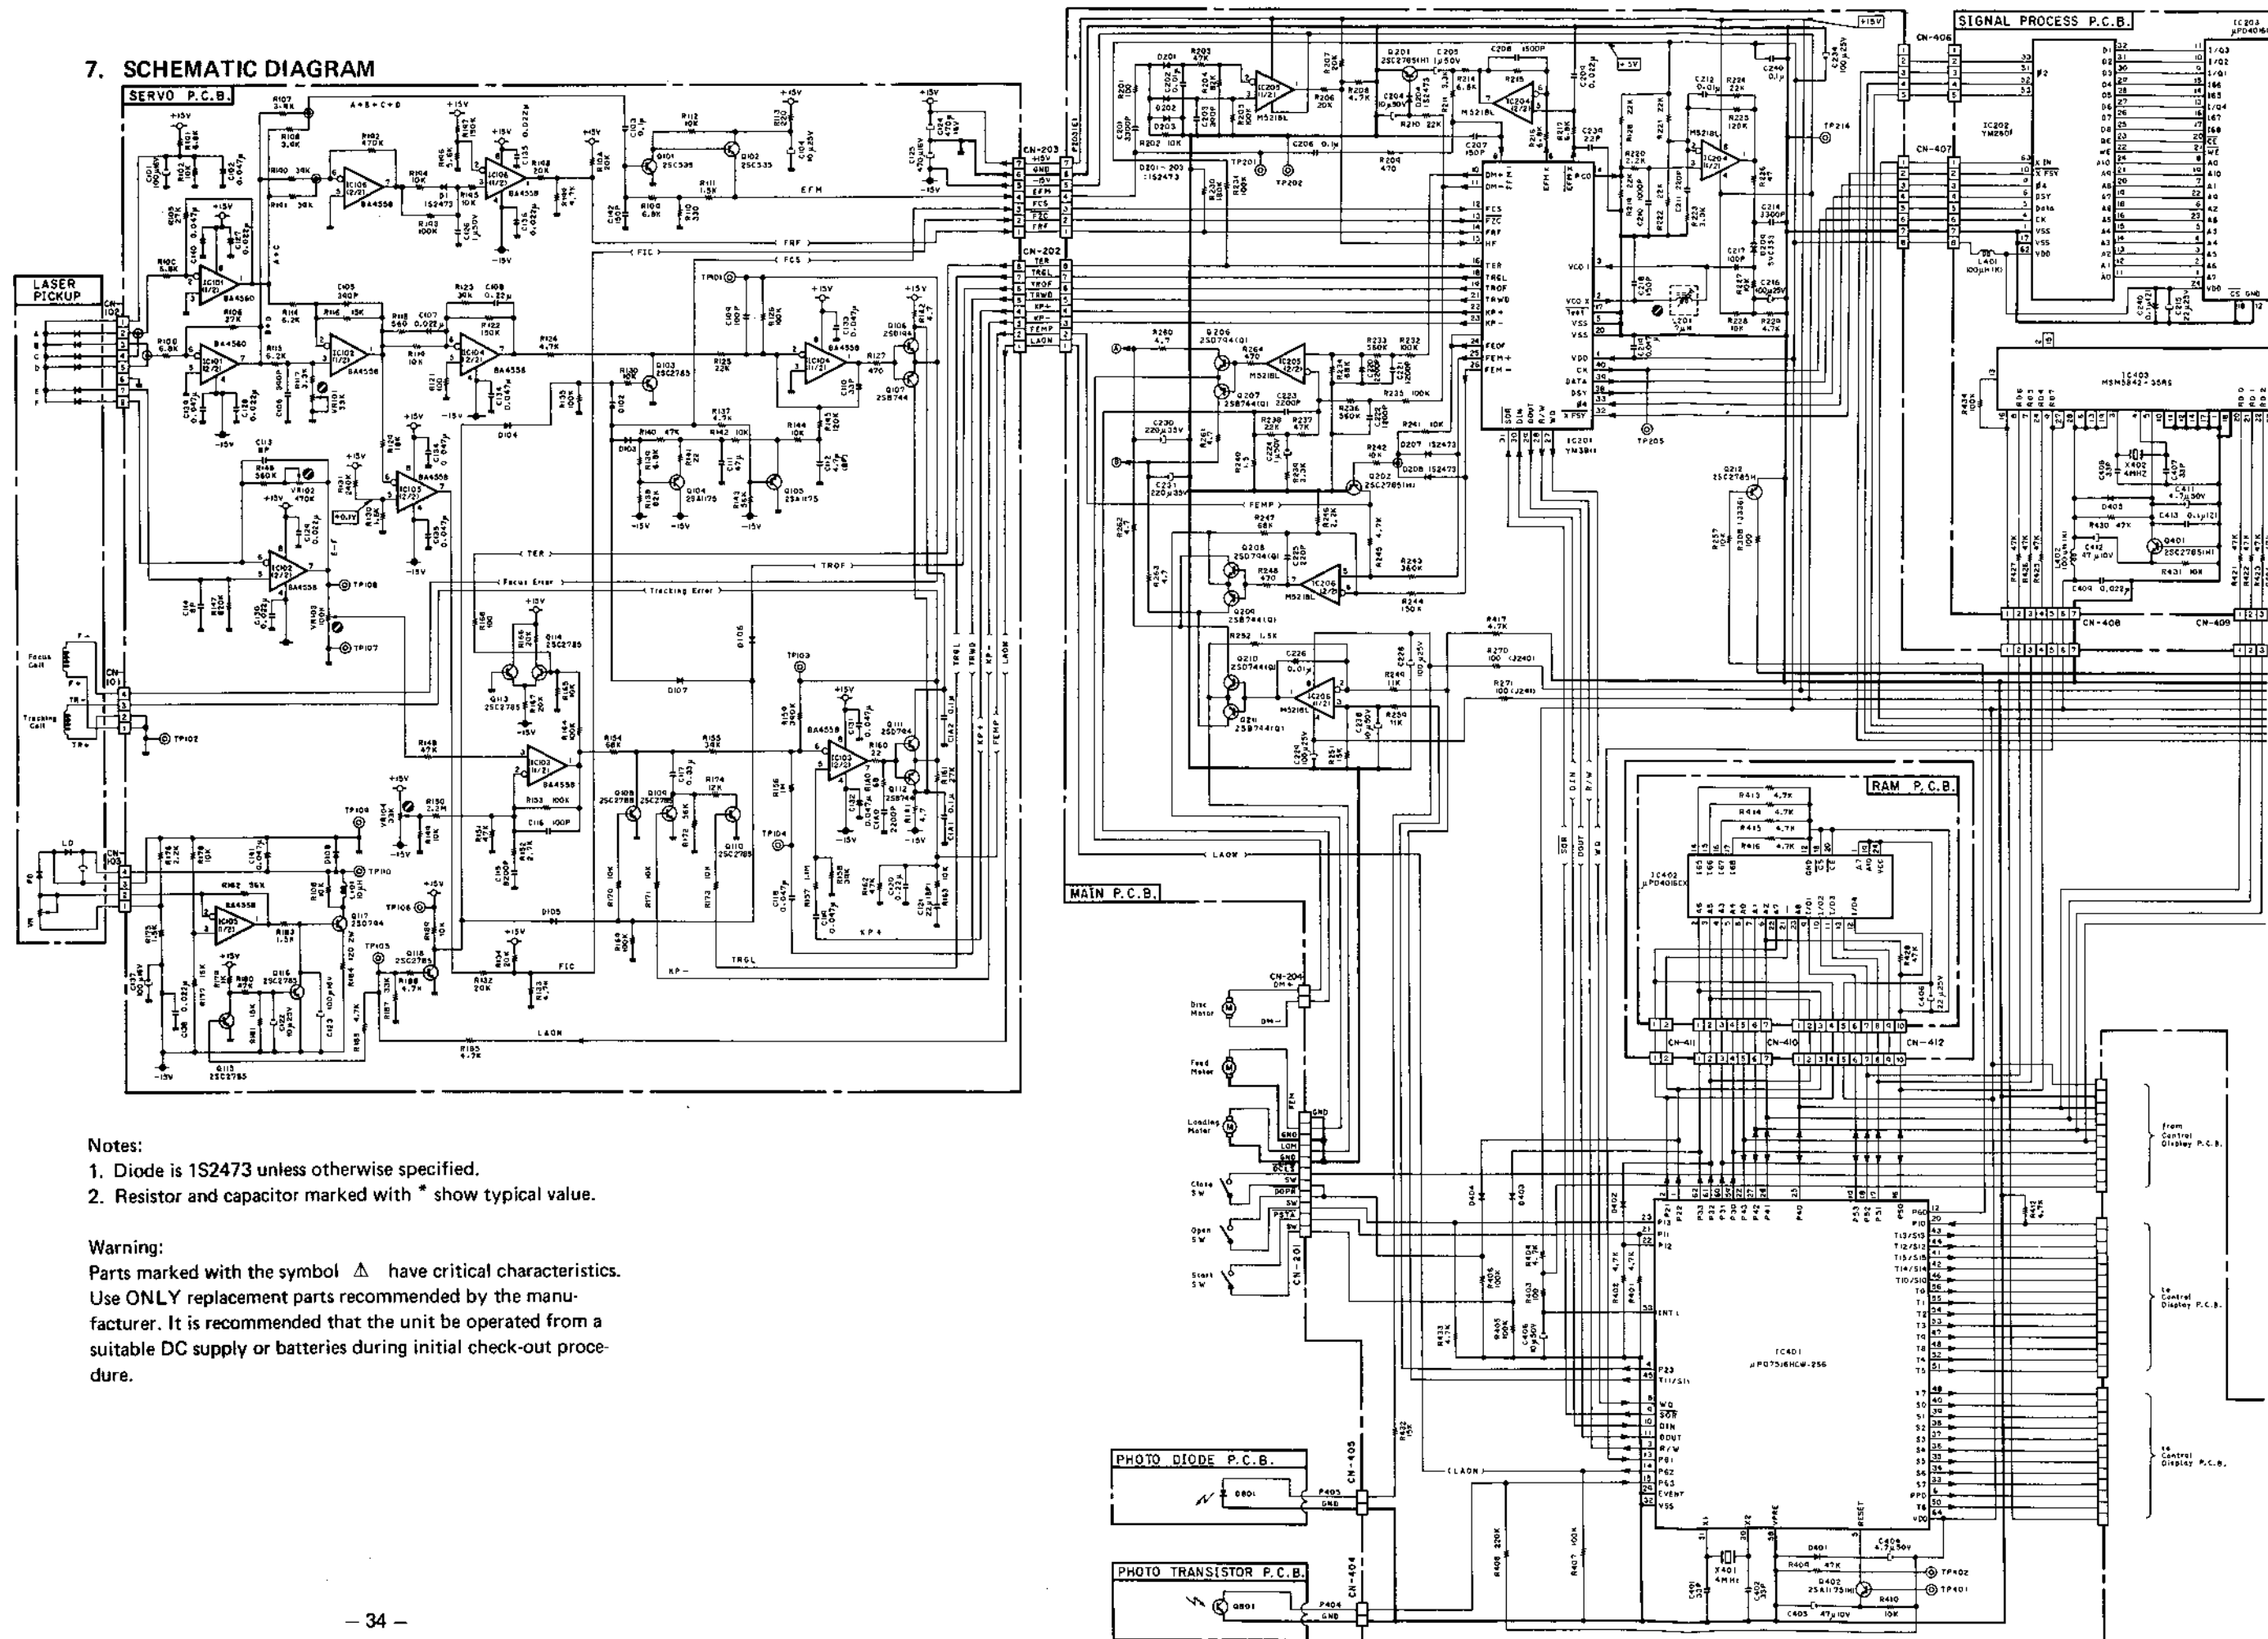

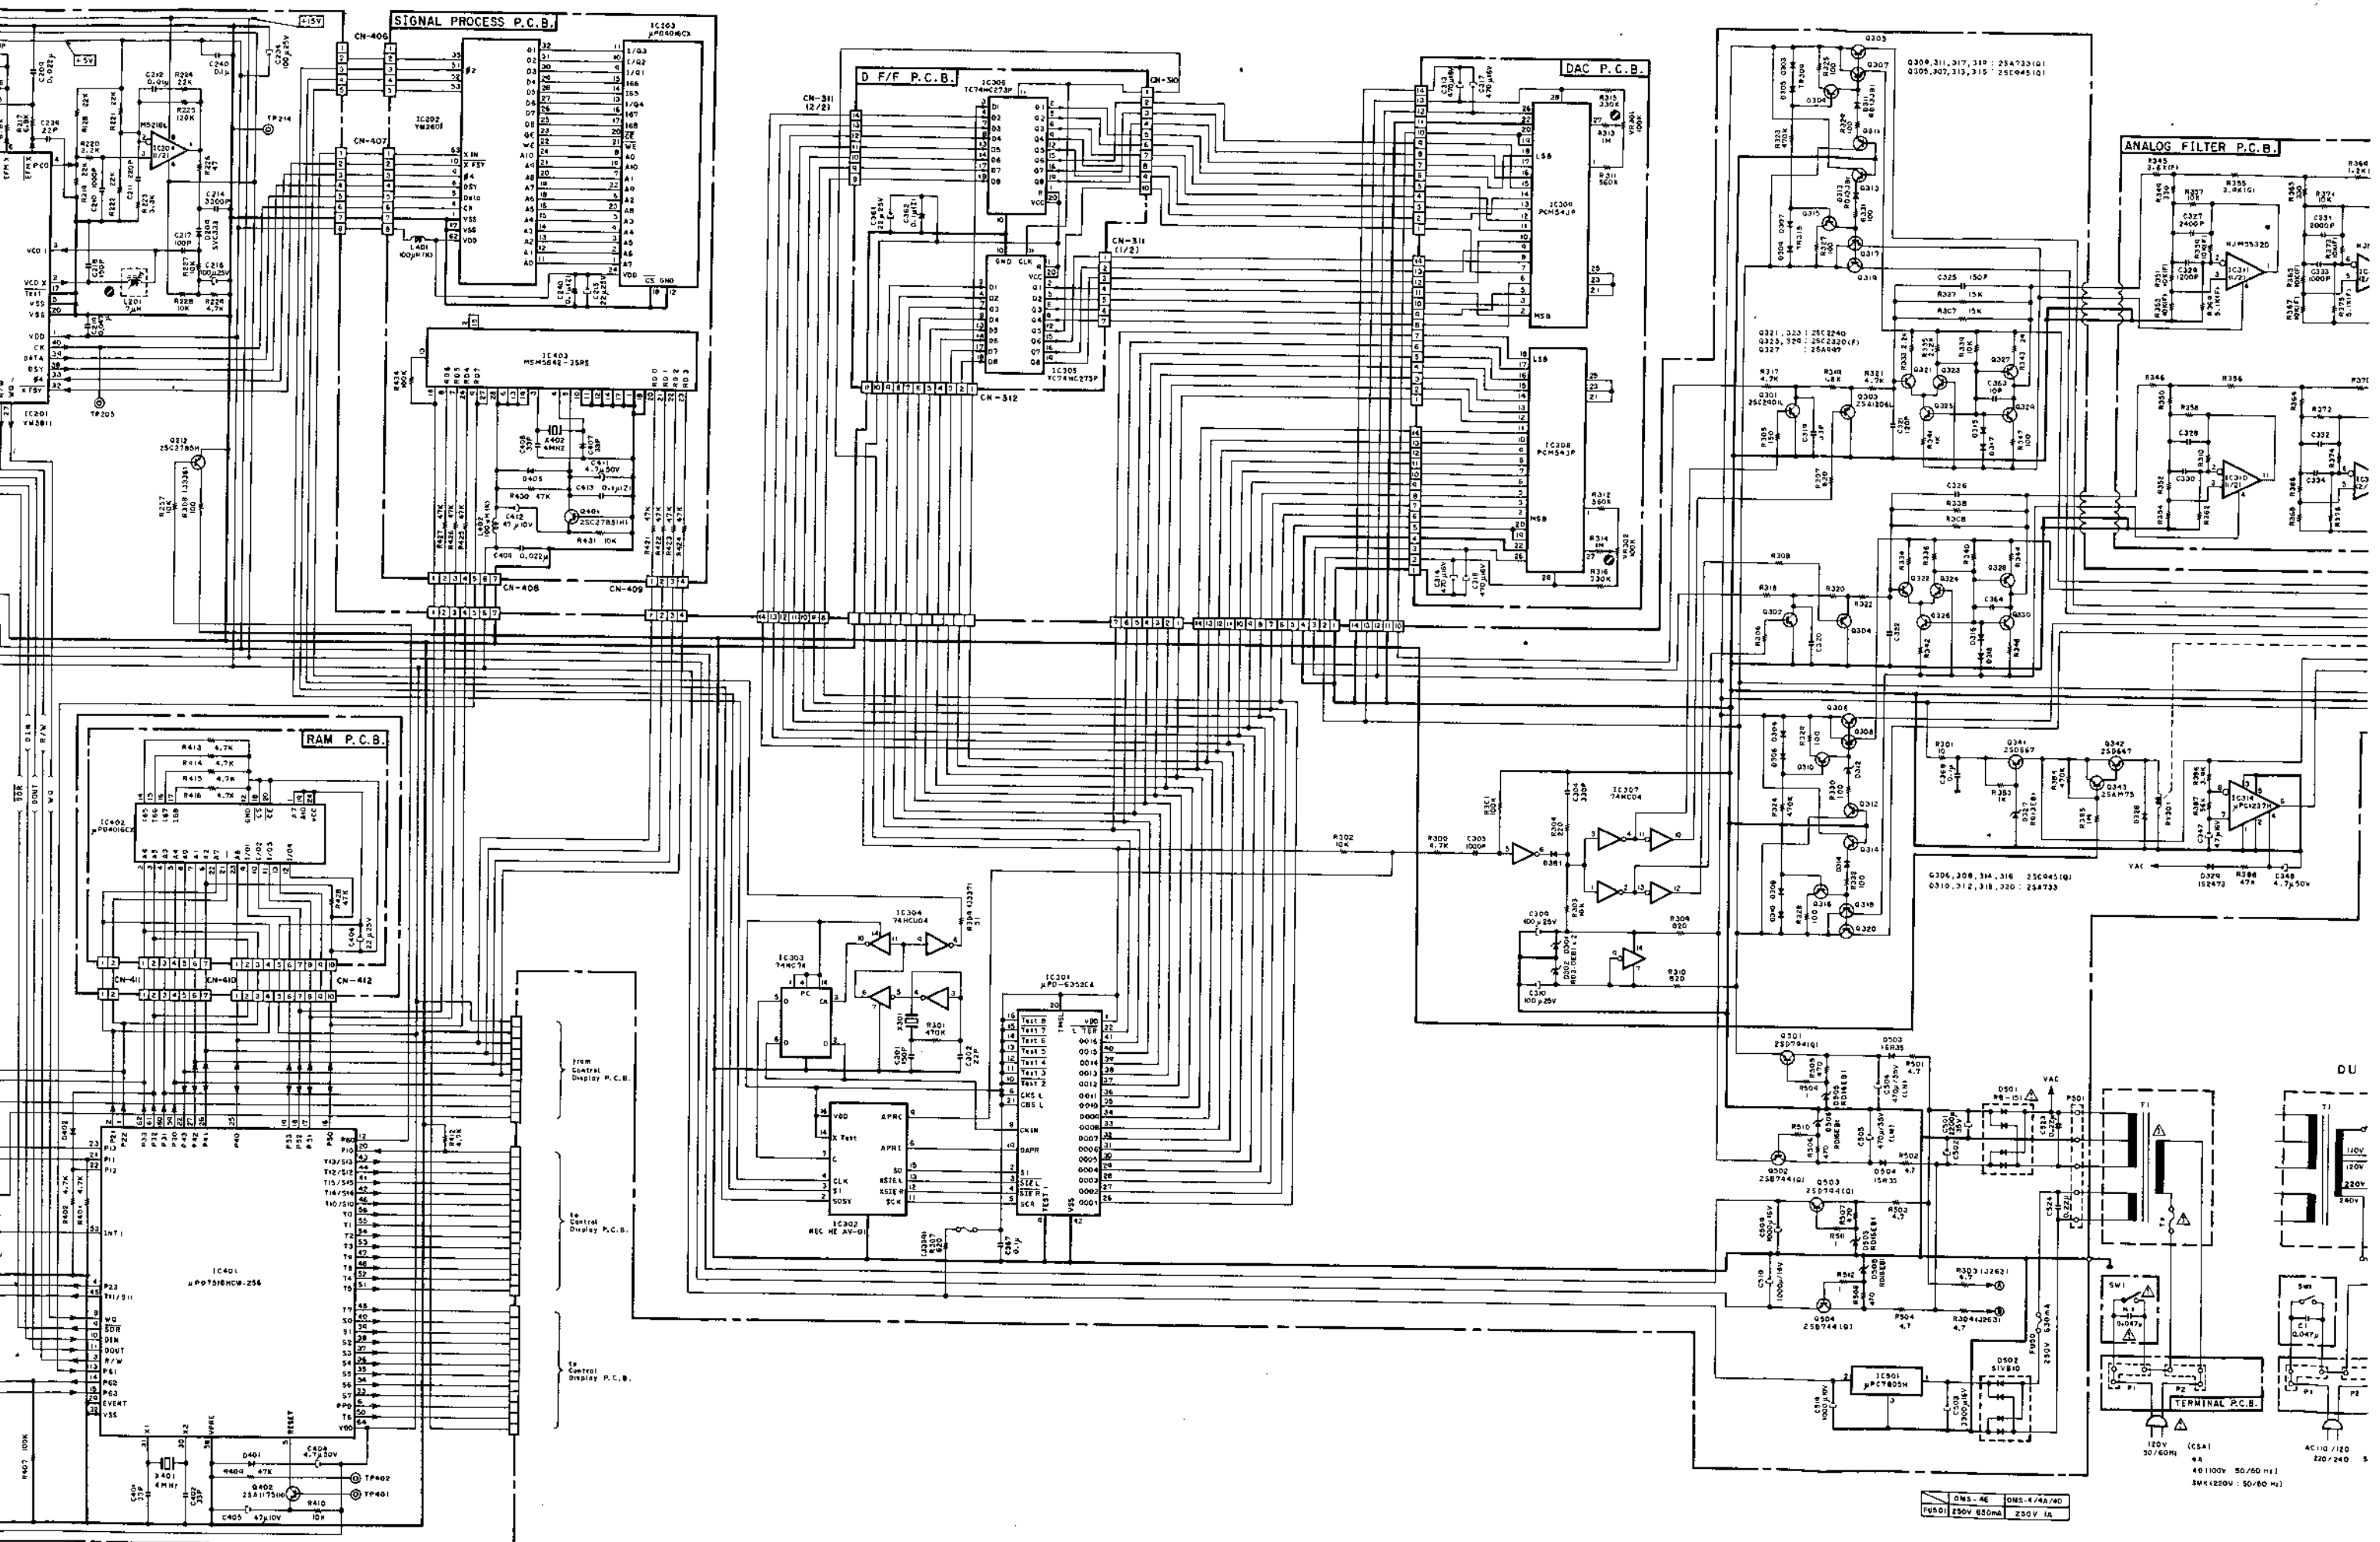

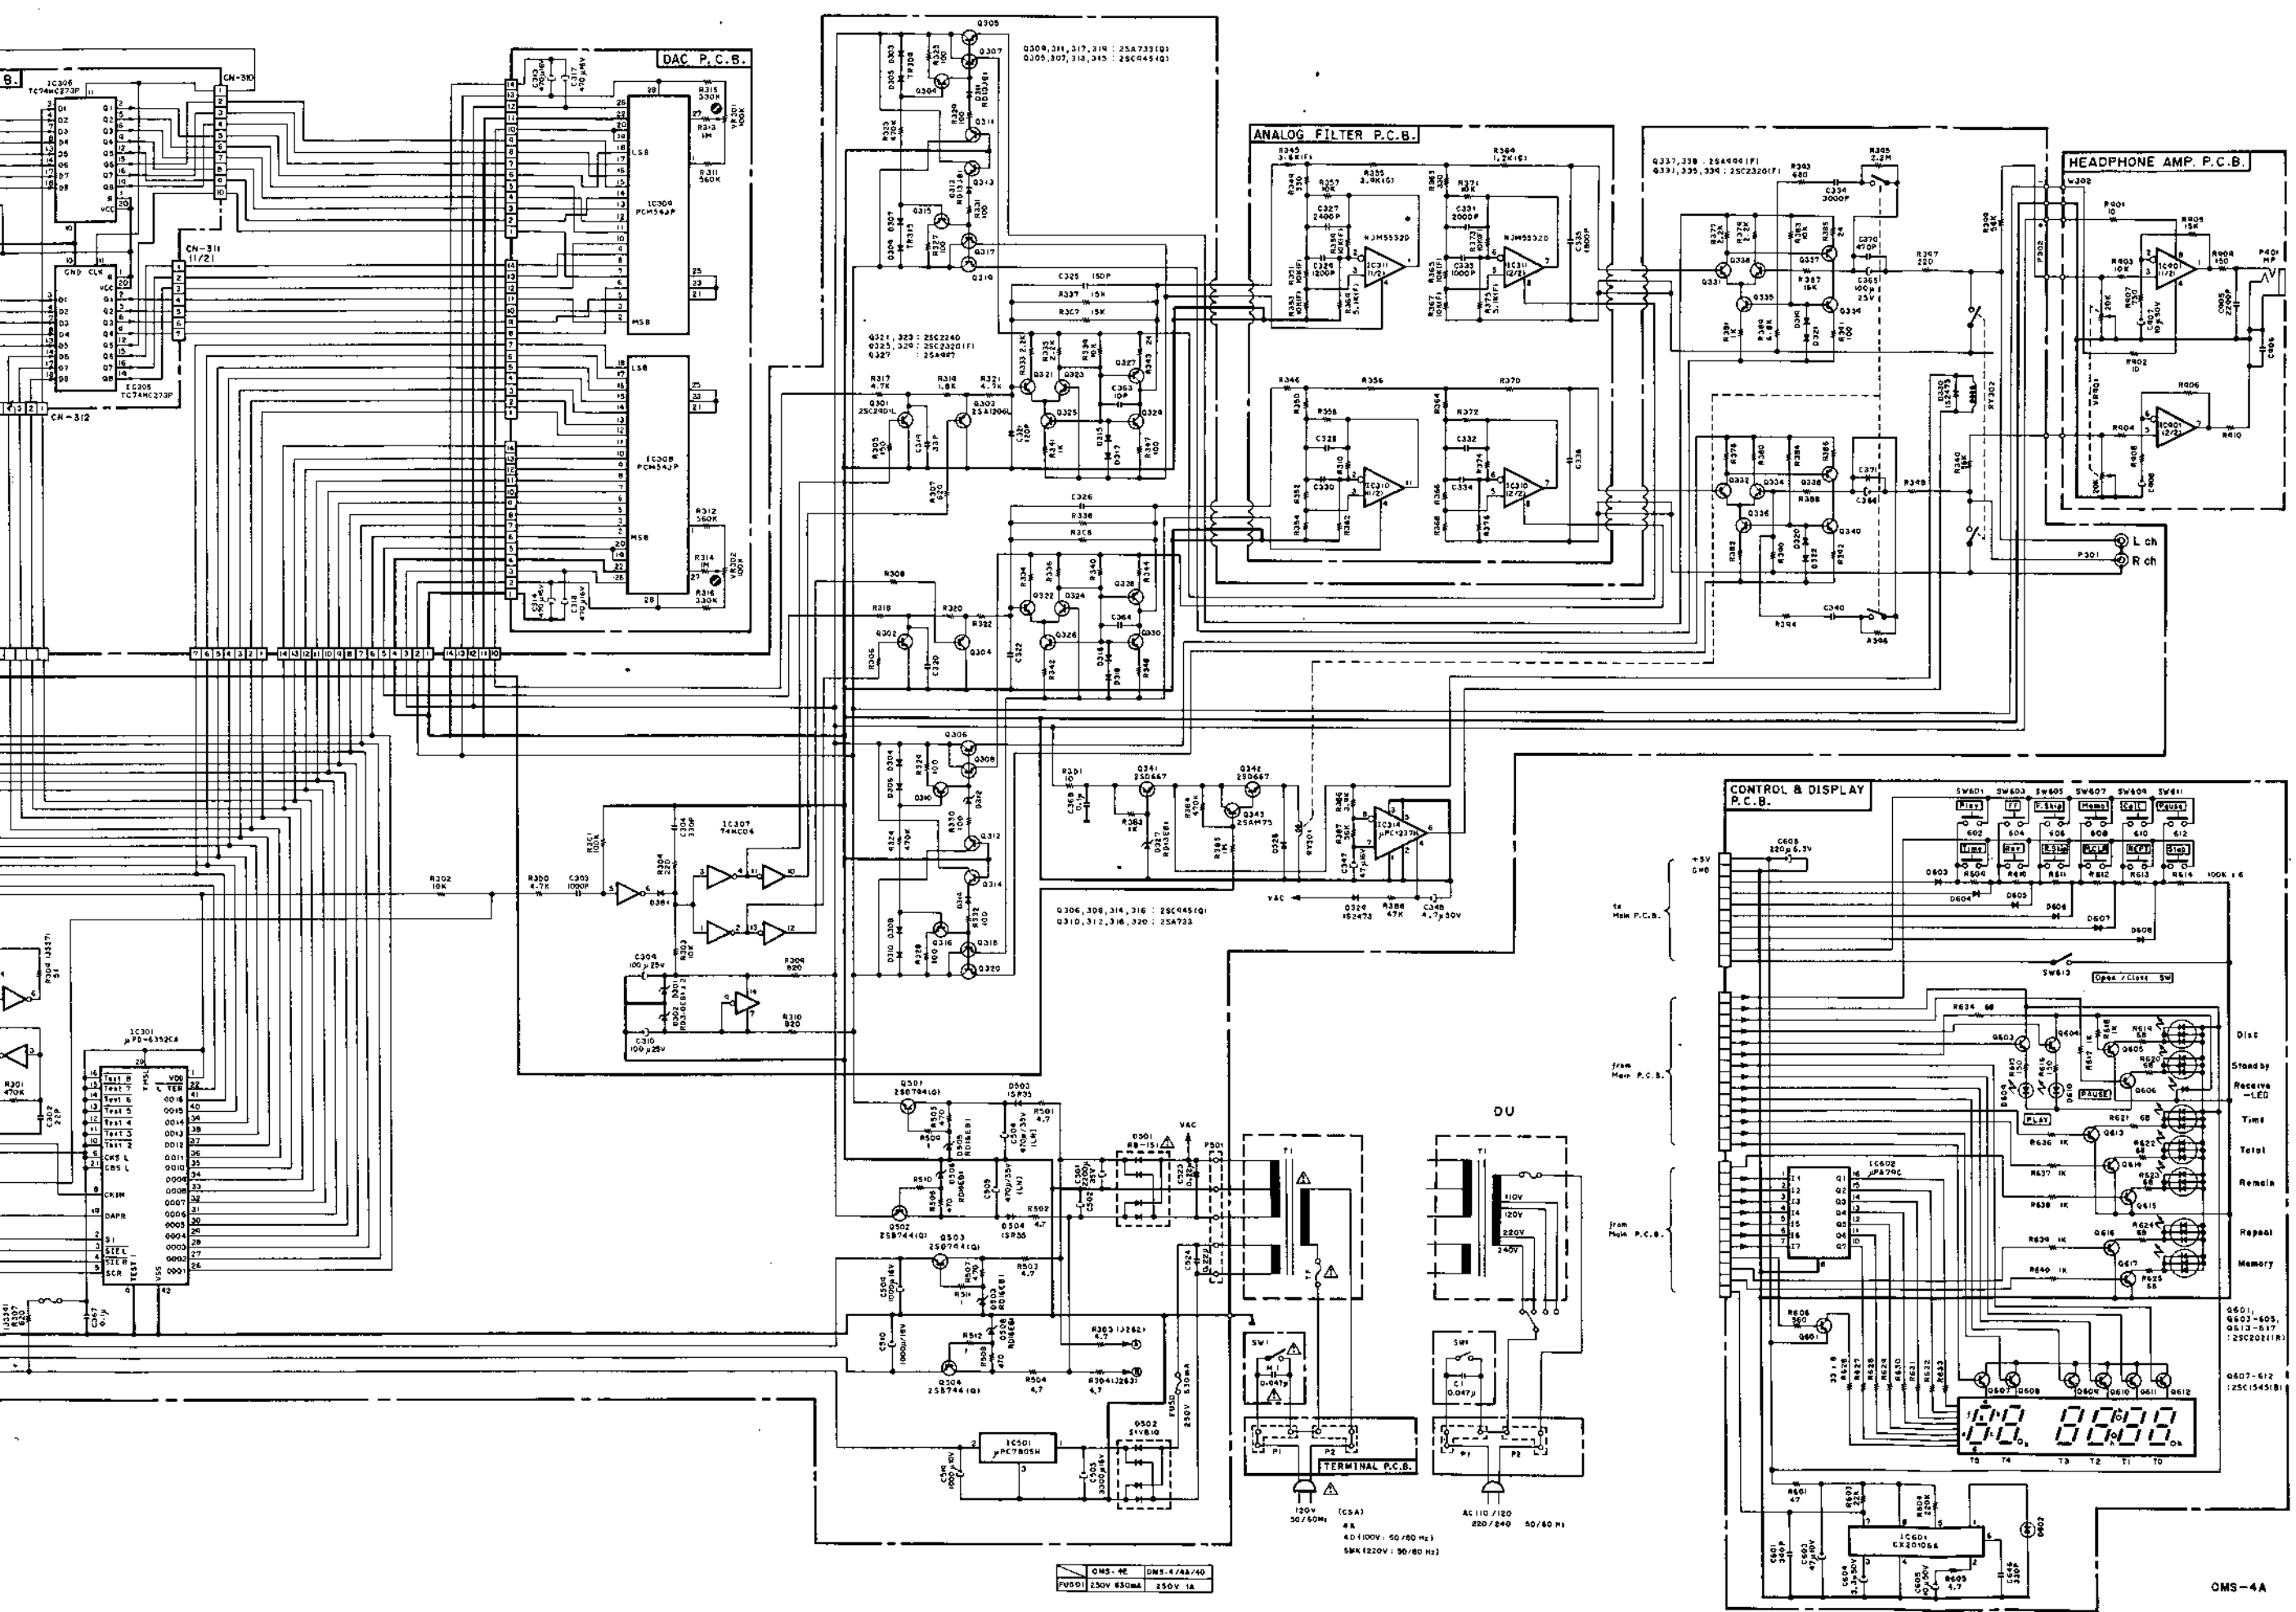


8. WIRING DIAGRAM

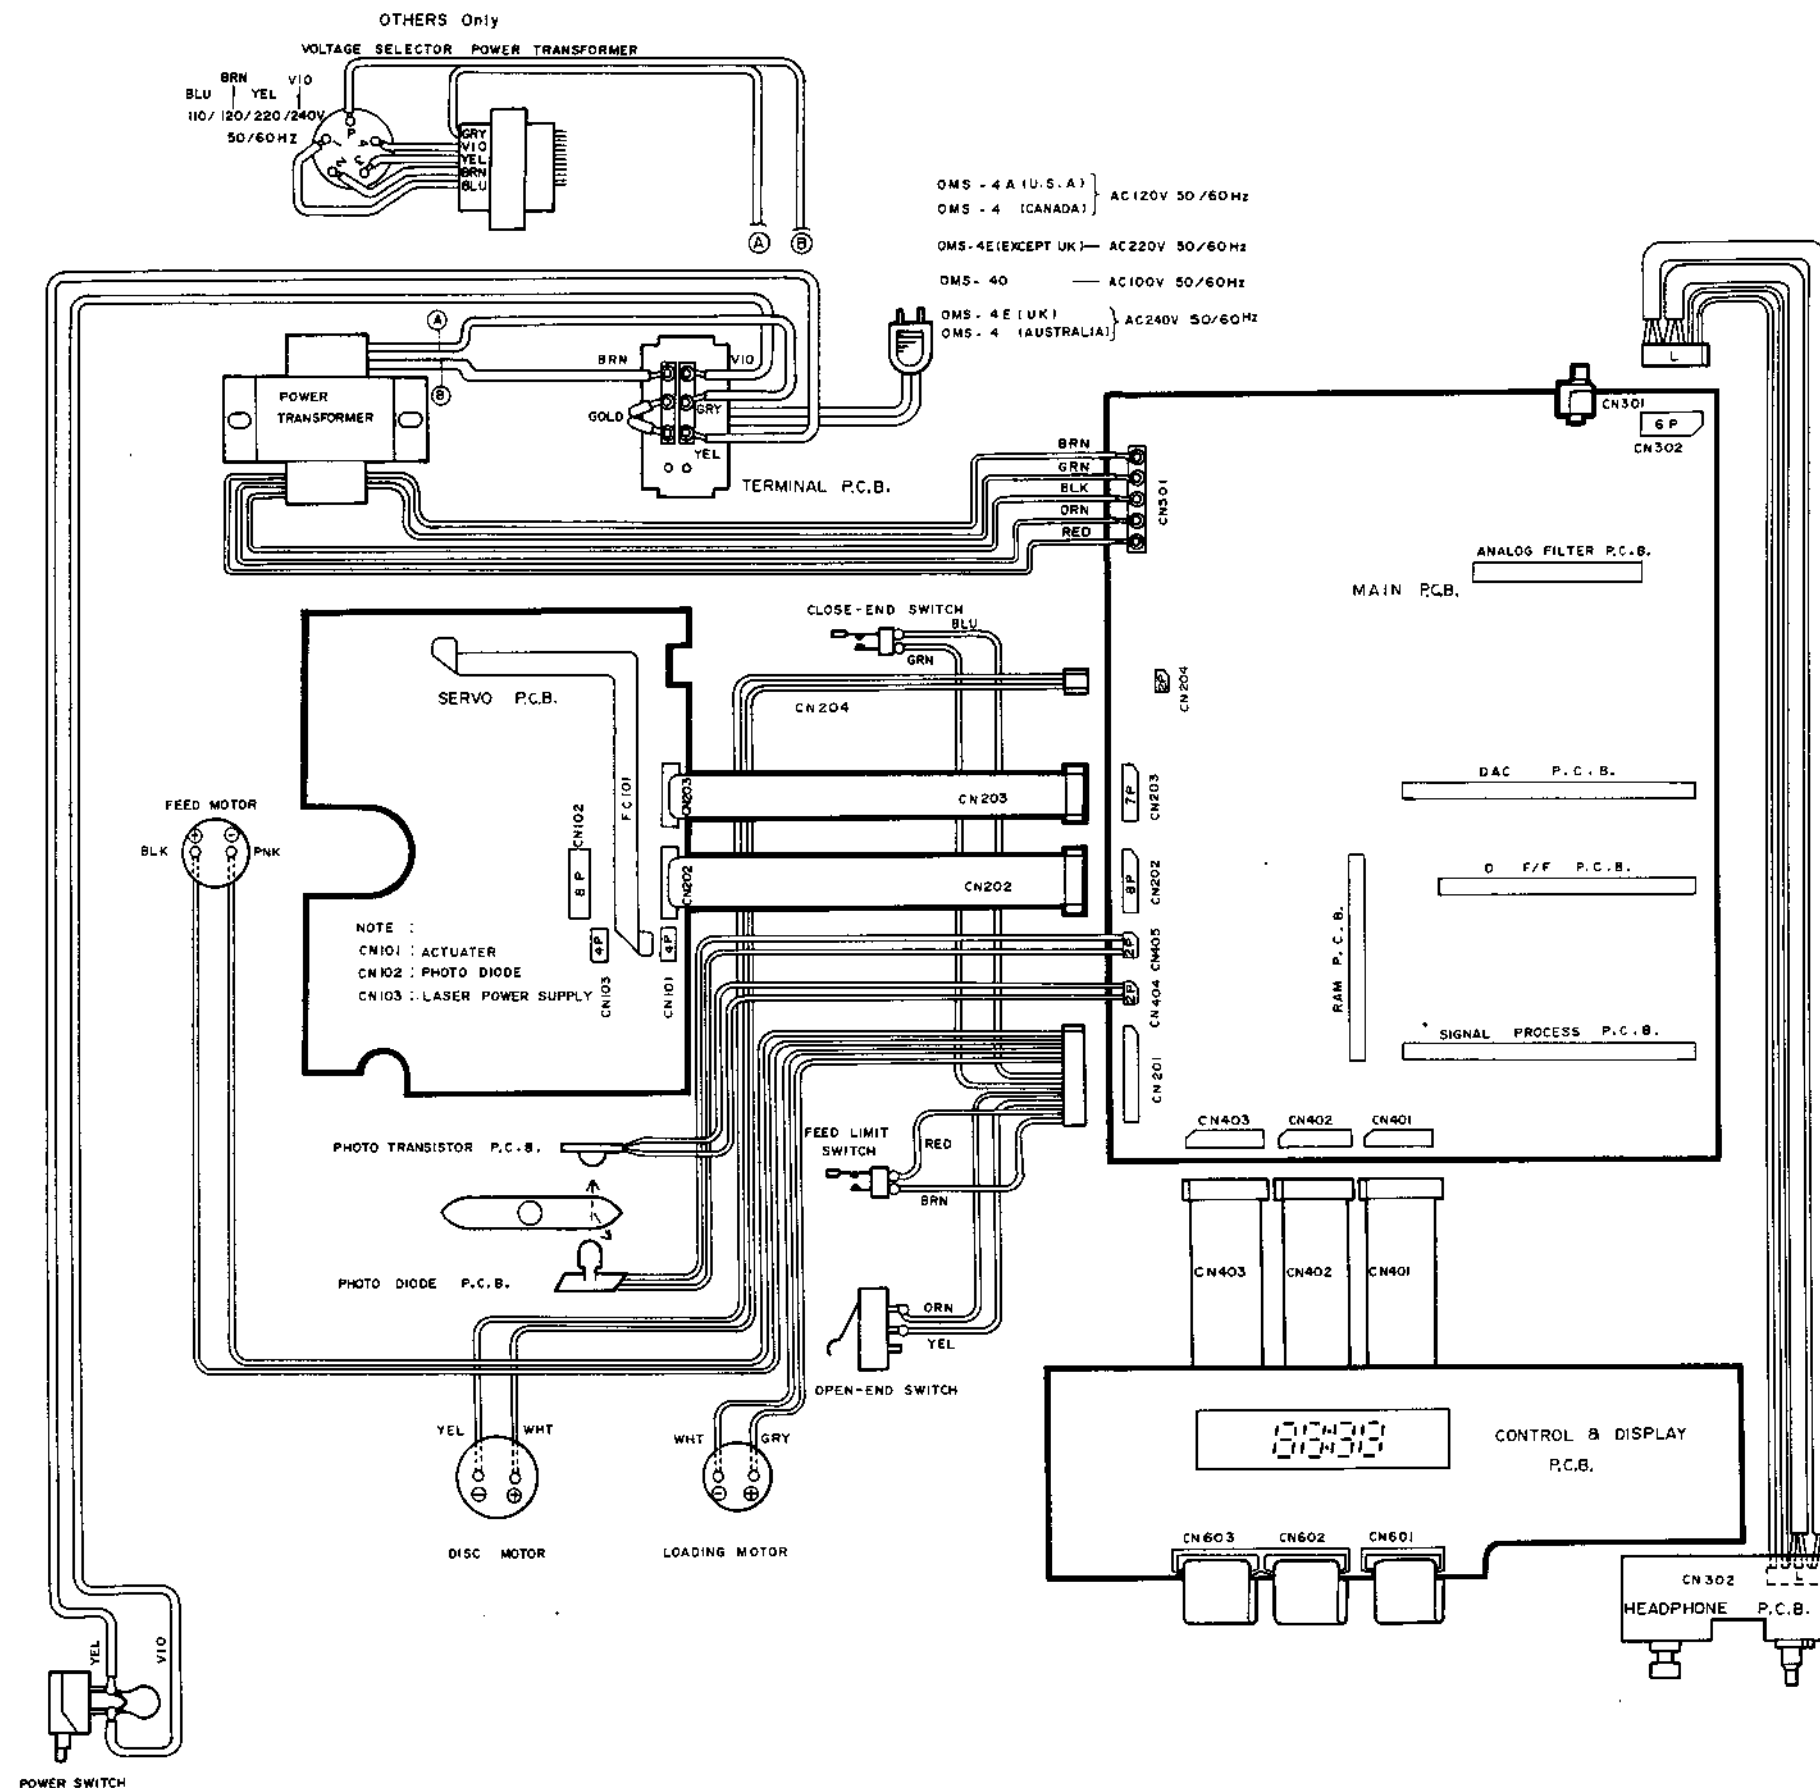

- Notes:
1. Table of wire colors
 BRN — Brown
 RED — Red
 ORN — Orange
 YEL — Yellow
 GRN — Green
 BLU — Blue
 VIO — Violet
 GRY — Gray
 WHT — White
 BLK — Black
 2. Component side view of the P.C.B. is illustrated unless otherwise specified.
 3. Wire tube color is shown in ().

9. BLOCK DIAGRAM

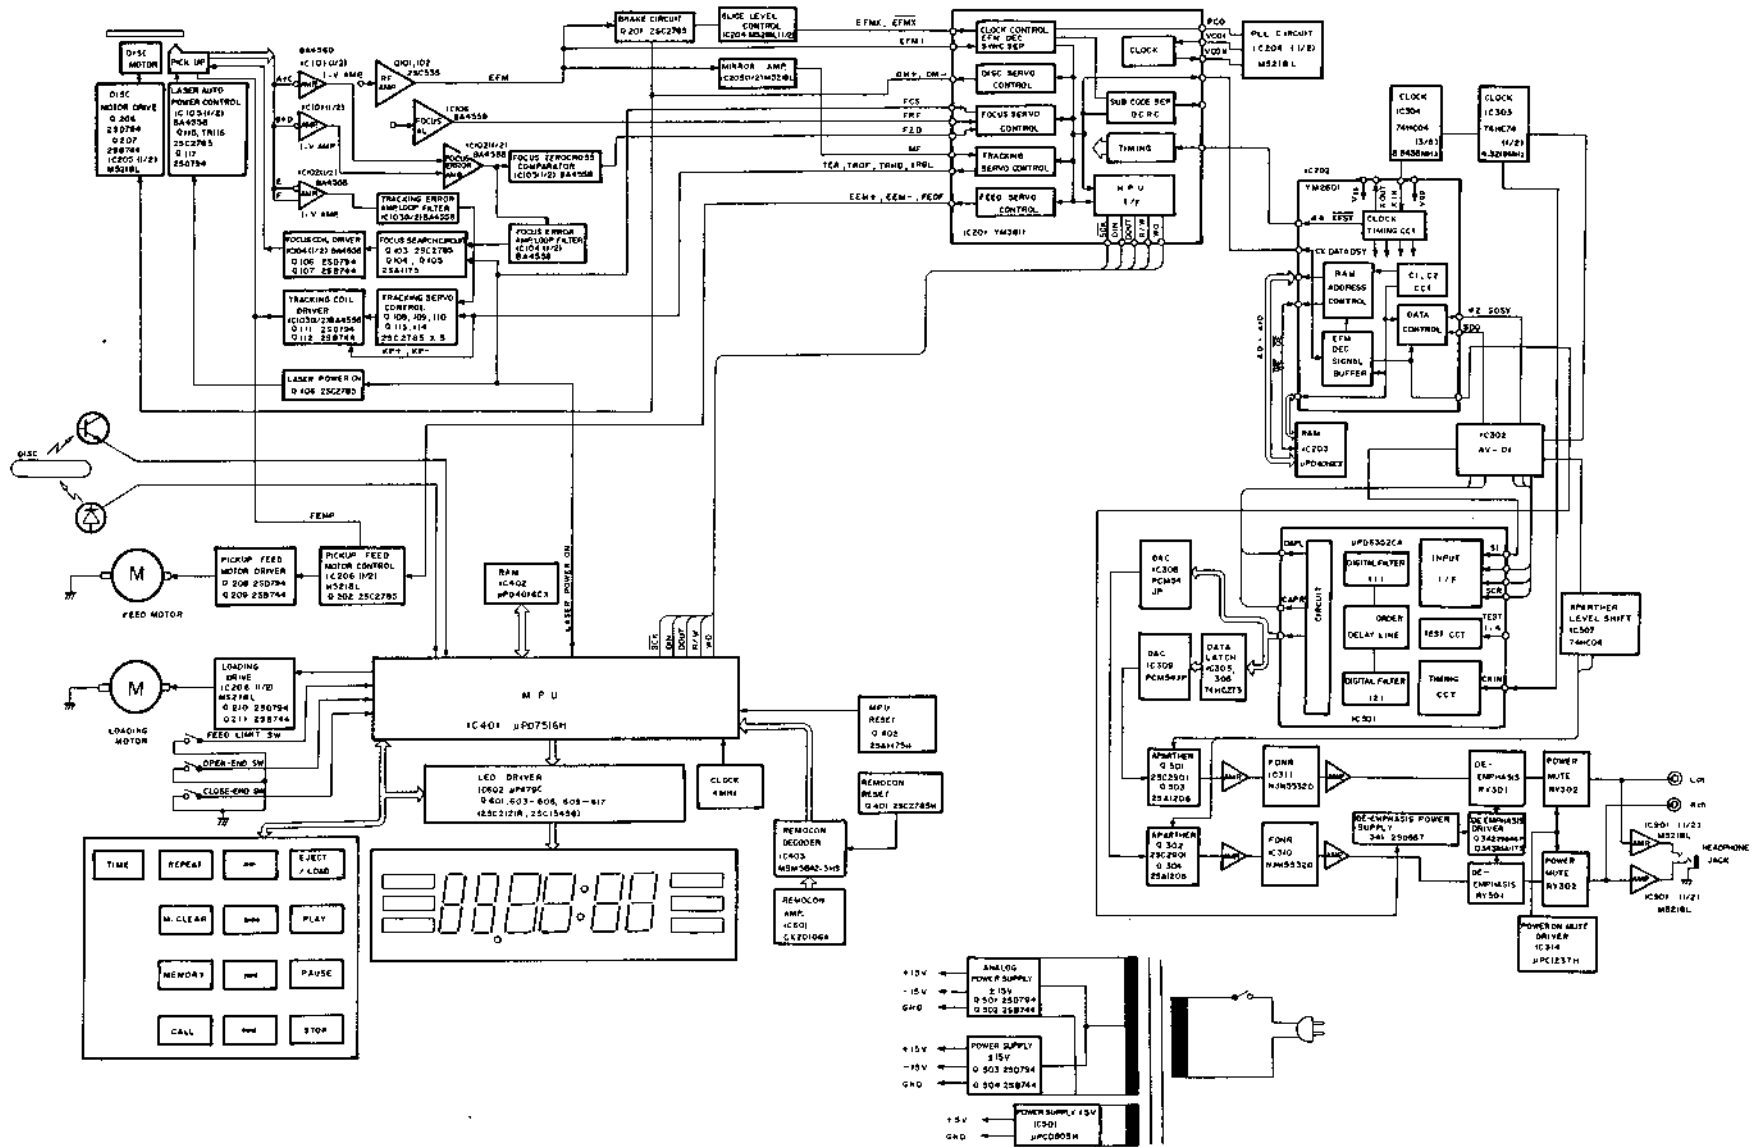

10. SPECIFICATIONS

■ Main Unit

System Compact Disc digital audio
Signal Readout Optical (semiconductor laser)
Error Correction CIRC principle
Number of Channels 2 channels, stereo
Sampling Frequency 44.1 kHz
Quantization 16 bit linear
Disc Rotational Velocity Approx 200 to 500 rpm
(constant linear velocity)
Wow-and-Flutter Below measurement limit
Frequency Response 5 – 20,000 Hz ± 0.5 dB
Signal-to-Noise Ratio Better than 100dB
(IHF A-WTD)
Dynamic Range Better than 93 dB
Total Harmonic Distortion 0.004%
(1kHz)
Total Harmonic Distortion + Noise (1 kHz) 0.0055%
Channel Separation Better than 94 dB
Output (Line 1kHz 0dB) 2.5V/220 Ω
(Headphone 1kHz, 0dB) Approx. 35mW into 40 Ω
Power Requirements 120, 220, 240 or
110-120/220 – 240V
AC, 50/60 Hz
(According to country of sale)
Power Consumption 40 W max.
Dimensions 430 (W) x 100 (H) x 322 (D) mm
16-15/16 (W) x 3-15/16 (H) x 12-11/16 (D) inches
Approximate Weight 7.1 kg, 15 lbs., 10 oz.

■ Remote Control Unit (RM-4CD)

Principle Infrared Pulse system
Power Supply 3V DC (1.5 V x 2)
Dimensions 50 (W) x 19 (H) x 162 (D) mm
2 (W) x 3/4 (H) x 6-3/8 (D) inches
Approximate Weight . . 100 g, 3-1/2 oz (including batteries)

- Specifications and design are subject to change for further improvement without notice.