

AKAI

TAPE ERASER

MODEL **ATE-7**



The Akai ATE-7 Tape Eraser is so compactly designed and yet it has powerful erasing capability so that you can erase the tapes from the 3" reel to 10½" reel.

The special feature of this tape eraser is of its Finger Touch Control. By depressing the Reel Spindle downward, it automatically comes out from its recessed position and the same time it turns the power "ON" and the red light indicates the tape eraser is ready for use.

It may be impossible to erase the pre-recorded material on a tape perfectly by your tape recorder. However, it is possible to erase every thing on the tape at a time with the ATE-7 Tape Eraser and the erased tape will be as good as a brand-new tape.

SPECIFICATIONS

POWER INPUT	:	100/117 Volts, 50/60 Cycles
OUTPUT	:	500 W
ERASING AREA	:	3" reel to 10½" reel
DIMENSION	:	4" × 5⅞" × 3"
WEIGHT	:	5.7 Lbs.
FUSE	:	5 Amperes

HOW TO USE

1. Connect the Power Cord furnished with the tape eraser to the AC INPUT on the Tape Eraser and insert the plug on the other end of the cord into an AC Outlet. Depress the Reel Spindle downward to put the power "ON" and use the spindle to mount a tape reel.
2. Mount the tape reel on the spindle. Turn the tape reel slowly 3~4 times in either direction to erase the material recorded on it. Remove the tape reel from the reel spindle slowly before turning the power "OFF".
3. To turn the power "OFF" depress the reel spindle down all the way until it completely disappears from the surface of the tape eraser.

NOTE: When tape reel is on the tape eraser, refrain from turning off the power in order to prevent popping sound remaining on the tape.