
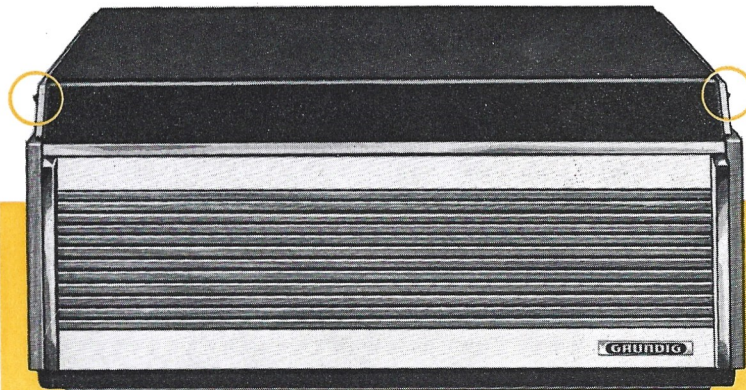


GRUNDIG

TK 600 HiFi TS 600 HiFi

Koffertonbandgerät mit Leistungsendstufen und Lautsprechern. Die kleine HiFi-Anlage für unterwegs.

Schatulle mit Hörer-Endstufen. Die ideale Ergänzung stationärer HiFi-Anlagen.

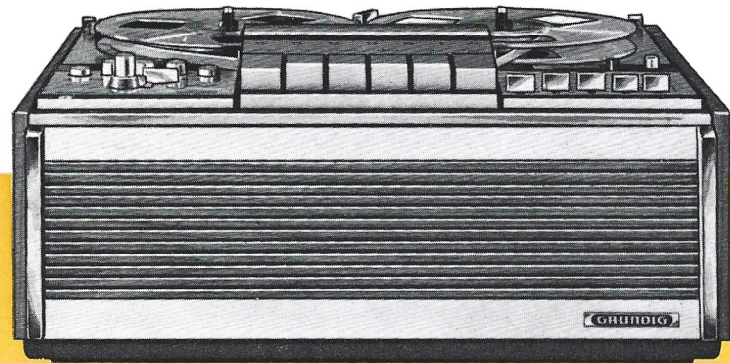

Allgemeines

Das Gerät ist liegend oder stehend spielfähig. Wenn nicht anders erwähnt, so beziehen sich Angaben wie: „hinten“ oder „unten“ auf ein liegend betriebenes Gerät.

Beim Betrieb des Gerätes ist der Deckel durch Drücken der beiden seitlichen Schnäpper zu öffnen, hochzuklappen und abzunehmen. Ferner ist das Gerät so aufzustellen, daß der Motor durch das Gitter auf der Unterseite Frischluft ansaugen kann. Bei Betrieb in geschlossenen Regalwänden oder in Konzertschränken ist auf ausreichende Belüftung zu achten (eventuell Fachdeckel offen lassen).

Netzanschluß und Zubehöranschlüsse

Das Netzkabel, Anschlußbuchsen für Zubehör und das Typenschild befinden sich in einem Fach auf der Rückseite des Gerätes. Der Fachdeckel ist durch Drücken der beiden Schnäpper zu öffnen und läßt sich abnehmen. Da es im Stehend-Betrieb des Gerätes besser aussieht, können alle Anschlußkabel auch bei geschlossenem Deckel und eingeschwenktem Griff nach unten herausgeführt werden.

Bevor Sie Ihr Gerät an die Steckdose anschließen, ist zu prüfen, ob Spannung und Stromart in Ihrer Wohnung mit den Angaben des Typenschildes und der Einstellung des Gerätes (Netzspannungs- und Frequenzwähler am Boden des Gerätes) übereinstimmen. Bei der ersten Inbetriebnahme richten Sie sich bitte nach den Angaben auf der Verpackung. Soll das Geräte an anderer Spannung oder Frequenz betrieben werden, beachten Sie bitte erst die Seiten 28/29.

6

General Information

Your TK/TS 600 may be operated in horizontal as well as in vertical position. If not otherwise pointed out, indications such as "at top" or "at bottom" are referred to a recorder being in horizontal position.

Before operation, remove lid of your recorder by lightly depressing the two clips on either side of the lid and lifting it upwards. Always place your machine so that the ventilation grill in the base is not obstructed so that cooling air can reach the motor. When operating the machine in consoles, make sure the machine is sufficiently cooled, if necessary open lid of the compartment containing the machine.

Mains Connection and Connecting Sockets for Accessories

The mains cord and the sockets for accessory connection are to be found in a compartment in the rear of the machine. The lid of the compartment may be opened and removed by depressing the two clips on either side of it. When the machine is operated in vertical position, it looks better to let the lid of the compartment on its place and to lead out the connecting cables through the cutout provided for this purpose (the handle must not be swung out).

Before connecting your recorder to a mains supply please check that your local voltage and frequency are correct for the setting of the machine. The mains supply requirements of your machine are shown on the outside of the packing carton. If this differs from your local supply then please look up pages 28/29 for further details.