


Service Manual

Dolby NR-Equipped
Stereo Cassette Deck

Cassette Deck
RS-B655



Color

(K)... Black Type

Area

Country Code	Area	Color
(E, E5)	Continental Europe.	(K)
(EB)	Great Britain.	
(EG)	F.R. Germany and Italy	



* HX Pro headroom extension originated by Bang Olufsen and manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY", the double-D symbol, and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

MECHANISM SERIES: AR350

SPECIFICATIONS

CASSETTE DECK SECTION

Deck system	Stereo cassette deck
Track system	4-track, 2-channel
Heads	
Rec/play	Permalloy head
Erasing	Double-gap ferrite head
Motors	
Capstan	Quartz direct drive DC motor
Reel table drive	DC motor
Recording system	AC bias
Bias frequency	80 kHz
Erasing system	AC erase
Tape speed	4.8 cm/sec. (1 7/8 ips)
Frequency response	
NORMAL	20 Hz~18 kHz
CrO ₂	20 Hz~16 kHz (DIN)
METAL	20 Hz~18 kHz (DIN)
METAL	20 Hz~17 kHz (DIN)
METAL	20 Hz~19 kHz
METAL	20 Hz~18 kHz (DIN)
S/N (signal level--max recording level, CrO ₂ type tape)	
Dolby C NR on	74 dB (CCIR)
Dolby B NR on	66 dB (CCIR)
Dolby NR off	56 dB (A weighted)

Wow and flutter 0.05% (WRMS)
±0.15% (DIN)

Fast forward and rewind times

Approx. 90 seconds with C-60 cassette tape

Input sensitivity and impedance

MIC 0.25 mV/400Ω~10 kΩ
LINE 60 mV/47 kΩ

Output voltage and impedance

LINE 400 mV/800Ω
HEADPHONES 125 mV/8Ω
(8Ω~600Ω)

GENERAL

Power consumption 21 W

Power supply

For Great Britain AC 240V, 50/60Hz

For others AC 220V, 50/60Hz

Dimensions (W × H × D)

430 × 135 × 290 mm
(16 13/16" × 5 1/8" × 11 13/32")

Weight

4.9 kg (10.8 lb.)

Note:

Specifications are subject to change without notice.
Weight and dimensions are approximate

Technics

Matsushita Electric Industrial Co., Ltd.

Central P.O. Box 288, Osaka 530-91, Japan

CONTENTS


	Page
CONNECTIONS	2
ACCESSORIES	2
FRONT PANEL CONTROLS AND FUNCTIONS	3, 4
RECORDING WITH HIGH TONE QUALITY	5
OUTLINE OF THE DIRECT DRIVE MOTOR SYSTEM	6
DISASSEMBLY INSTRUCTIONS	7~10
MEASUREMENT AND ADJUSTMENT METHODS	11~13
TERMINAL FUNCTION OF IC'S	14, 15
BLOCK DIAGRAM	16, 17
INTERNAL CONNECTION OF FL	18
SCHEMATIC DIAGRAM	19~26

	Page
TROUBLESHOOTING OF DIRECT DRIVE MOTOR	26
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	27
PRINTED CIRCUIT BOARDS	28~32
WIRING CONNECTION DIAGRAM	33
REPLACEMENT PARTS LIST	34~36
EXPLODED VIEWS	37~40
REPLACEMENT PARTS LIST	41
RESISTORS & CAPACITORS	42~44
PACKING	44

* TECHNICAL INFORMATION

* This technical information is located on pp 45-51 of the RS-B555 Service Manual (Order No. AD8907231C5). Therefore, refer to that Service Manual.

CONNECTIONS

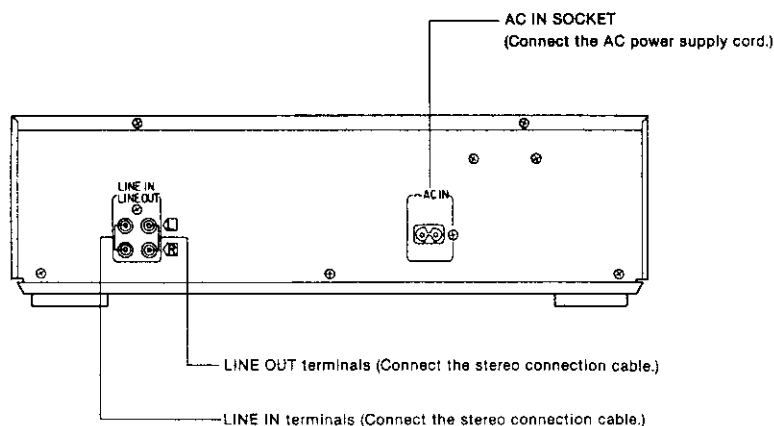


ACCESSORIES

• Stereo connection cables 2
[SJP2249-3]

• AC power supply cord 1
[SFDAC05E03: (E, E5, EG)]
[SJA193-1: (EB)]

FRONT PANEL CONTROLS AND FUNCTIONS

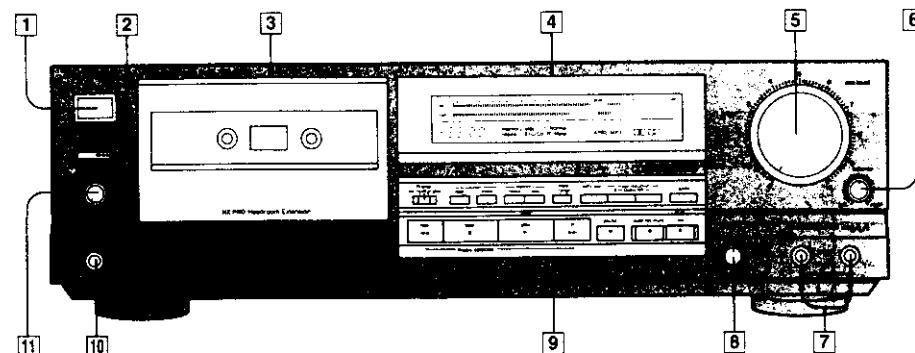

1 Power "standby $\downarrow$ /on" switch (power "standby $\downarrow$ /on")

This switch switches ON and OFF the secondary circuit power only. The unit is in the "standby" condition when this switch is set to the "standby ($\downarrow$)" position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

2 Eject button (Δ eject)

This button can be used to open the cassette holder.

3 Cassette holder

4 Display section

5 Recording-level control (rec level)

This control can be used to regulate the recording level and the peak level.

6 Recording-balance control (balance)

Use this control to balance the left and right sound levels during recording.

7 Microphone jacks (mic)


8 Bias-adjustment control (bias adjust)

The frequency response for each tape type can be equalized by using this control.

9 Operation section

10 Headphones jack (phones)

11 Headphones volume control (phones level)

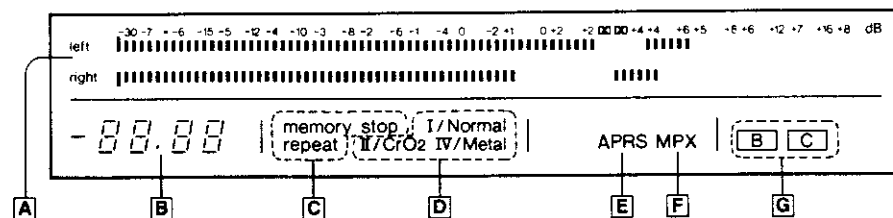

A Input level meter (peak level)

During playback, this meter indicates the level of the recorded sound. During recording, it indicates the level being recorded, adjusted by the recording-level control.

B Tape/Linear counter

Indicates the amount of tape movement or elapsed time.

C Memory-mode indicators (memory stop/repeat)

Each indicator illuminates to show which of the memory mode was set by the memory-mode buttons.

D Tape-select indicators

The type of tape being used will be automatically detected and the indicator will illuminate.

E APRS indicator (APRS)


Illuminates to indicate that the "APRS" is set to "on" in the recording stand-by mode.

F Multiplex filter indicator (MPX)

Illuminates to indicate that the multiplex filter is set to "on".

G Dolby noise-reduction indicators (B, C)

Each indicator illuminates to show the type of Dolby noise-reduction system selected by pressing one of the Dolby noise-reduction buttons.

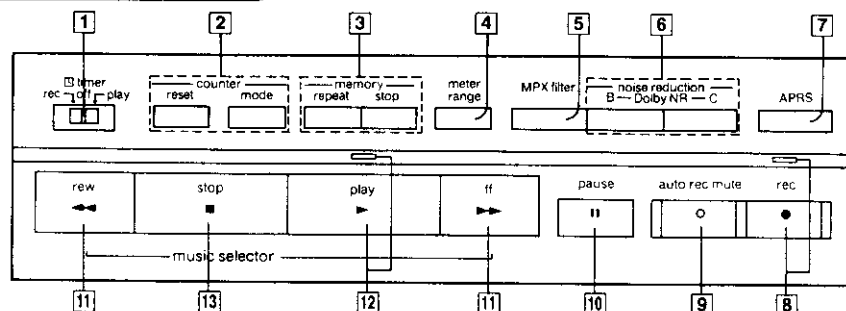**1 Timer switch (timer)**

This switch is used to automatically begin a tape recording or tape playback at a certain time, selected by a timer (not included).

2 Counter buttons (counter reset/mode)

mode: This button can be used to select the tape/linear counter indication.

reset: This button can be used to reset the tape/linear counter indication to "0000".

3 Memory-mode buttons (memory repeat/stop)

stop: This button can be used to rewind the tape to the preset "0000" point when the rewind (◀◀) button is pressed.

repeat: This button can be used to set this unit to the "A-B repeat" mode.

4 Meter-range selector (meter range)

This selector can be used to select the meter-range display of the input level meter.

5 Multiplex filter switch (MPX filter)

This switch can be used during the recording of an FM stereo broadcast that employs Dolby noise reduction so as to prevent misoperation of the Dolby noise reduction.

6 Dolby noise-reduction buttons (noise reduction)

These buttons are used to reduce the hissing noise heard from the tape. This unit is provided with both the B-type and C-type noise-reduction systems.

7 APRS button (APRS)

This button can be used to hold the peak level while monitoring the input sound.

The "APRS" can only be used in the recording stand-by mode.

8 Record button and indicator (rec/●)

This button can be used to change the tape deck to the recording stand-by mode.

This indicator illuminates to indicate that this tape deck is in the recording stand-by mode, or is recording.

9 Automatic-record-muting button (auto rec mute/□)

This button can be used to make a silent interval on the tape being recorded on tape deck.

10 Pause button (pause/||)

This button can be used to temporarily stop the tape playback or recording of tape deck.

11 Rewind/fast-forward/search buttons (rew/◀◀/ff/▶▶)

These buttons can be used to fast forward or rewind the tape, or to easily search for the tune's beginning of the tape quickly.

12 Playback button and indicator (play/▶)


This button can be used to start the playback or recording of the cassette.

(The tape will then begin moving in the left-to-right direction.)

When this indicator illuminates steadily, it indicates that this tape deck is in the playback mode or the recording mode. When it flashes continually, this is an indication that this tape deck is in the pause mode or the recording stand-by mode.

13 Stop button (stop/■)

This button can be used to stop tape movement.

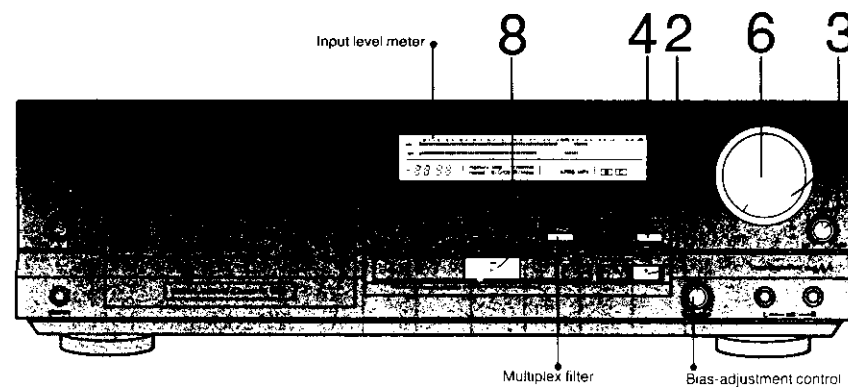RECORDING WITH HIGH TONE QUALITY**APRS function**

Because the dynamic range of cassette tape is narrower than the dynamic range of a digital source, the recording will be too noisy if the recording level setting is too low, and, conversely, the recorded sound will be distorted if the setting is too high.

It was for this reason that it has always been recommended that the signals to be recorded be first (before recording) input to the cassette deck and the recording level then be set while watching the level meter, but, for former conventional level meter equipped with the peak-hold function, it was necessary to re-adjust and input the signals again if the level setting was too high or too low.

This unit, however, is equipped with the **APRS: Advanced Precise Recording-level System**, which holds and displays the maximum peak of the input signal level, so that once the peak level of the source is held, there is no necessity to re-input the source signals, and the optimum recording level can be set.

•The APRS function can be used only during the recording-standby mode.

1 Prepare for recording as described in steps 1 to 6 of the "Recording" section.**2 [rec] Press the record button.**


(The recording indicator will illuminate and the playback indicator will flash continuously; the unit will be in the recording stand-by mode.)

3 [rec level] / [balance] Set the recording-level control and the recording-balance control to the suitable position for the sound source.**4 [APRS] Press the APRS button.**

(The APRS indicator will illuminate.)

5 Play the sound source to be recorded, from beginning to end.

[The peak level (the highest level of the input signal) of the sound source will be displayed and held on the input-level meter.]

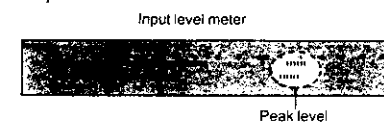

Note:

The range within which the peak level can be held is -8 dB to +16 dB. Note that the APRS indicator will flash continuously if the peak level of the sound source is input at a level that exceeds the maximum recording level (+16 dB). If that happens, press the APRS button to cancel the APRS function, and then reset the recording level and set the APRS once again. Also note that the peak level cannot be held to less than -8 dB.

6 [rec level] Using the recording-level control, adjust the peak level to the desired setting.

The peak level will move to the right when the recording-level control is turned to the right, and will move to the left when the recording-level control is turned to the left.

•The recording-balance control cannot be used to adjust the peak level.


7 Begin playing the sound source from the beginning once again.**8 [play] Press the playback button.**

(The playback indicator will illuminate steadily, and the recording will begin.)

The APRS indicator will switch OFF, and the indication of the input-level meter will return to the ordinary peak-hold mode.

■ OUTLINE OF THE DIRECT DRIVE MOTOR SYSTEM








The capstan motor is actuated by the DD motor digital servo system. The FG pulse is generated after the detection of the zero crosspoint, and the reference signal generated from the quartz oscillator is compared with this FG pulse. From this comparison, the accelerated and reduced speed pulses are generated, causing the driving coil to function.






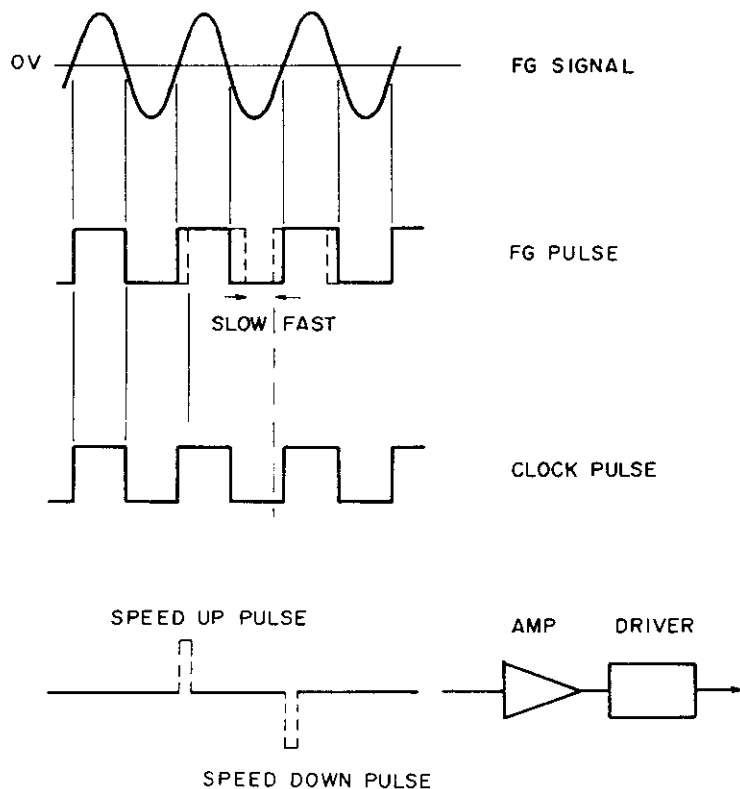








■ DISASSEMBLY INSTRUCTIONS

"ATTENTION SERVICER"




Some chassis components may have sharp edges. Be careful when disassembling and servicing.

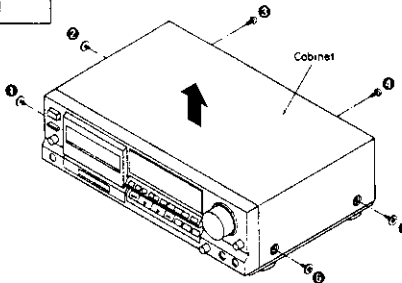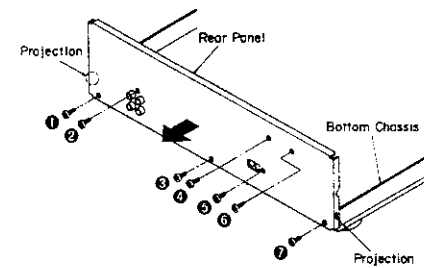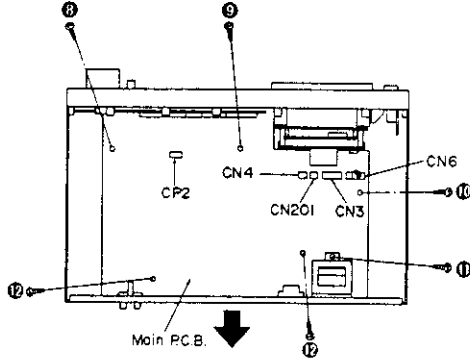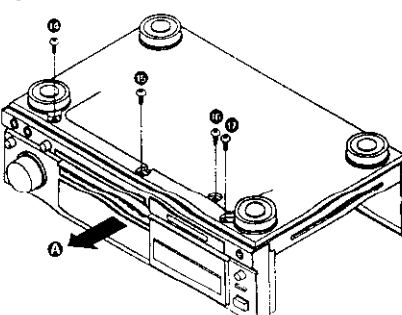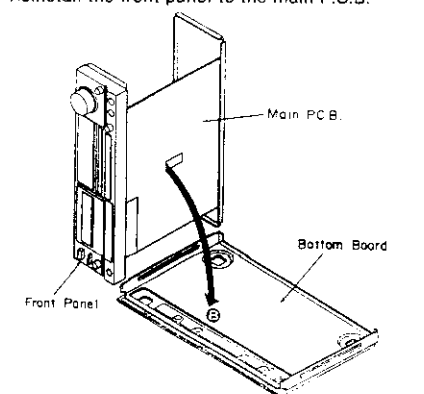Ref. No. 1	Removal of the cabinet	Ref. No. 2	Removal of the main P.C.B.
Procedure 1	 • Remove the 6 screws (1~6).	Procedure 1→2	1. Remove the 7 screws (1~7). 2. Remove the rear panel from the projection of the bottom chassis. 
	3. Remove the 6 screws (8~13). 4. Remove the 1 connector (CP2). 5. Remove the 4 flat cables (CN3, CN4, CN6, CN201). 6. Remove the main P.C.B. in the direction of the arrow.		
	How to remove the flat cable • Pull out the flat cable while pressing the connector.  1. Lift the connector. 2. Pull out the flat cable. 		
	How to check the main P.C.B. • When checking the soldered surfaces of main P.C.B. and replacing the parts, do as show. 1. Remove the 9 screws (1, 9, 7~8) in above figure. 2. Remove the 4 screws (10~13). 3. Remove the front panel in the direction of the arrow. 		4. Remove the bottom board in the direction of the arrow ②. 5. Reinstall the front panel to the main P.C.B. 

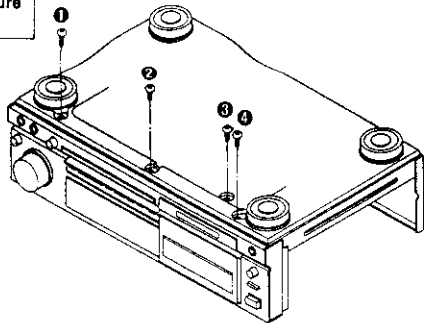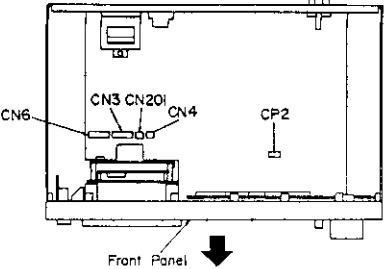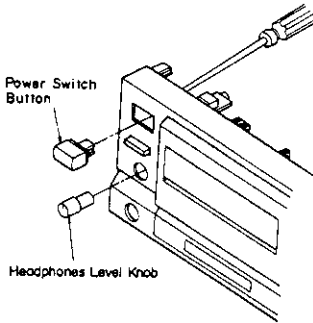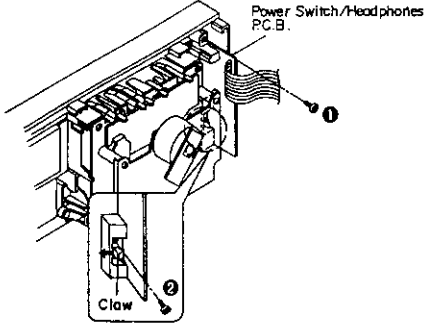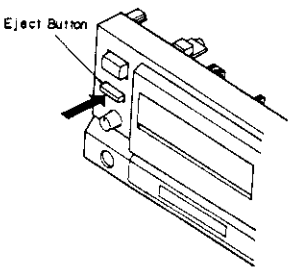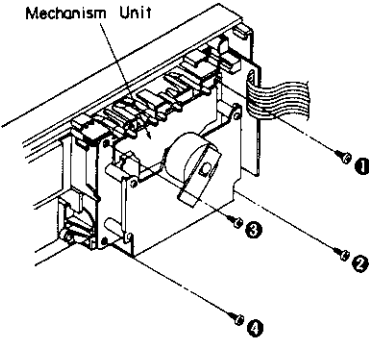
Ref. No. 3 Removal of the front panel Procedure 1→3  1. Remove the 4 screws (①~④).	2. Remove the 1 connector (CP2). 3. Remove the 4 flat cables (CN3, CN4, CN6, CN201).  4. Remove the front panel in the direction of the arrow.
Ref. No. 4 Removal of the power switch/ headphones P.C.B. Procedure 1→3→4  1. Remove the power switch button by pushing it from behind the front panel. 2. Pull out the headphones level knob.	Power Switch/Headphones P.C.B.  3. Remove the 2 screws (①, ②). 4. Release the 1 claw.
Ref. No. 5 Removal of the mechanism unit Procedure 1→3→5  1. Push the eject button.	Mechanism Unit  2. Remove the 4 screws (①~④).

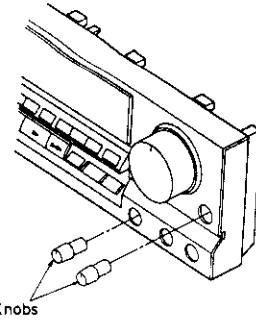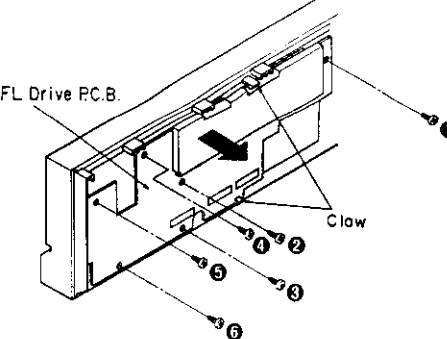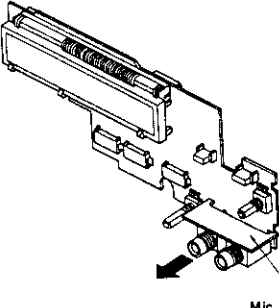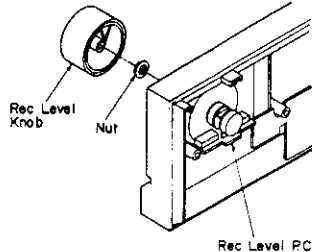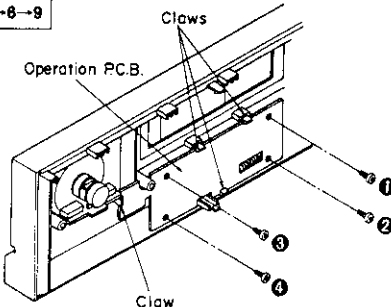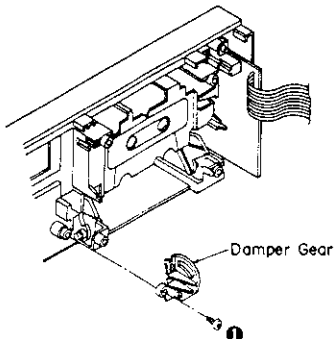Ref. No. 6 Removal of the FL drive P.C.B. Procedure 1→3→6  1. Pull out the 2 knobs.	FL Drive P.C.B.  2. Remove the 6 screws (①~⑥). 3. Release the 2 claws. 4. Remove the FL drive P.C.B. in the direction of the arrow.
Ref. No. 7 Removal of the mic Jack P.C.B. Procedure 1→3→6→7  • Remove the mic Jack P.C.B. in the direction of the arrow.	Ref. No. 8 Removal of the rec level P.C.B. Procedure 1→3→8→8  1. Pull out the rec level knob. 2. Remove the 1 nut.
Ref. No. 9 Removal of the operation P.C.B. Procedure 1→3→8→9  1. Remove the 4 screws (①~④). 2. Release the 4 claws.	Ref. No. 10 Removal of the damper gear Procedure 1→3→5→10  • Remove the 1 screw (①).


Ref. No. 11	Removal of the cassette holder
Procedure 10→11	1. Remove the rib in the direction of the arrow. 2. Remove the cassette holder spring. 3. Pull out the cassette holder in the direction of the arrow.

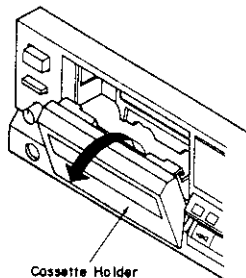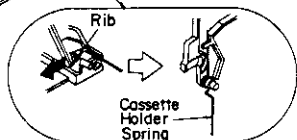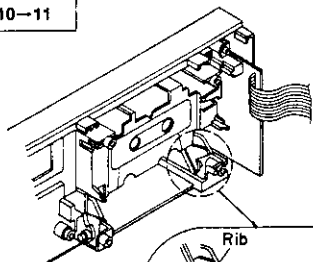

Ref. No. 12	Removal of the eject lever and eject button
Procedure 1→3→4→5→12	

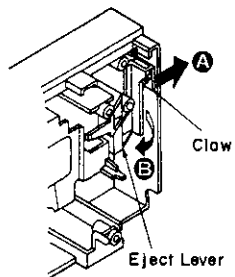

1. Push the claw in the direction of the arrow ④.
2. Remove the eject lever in the direction of the arrow ⑤.

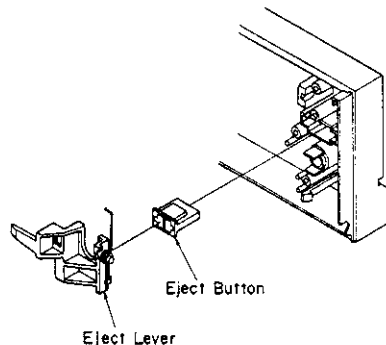

3. Pull out the eject button.

MEASUREMENT AND ADJUSTMENT METHODES

Measurement Condition

- Rec. level control; Maximum
- Timer switch; Off
- MPX filter switch; off
- Bias-adjustment VR: Center

Measuring instrument

- EVM (Electronic Voltmeter)
- Oscilloscope
- Digital frequency counter
- AF oscillator

Test tape


- Head azimuth adjustment (8kHz, -20dB); QZZCFM
- Tape speed adjustment (3kHz, -10dB); QZZCWAT
- Playback frequency response (315Hz, 12.5kHz, 10kHz, 8kHz, 4kHz, 1kHz, 250Hz, 125Hz, 63Hz, -20dB); QZZCFM

- Dolby NR switch; Off
- Make sure heads are clean
- Make sure capstan and pressure roller are clean
- Judgeable room temperature $20 \pm 5^\circ\text{C}$ ($68 \pm 9^\circ\text{F}$)

- ATT (Attenuator)
- DC voltmeter
- Resistor (600Ω)

- Playback gain adjustment (315Hz, 0dB); QZZCFM
- Overall frequency response, Overall gain adjustment
Normal reference blank tape; QZZCRA
CrO₂ reference blank tape; QZZCRX
Metal reference blank tape; QZZCRZ

Adjustment Points

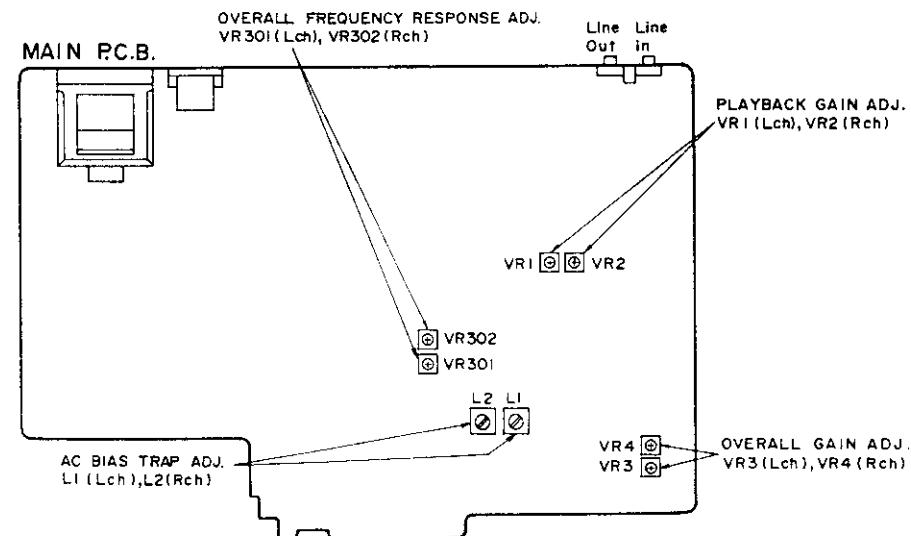

HEAD AZIMUTH ADJUSTMENT

1. Playback the azimuth adjustment portion (8 kHz, -20 dB) of the test tape (QZZCFM). Vary the azimuth adjusting screw until the outputs of the L-CH and R-CH are maximized and the lissajous waveform, as illustrated, approaches 0 degrees.

Note: If L-CH and R-CH are not maximized at the same point, adjust to the point where the levels of each channel are maximized and equal.

2. Perform the same adjustment in the play mode.
3. After the adjustment, apply screwlock to the azimuth adjusting screw.

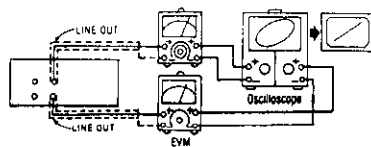


Fig. 1




Fig. 2

PLAYBACK GAIN ADJUSTMENT

1. Playback the gain adjusted portion (315 Hz, 0 dB) of the test tape (QZZCFM).
2. Adjust VR1 (L-CH) and VR2 (R-CH) so that the output is within the standard value.

Standard value: $0.4V \pm 0.5dB$




Fig. 3

PLAYBACK FREQUENCY RESPONSE

1. Playback the frequency response portion (315Hz, 12.5kHz~63Hz, -20dB) of the test tape (QZZCFM).
2. Assume that the frequency response is within the range shown in Fig. 6 for both L-CH and R-CH.




Fig. 4


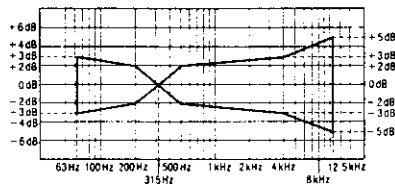


Fig. 5

AC BIAS TRAP ADJUSTMENT

1. Insert the Metal blank test tape (QZZCRZ) and set the unit to the Record mode.
2. Adjust L1 (L-CH) [L2 (R-CH)] so that the output voltage between TP1 (TP2) and GND is less than the minimum value.

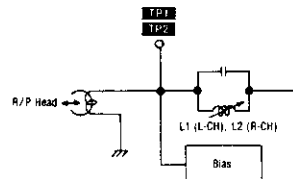

OVERALL FREQUENCY RESPONSE

1. Insert the normal blank test tape (QZZCRA) and set the unit to the record pause mode.
2. Apply a reference input signal (1kHz, -24dB) through an attenuator.
3. Attenuate the signal by 20dB and adjust the frequency from 50Hz~10kHz.
4. Record the frequency sweep.
5. Playback the recorded signal and assure that it is within the range shown in Fig. 8 in comparison to the reference frequency (1kHz).

6. If it is not within the standard range, adjust VR301 (L-CH) and VR302 (R-CH) so that the frequency level is within the standard range.

- Level up in high frequency rangeIncrease the bias current.
- Level down in high frequency rangeDecrease the bias current.

7. Repeat steps 2~6 above using the CrO₂ tape (QZZCRX) and the metal tape (QZZCRZ) increasing the frequency range to 12.5kHz (50Hz~12.5kHz).
8. Assume that the level is within the range shown in Fig. 9.




Fig. 10

Normal Overall frequency response chart (NR OUT)

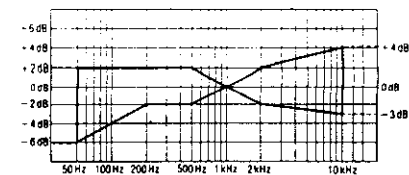


Fig. 8

CrO₂ Metal Overall frequency response chart (NR OUT)

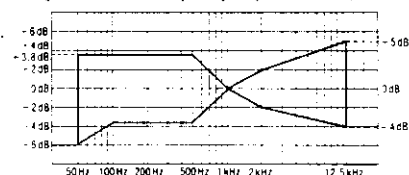


Fig. 9

OVERALL GAIN ADJUSTMENT

1. Insert the normal blank test tape (QZZCRA) and set the unit to the record pause mode.
2. Apply a reference input signal (1kHz, -24dB). Attenuate the output so that its level becomes 0.4V.
3. Record this input signal.
4. Playback the signal recorded in step 3 above, and assure that the output is within the standard value.
5. If it is not within the standard value, adjust VR3 (L-CH) and VR4 (R-CH).
6. Repeat the step 2~5 above until the output is within the standard value.

Standard value: $0.4V \pm 0.5dB$




Fig. 11

■ TERMINAL FUNCTION OF IC'S

• IC901 (MB88511-224N): MICROCOMPUTER (This microcomputer is used for mechanical operation.)

Pin No.	Mark	I/O Division	Function
1	DMT	O	Line out mute signal ("H"...ON, "L"...OFF)
2	RMT	O	REC AMP mute signal ("H"...ON, "L"...OFF)
3	BOS	O	BIAS OSC ON/OFF control signal ("H"...OFF, "L"...ON)
4	REC	O	REC LED ON/OFF control signal ("H"...OFF, "L"...ON)
5	PLAY	O	PLAY LED ON/OFF control signal ("H"...OFF, "L"...ON)
6	EJECT F	O	Power eject motor open control signal ("H"...OPEN, "L"...CLOSE/STOP)
7	EJECT R	O	Power eject motor close control signal ("H"...CLOSE, "L"...OPEN/STOP)
8	CAPM	O	Capstan motor ON/OFF control signal ("H"...OFF (POWER OFF or ABNORMAL CONDITION), "L"...ON)
9	SOL1	O	Trigger solenoid ON/OFF control signal ("H"...OFF, "L"...ON)
10	SOL2	O	Brake solenoid ON/OFF control signal ("H"...OFF, "L"...ON)
11	SOL2C	O	Brake solenoid hold ON/OFF control signal ("H"...OFF, "L"...ON (FF/REW/MS))
12	RP (REEL PULSE)	I	Reel pulse signal
13	RMR	O	Reel motor reverse control signal ("H"...REW, "L"...STOP/PLAY/FF)
14	RMF	O	Reel motor forward control signal ("H"...FF/PLAY, "L"...STOP/REW)
15	OSC	I	Single capstan/Dual capstan select signal ("H"...DUAL CAPSTAN, "L"...SINGLE CAPSTAN)
		O	Calibration OSC circuit ON/OFF control signal ("H"...OFF, "L"...ON)
16	Ex	I	Clock OSC terminal (6MHz)
17	X	O	
18	RES	I	Reset signal ("L"...RESET)
19	OSCF	O	Calibration OSC circuit (400Hz/10kHz) select signal ("H"...HIGH FREQ. (10kHz), "L"...LOW FREQ. (400Hz))
20	POF	I	AC POWER detect signal
21	Vss	—	GND


Pin No.	Mark	I/O Division	Function
22	DIRECT	I	CD direct operation det. signal
		O	CD direct/LINE input select control signal ("H"...CD DIRECT, "L"...LINE INPUT)
23	C	O	Dolby NR mode select signal
24	B		
			NR OFF Dolby B Dolby C dbx
			C H H L L
			B H L H L
25	MPX	O	MPX coil ON/OFF control signal ("H"...MPX OFF, "L"...MPX ON)
26	T/S	I	Two head/Three head select signal ("H"...THREE HEAD, "L"...TWO HEAD)
		O	Tape/Source monitor select control ("H"...TAPE MONITOR, "L"...SOURCE MONITOR)
27	HALF	I	Cassette half det. SW terminal ("L"...ON)
28	MODE	I	Mechanism mode SW terminal
29	ARM	I	Auto Rec Mute key signal ("L"...PUSH)
30	AVas	—	Connected to GND
31	AVR	—	Connected to GND
32	AVcc	—	Power supply terminal
33	KEY 1	I	Key SW Input (STOP/FF REW/PLAY/REC/PAUSE/dbx/C/B/MPX/TIMER REC/TIMER PLAY)
34	KEY 2	I	Key SW Input (MEMORY REPEAT/MEMORY STOP/EJECT/MONITOR/CD DIRECT/OSC/TEST/REMOTE A/B)
35	ATS	I	Auto Tape Select SW input (ATSC/ATSM/EJECT OPEN LEAF SW)
36	INH	I	REC INH SW Input (REC INH/EJECT MOTOR LEAF SW)
37	B555	I	Connected to GND
38	DISP	O	Serial data signal of FL display (ACTIVE: "H")
39	MSP	I	Music select det. signal ("H"...NO SIGNAL, "L"...ON SIGNAL)
40	MEMORY PULSE	I	Memory Pulse signal
41	REMOCON	I	Remote control serial data ("L" for 50ms. with counter "0000")
42	Vcc	—	Power supply terminal

• IC551 (HD404302SA07): MICROCOMPUTER (This microcomputer is used for FL meter operation.)

Pin No.	Mark	I/O Division	Function
1	S5	O	Segment signal for FL display
2	S6	O	
3	S7	O	
4	Vdisp	—	Pull down power supply terminal (—Vcc)
5	S8	O	Segment signal for FL display
6	S9	O	
7	S10	O	
8	S11	O	
9	S12	O	
10	S13	O	
11	S14	O	
12	S15	O	
13	S16	O	
14	S17	O	
15	S18	O	Reel pulse signal of tape up reel
16	S19	O	
17	RPT	I	
18	RPS	I	Reel pulse signal of supply reel
19	MP	O	Memory pulse signal ("L" for 50ms. with counter "0000")
20	DISP	I	Serial data signal (ACTIVE: "H")
21	GND	—	GND terminal


Pin No.	Mark	I/O Division	Function
22	AVcc	—	Power supply terminal
23	VR IN	I	Rec level control (VR MAX...+5V)
24	F IN	I	Function key terminal (COUNTER RESET/COUNTER MODE/APRS)
25	SIG L	I	LCH level signal
26	SIG R	I	RCH level signal
27	AVss	—	Connected to GND
28	RESET	I	Reset terminal (with Reset: "H")
29	TEST	I	Test terminal
30	OSC 1	O	Clock OSC terminal (4MHz)
31	OSC 2	I	
32	Vcc	I	Power supply terminal
33	G1	O	Grid signal for FL display
34	G2	O	
35	G3	O	
36	G4	O	
37	G5	O	
38	G6	O	Segment signal for FL display
39	S1	O	
40	S2	O	
41	S3	O	
42	S4	O	

■ BLOCK DIAGRAM

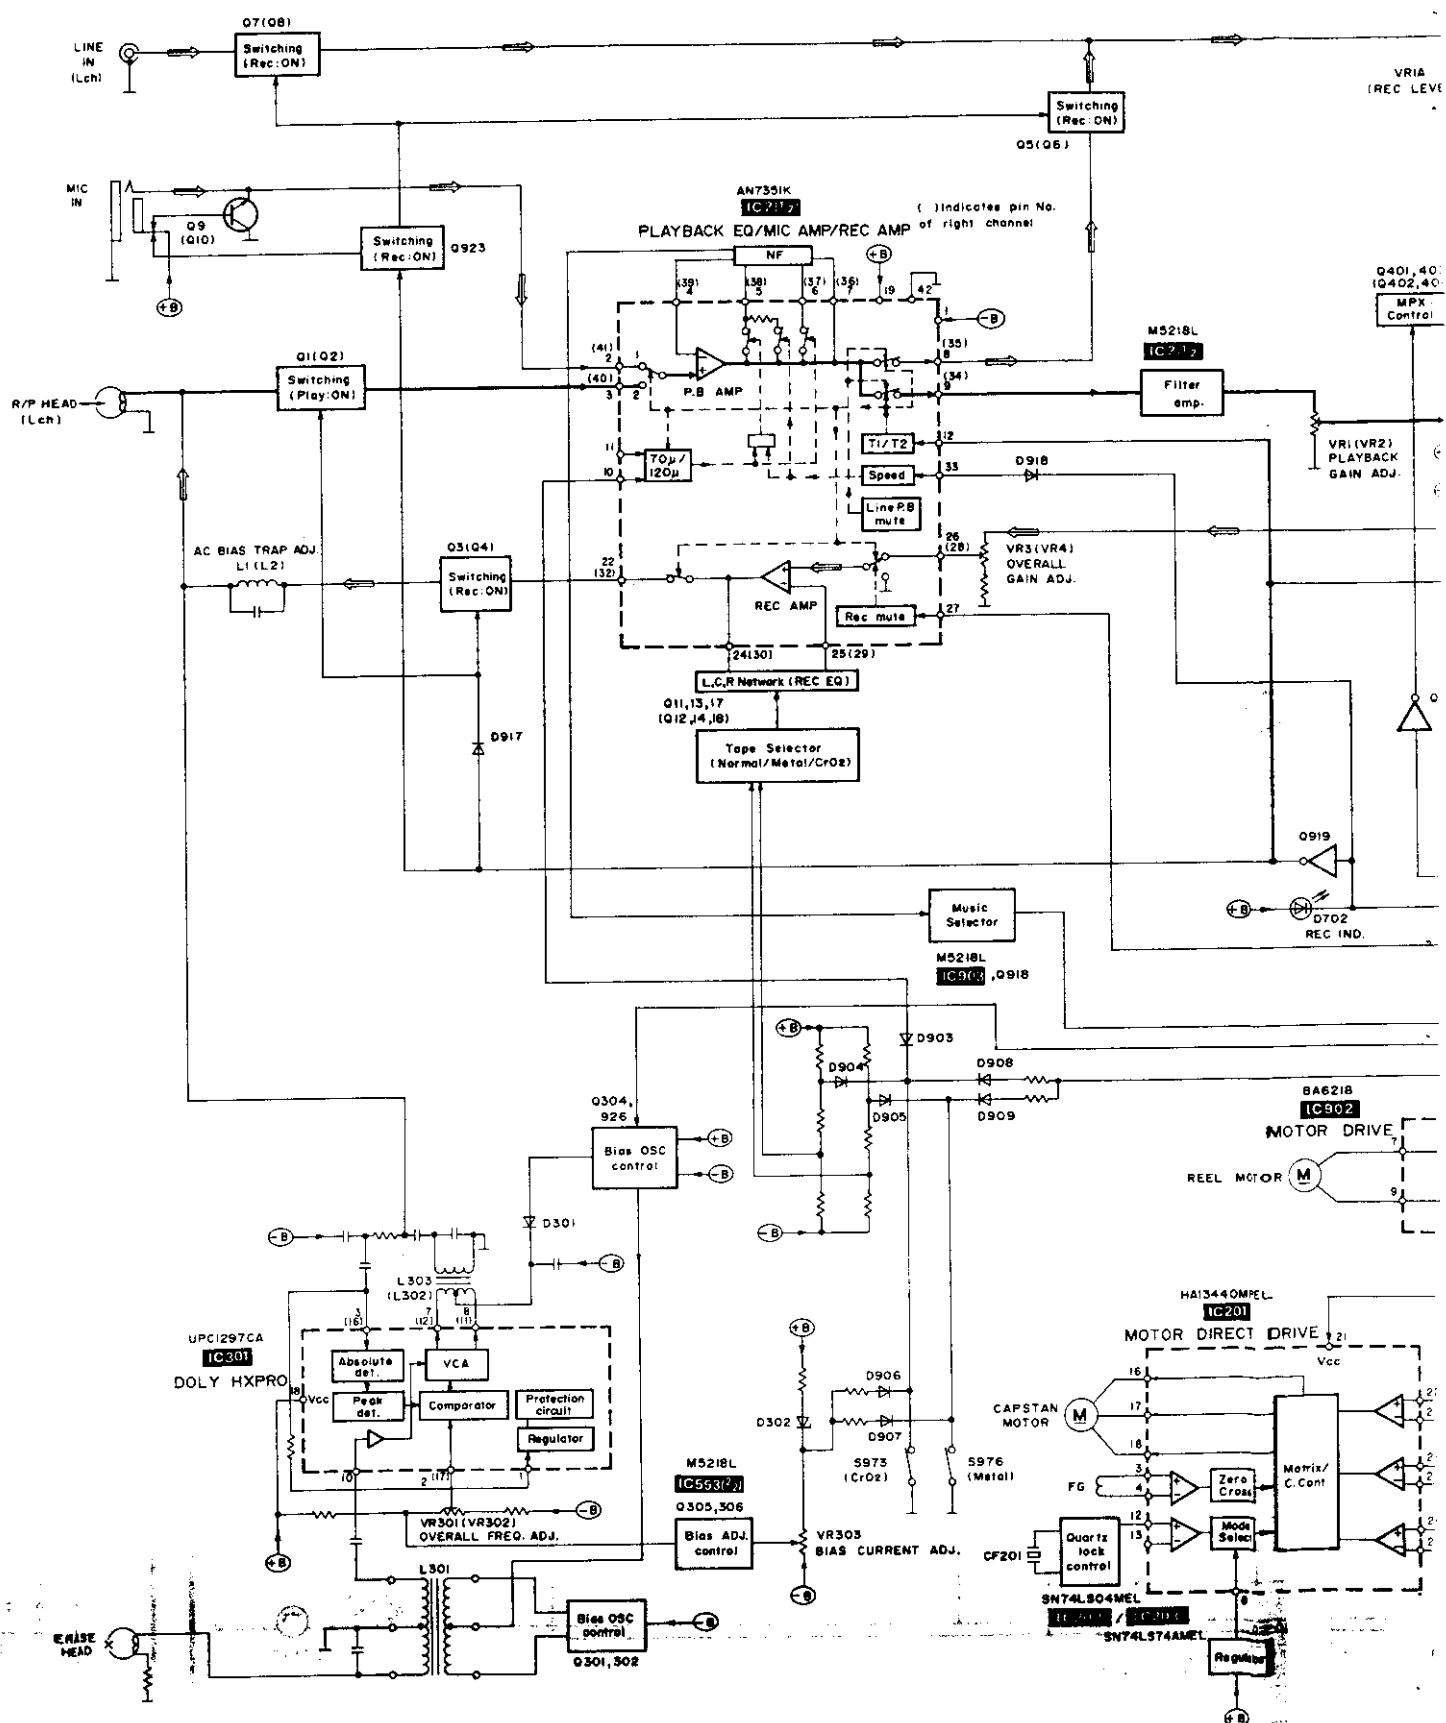

INTERNAL CONNECTION OF FL


- **Grid connection diagram**

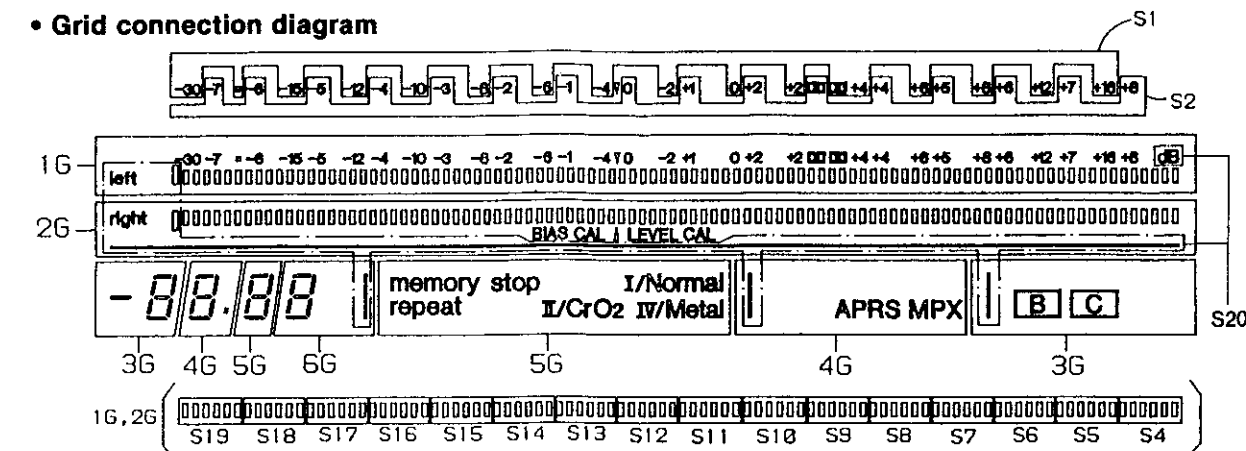

- **Anode connection table**

	1G	2G	3G	4G	5G	6G
S1	S1	LEVEL CAL	-	APRS	-	-
S2	S2	BIAS CAL	-	-	-	-
S3			-	-	-	-
S4			-	-	-	-
S5			-	-	-	-
S6			-	-	memory	-
S7			-	-	repeat	-
S8			-	-	stop	-
S9				-	-	-
S10				-	I / Normal	-
S11			-	MPX	II / CrO ₂	-
S12					IV / Metal	-
S13			a	a	a	a
S14			b	b	b	b
S15			f	f	f	f
S16			g	g	g	g
S17			c	c	c	c
S18			e	e	e	e
S19			d	d	d	d
S20 (dB)	left  dB	right 			-	

- **Pin connection**

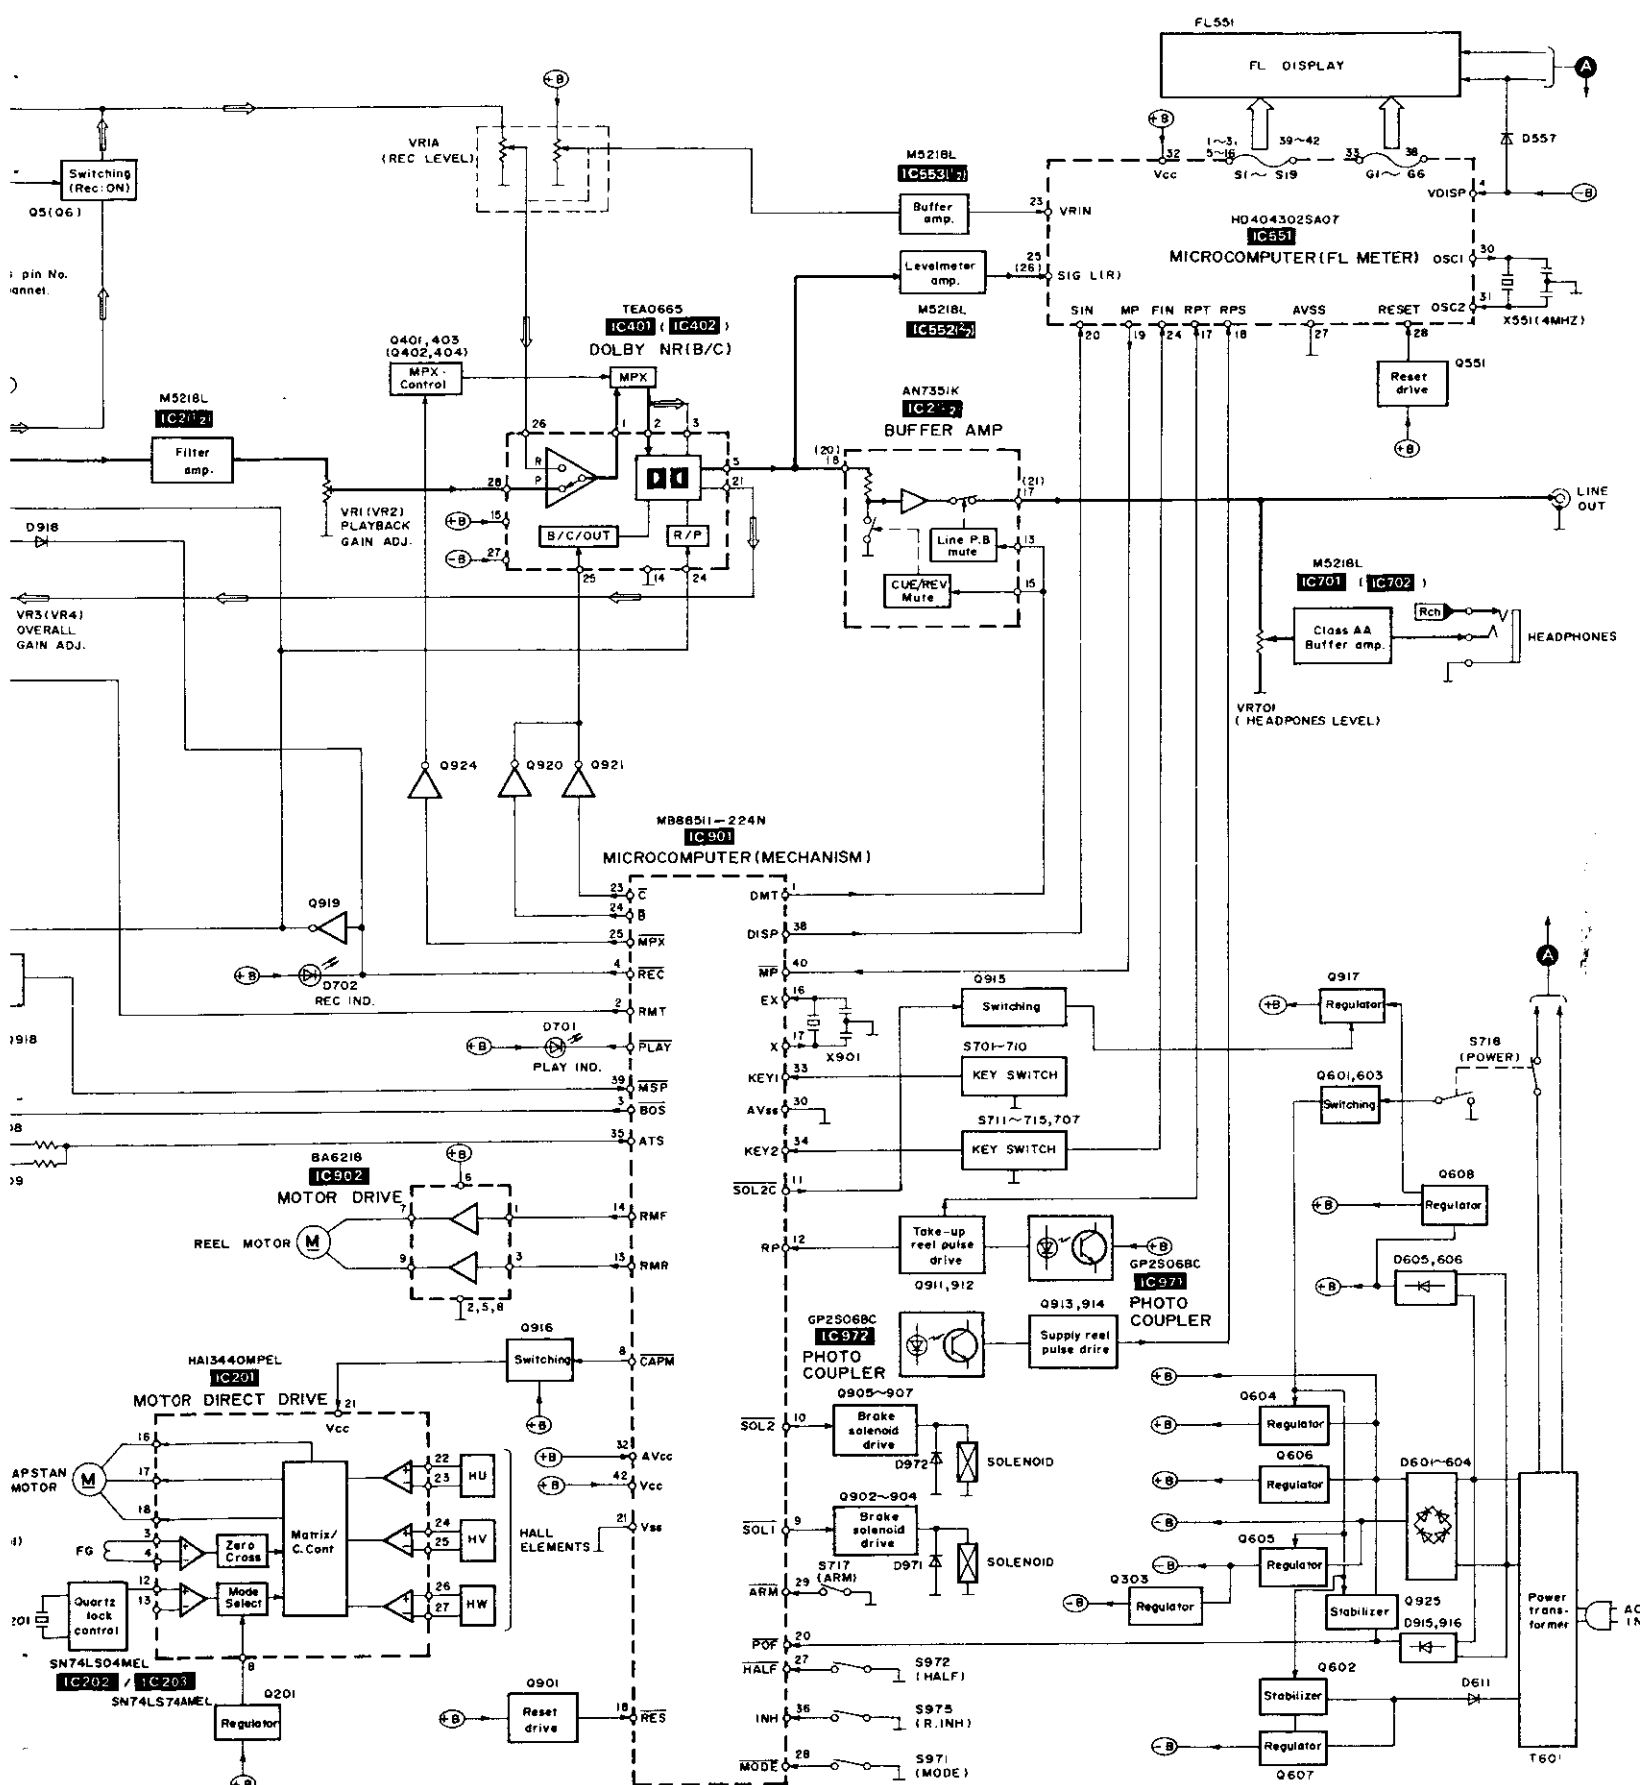[illegible]

Notes

- Playback signal
-  Recording signal

SCHEMATIC DIAGRAM

(Parts list on pages 34, 35, 42~44.)

(This schematic diagram may be modified at any time with development of new technology.)

Notes:

- S701 : Stop switch (stop) in "off" position.
 - S702 : F.F. switch (ff) in "off" position.
 - S703 : Rew switch (rew) in "off" position.
 - S704 : Playback switch (Play) in "off" position.
 - S705 : Record switch (rec) in "off" position.
 - S706 : Pause switch (pause) in "off" position.
 - S707 : Dolby noise-reduction switch (Dolby NRC) in "off" position.
 - S708 : Dolby noise-reduction switch (Dolby NR B) in "off" position.
 - S709 : Multiplex filter switch (MPX filter) in "off" position.
 - S710 : Timer switch (timer) in "off" position.
 - S711 : Counter reset switch (counter reset) in "off" position.
 - S712 : Counter mode switch (counter mode) in "off" position.
 - S713 : Meter range switch (meter range) in "off" position.
 - S714 : Memory mode switch (memory repeat) in "off" position.
 - S715 : Memory mode switch (memory stop) in "off" position.
 - S716 : APRS switch (APRS) in "off" position.
 - S717 : Automatic-record-muting switch (auto rec mute) in "off" position.
 - S718 : Power switch (standby ϕ /on) in "on" position.
 - S971 : Mode switch in "off" position.
 - S972 : Cassette half detection switch in "off" position.
 - S973 : ATS (CrO₂) switch in "off" position.
 - S975 : Rec Inhibit switch in "off" position.
 - S976 : ATS (Metal) switch in "off" position.
- Resistance are in ohms (Ω), 1/4 watt unless specified otherwise.
1K=1,000 (Ω), 1M=1,000k (Ω)

- Capacity are in micro-farads (μ F) unless specified otherwise.
- All voltage values shown in circuitry are under no signal condition and playback mode with volume control at minimum position otherwise specified.

()Voltage values at record mode.

For measurement us EVM.


Important safety notice


Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

- (Δ) indicates +B (bias).
- (Δ) indicates -B (bias).
- (Δ) indicates the flow of the playback signal.
- (Δ) indicates the flow of the record signal.


* Caution!

- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- * Cover the parts boxes made of plastics with aluminum foil.
- * Ground the soldering iron.
- * Put a conductive mat on the work table.
- * Do not touch the legs of IC or LSI with the fingers directly.

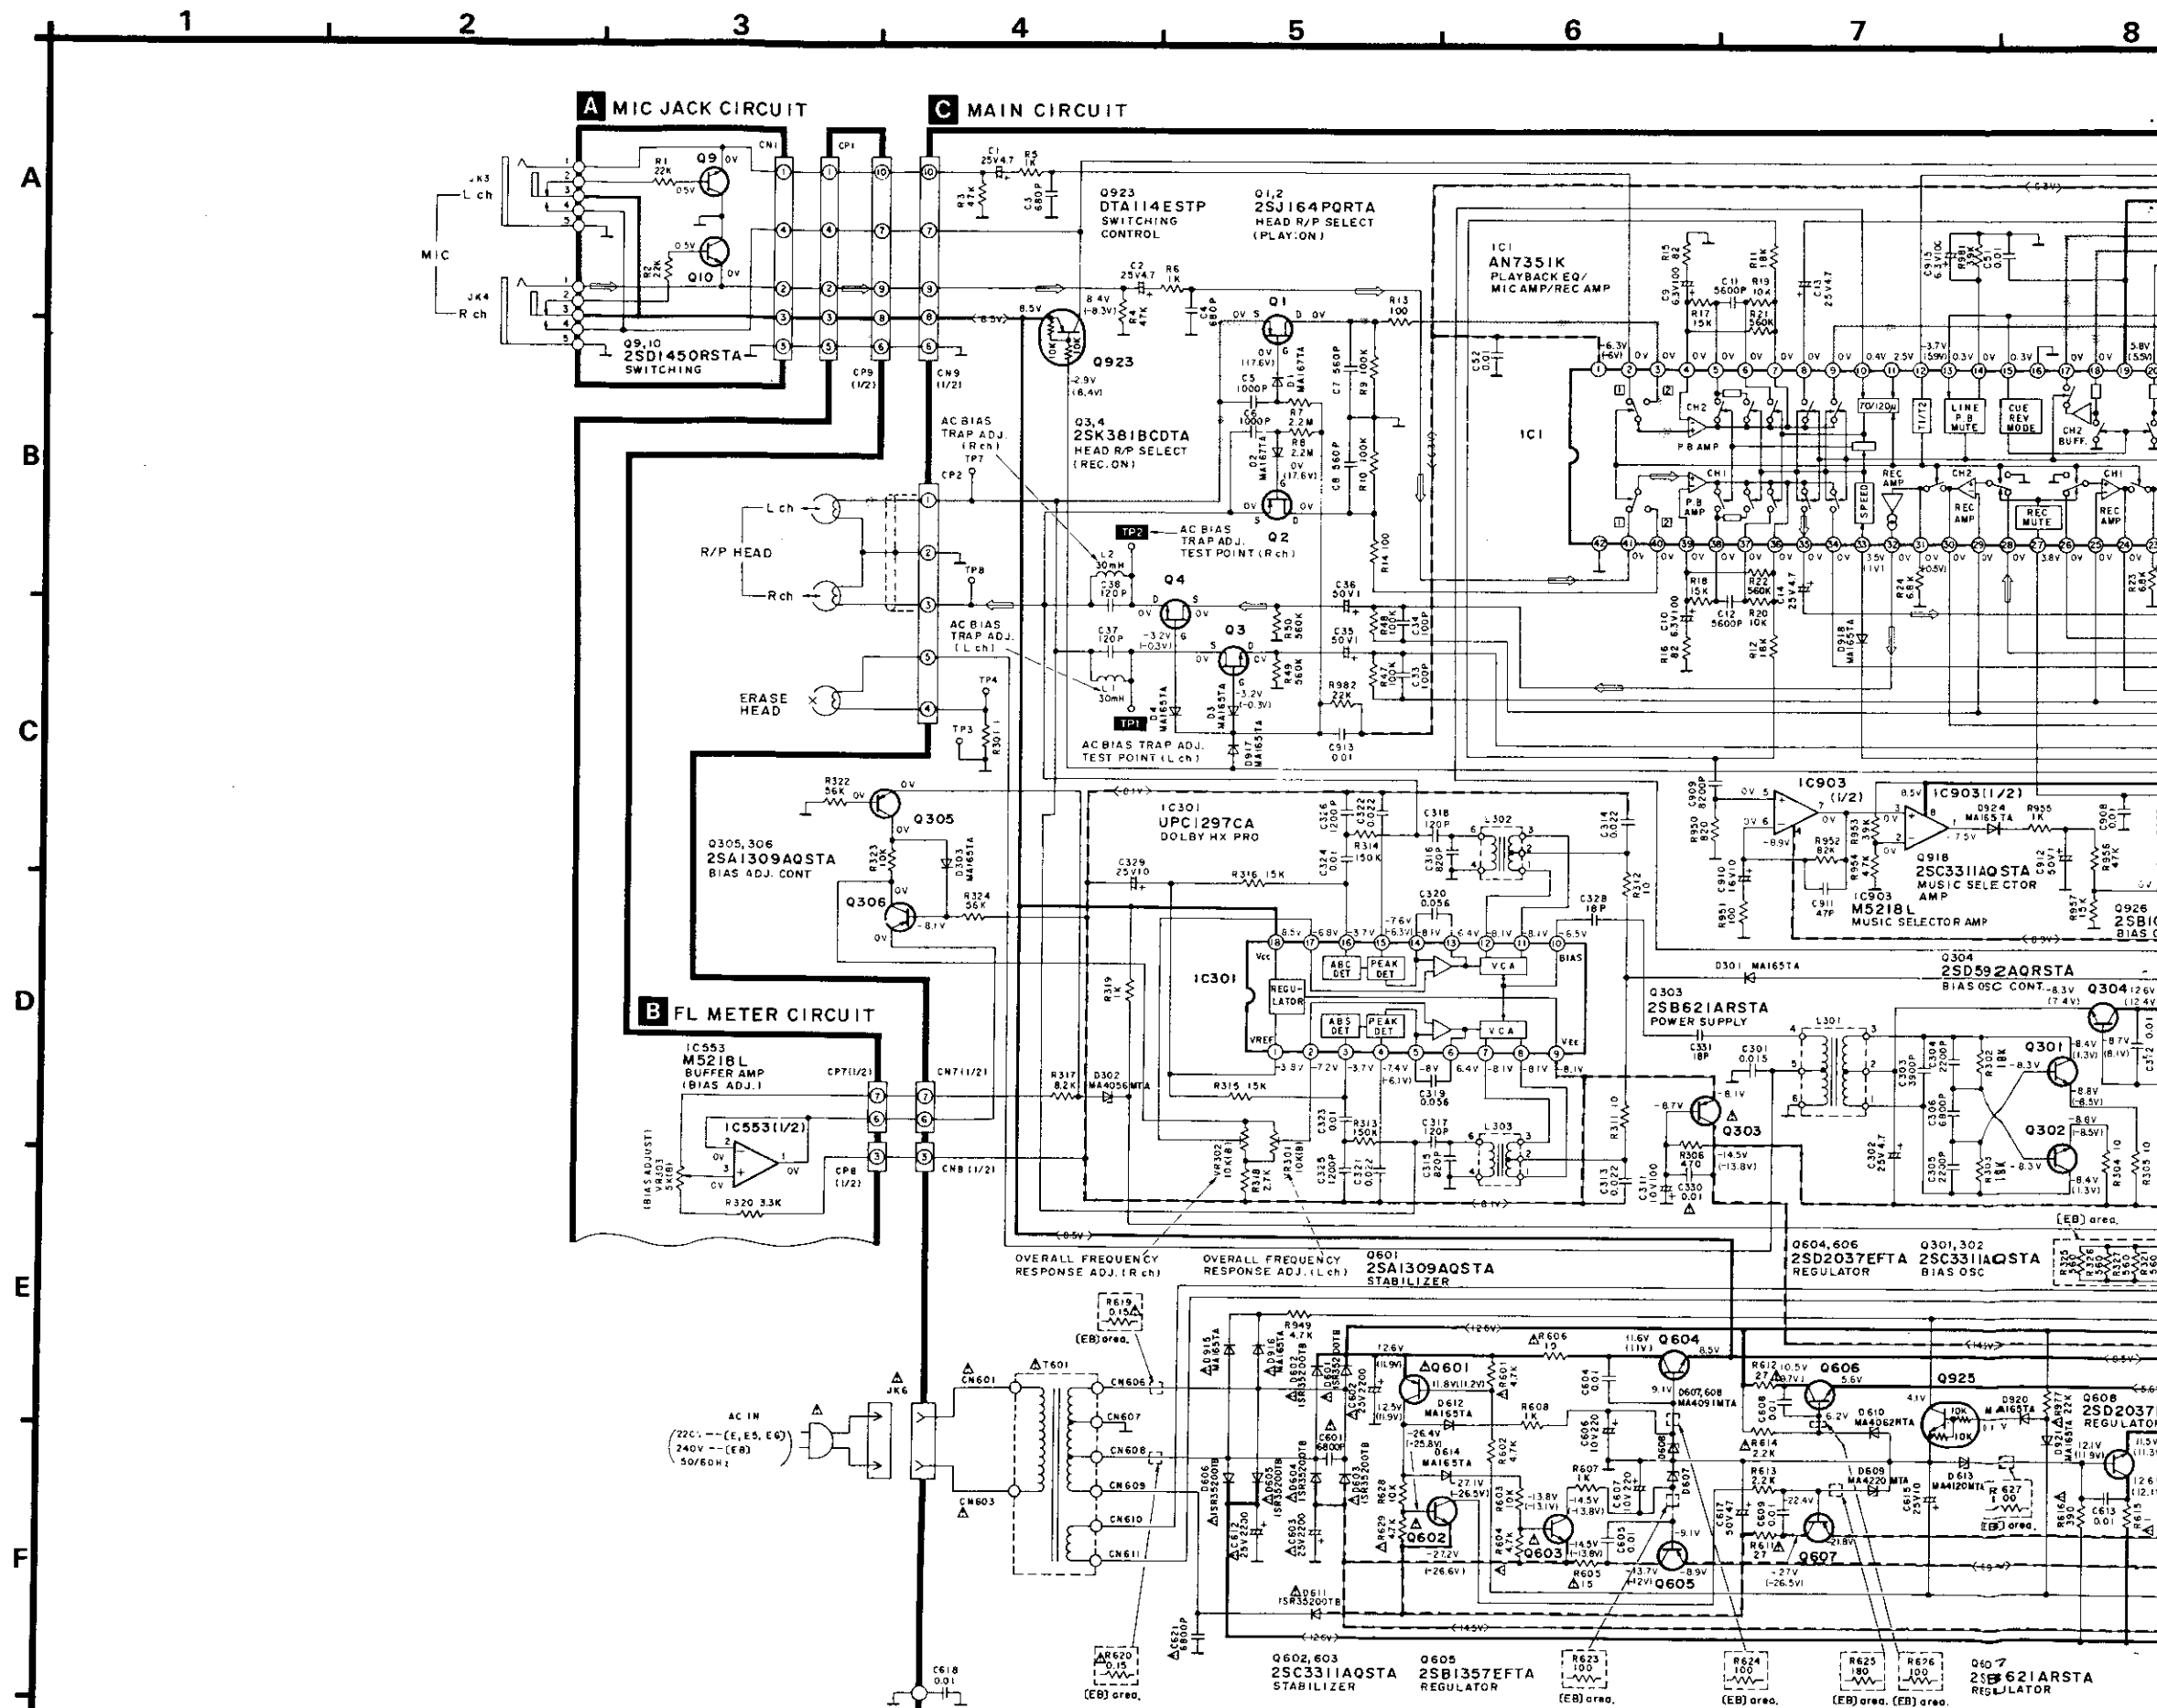






※ These are the parts for MPX effect adjustment.
When these parts are supplied, they have been adjusted.
Thus it does not need to readjust when you change these parts.

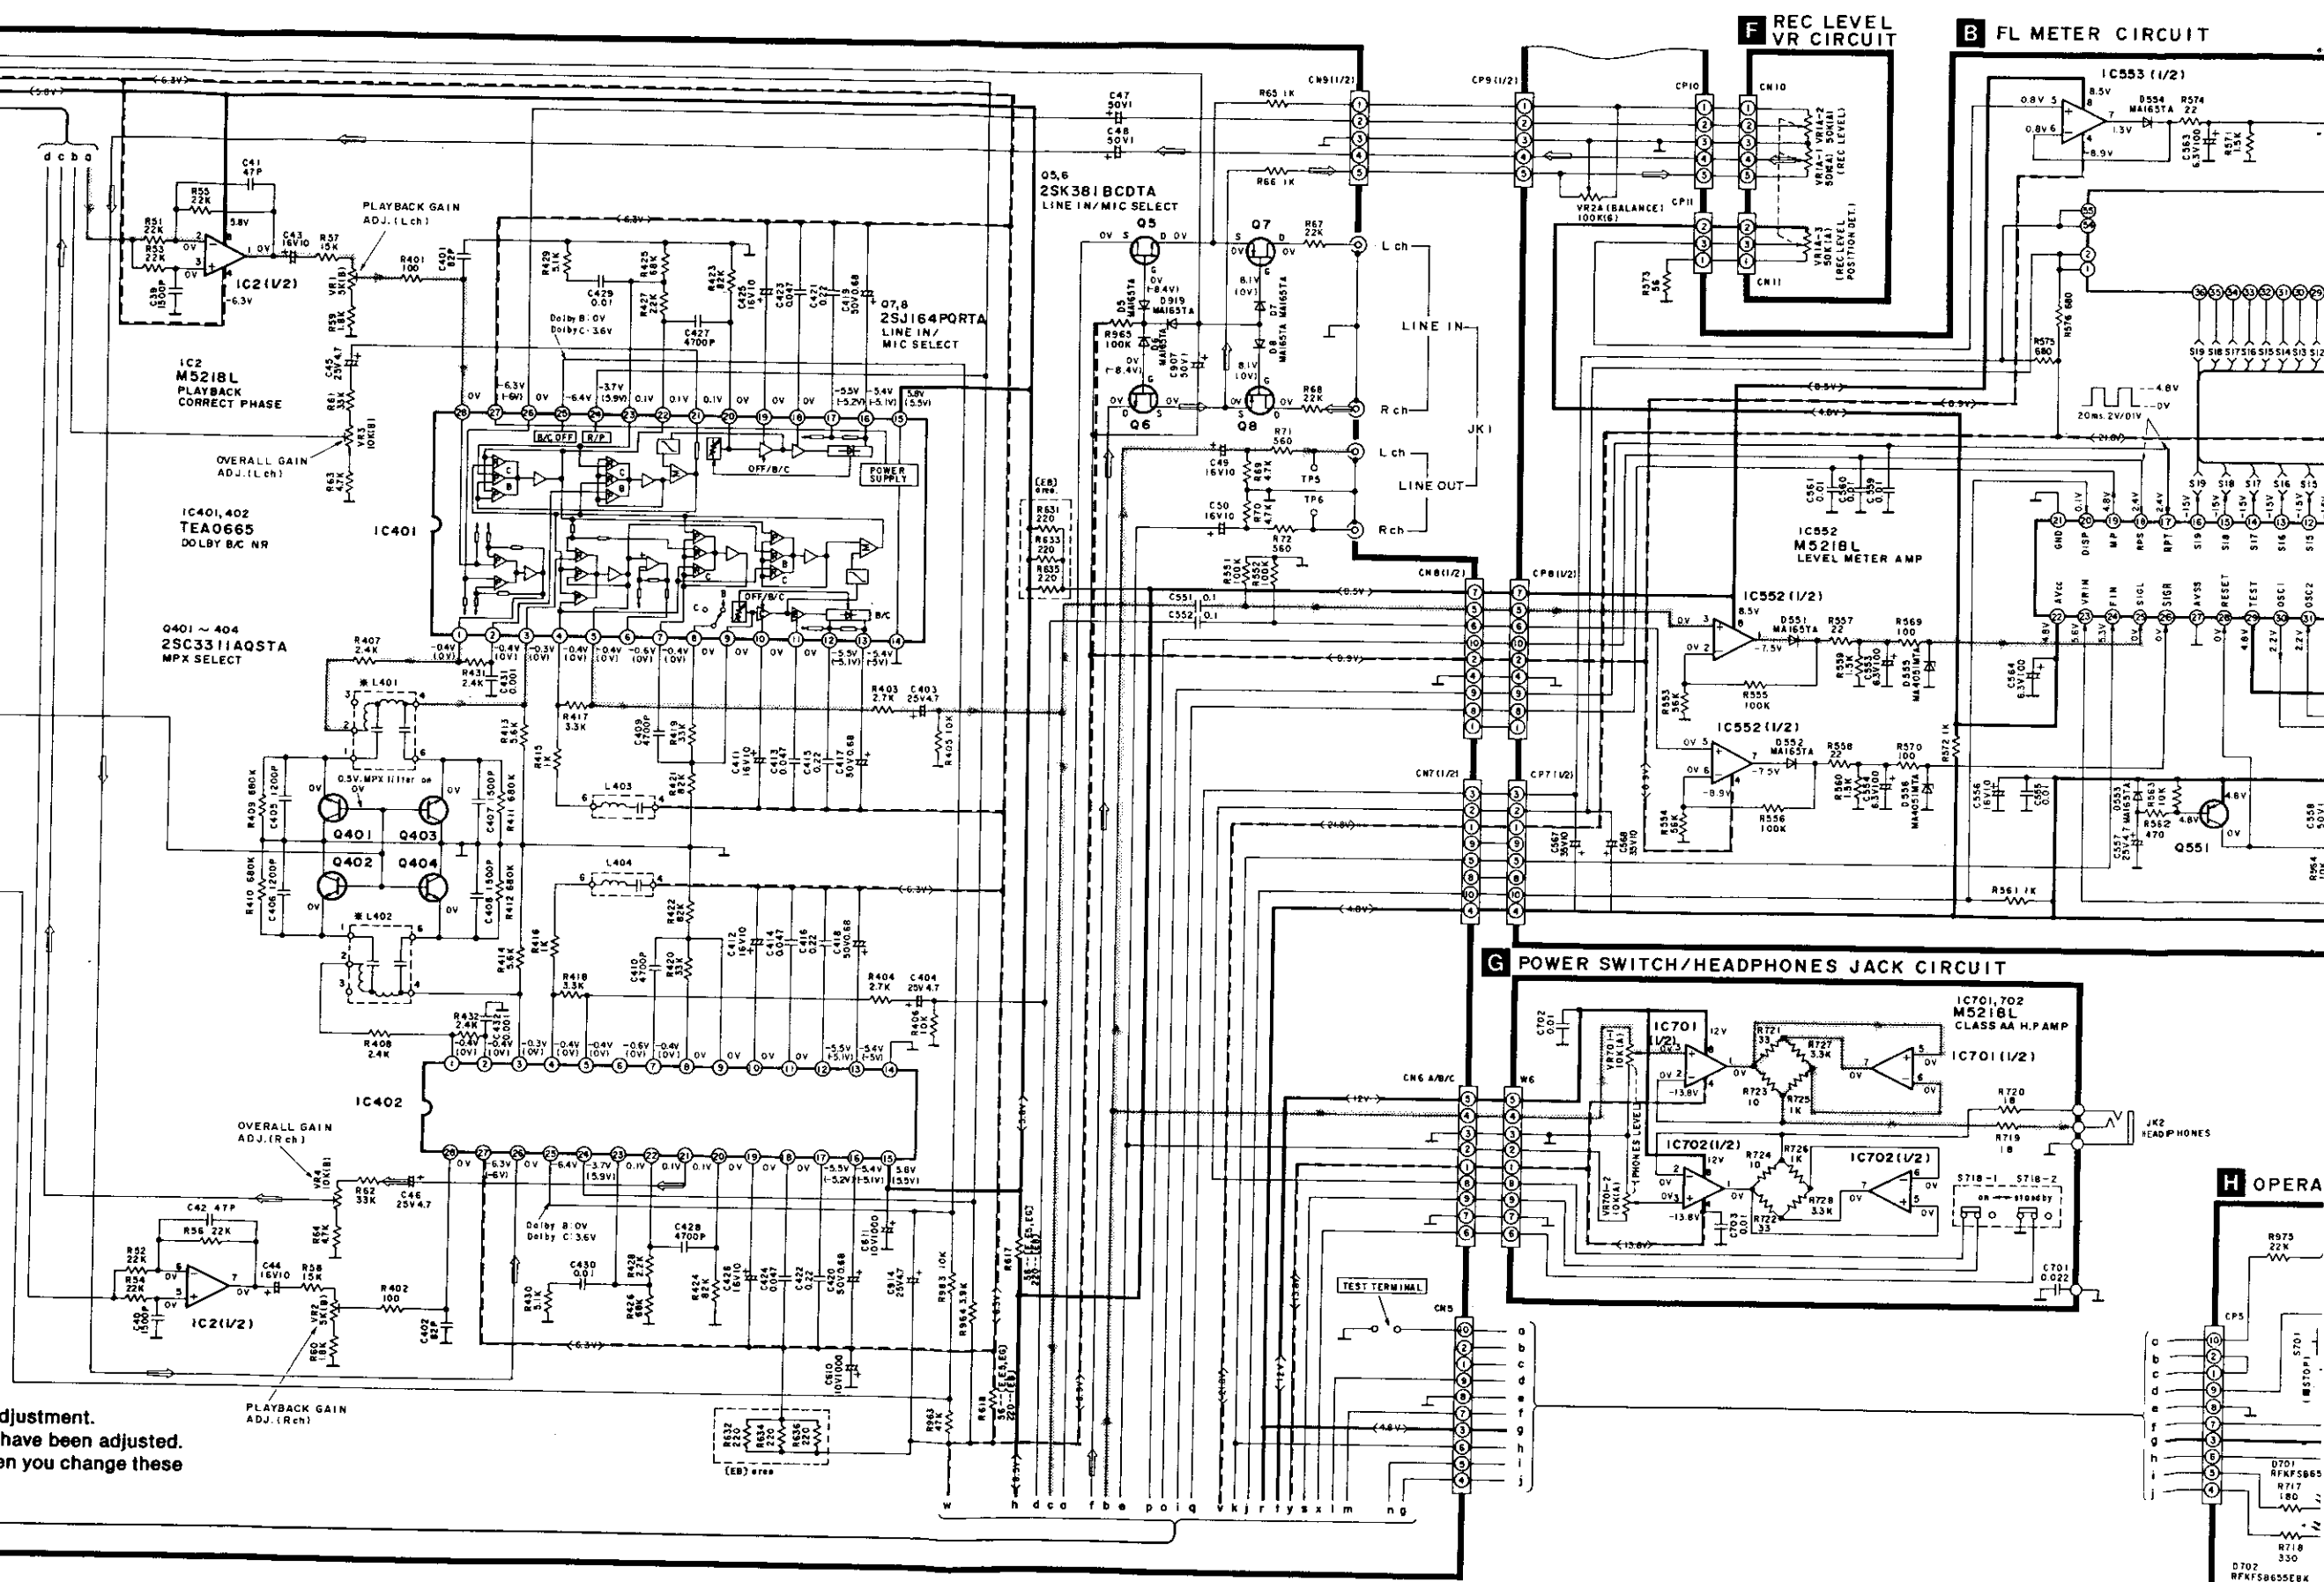


— 26 —

■ PRINTED CIRCUIT BOARDS

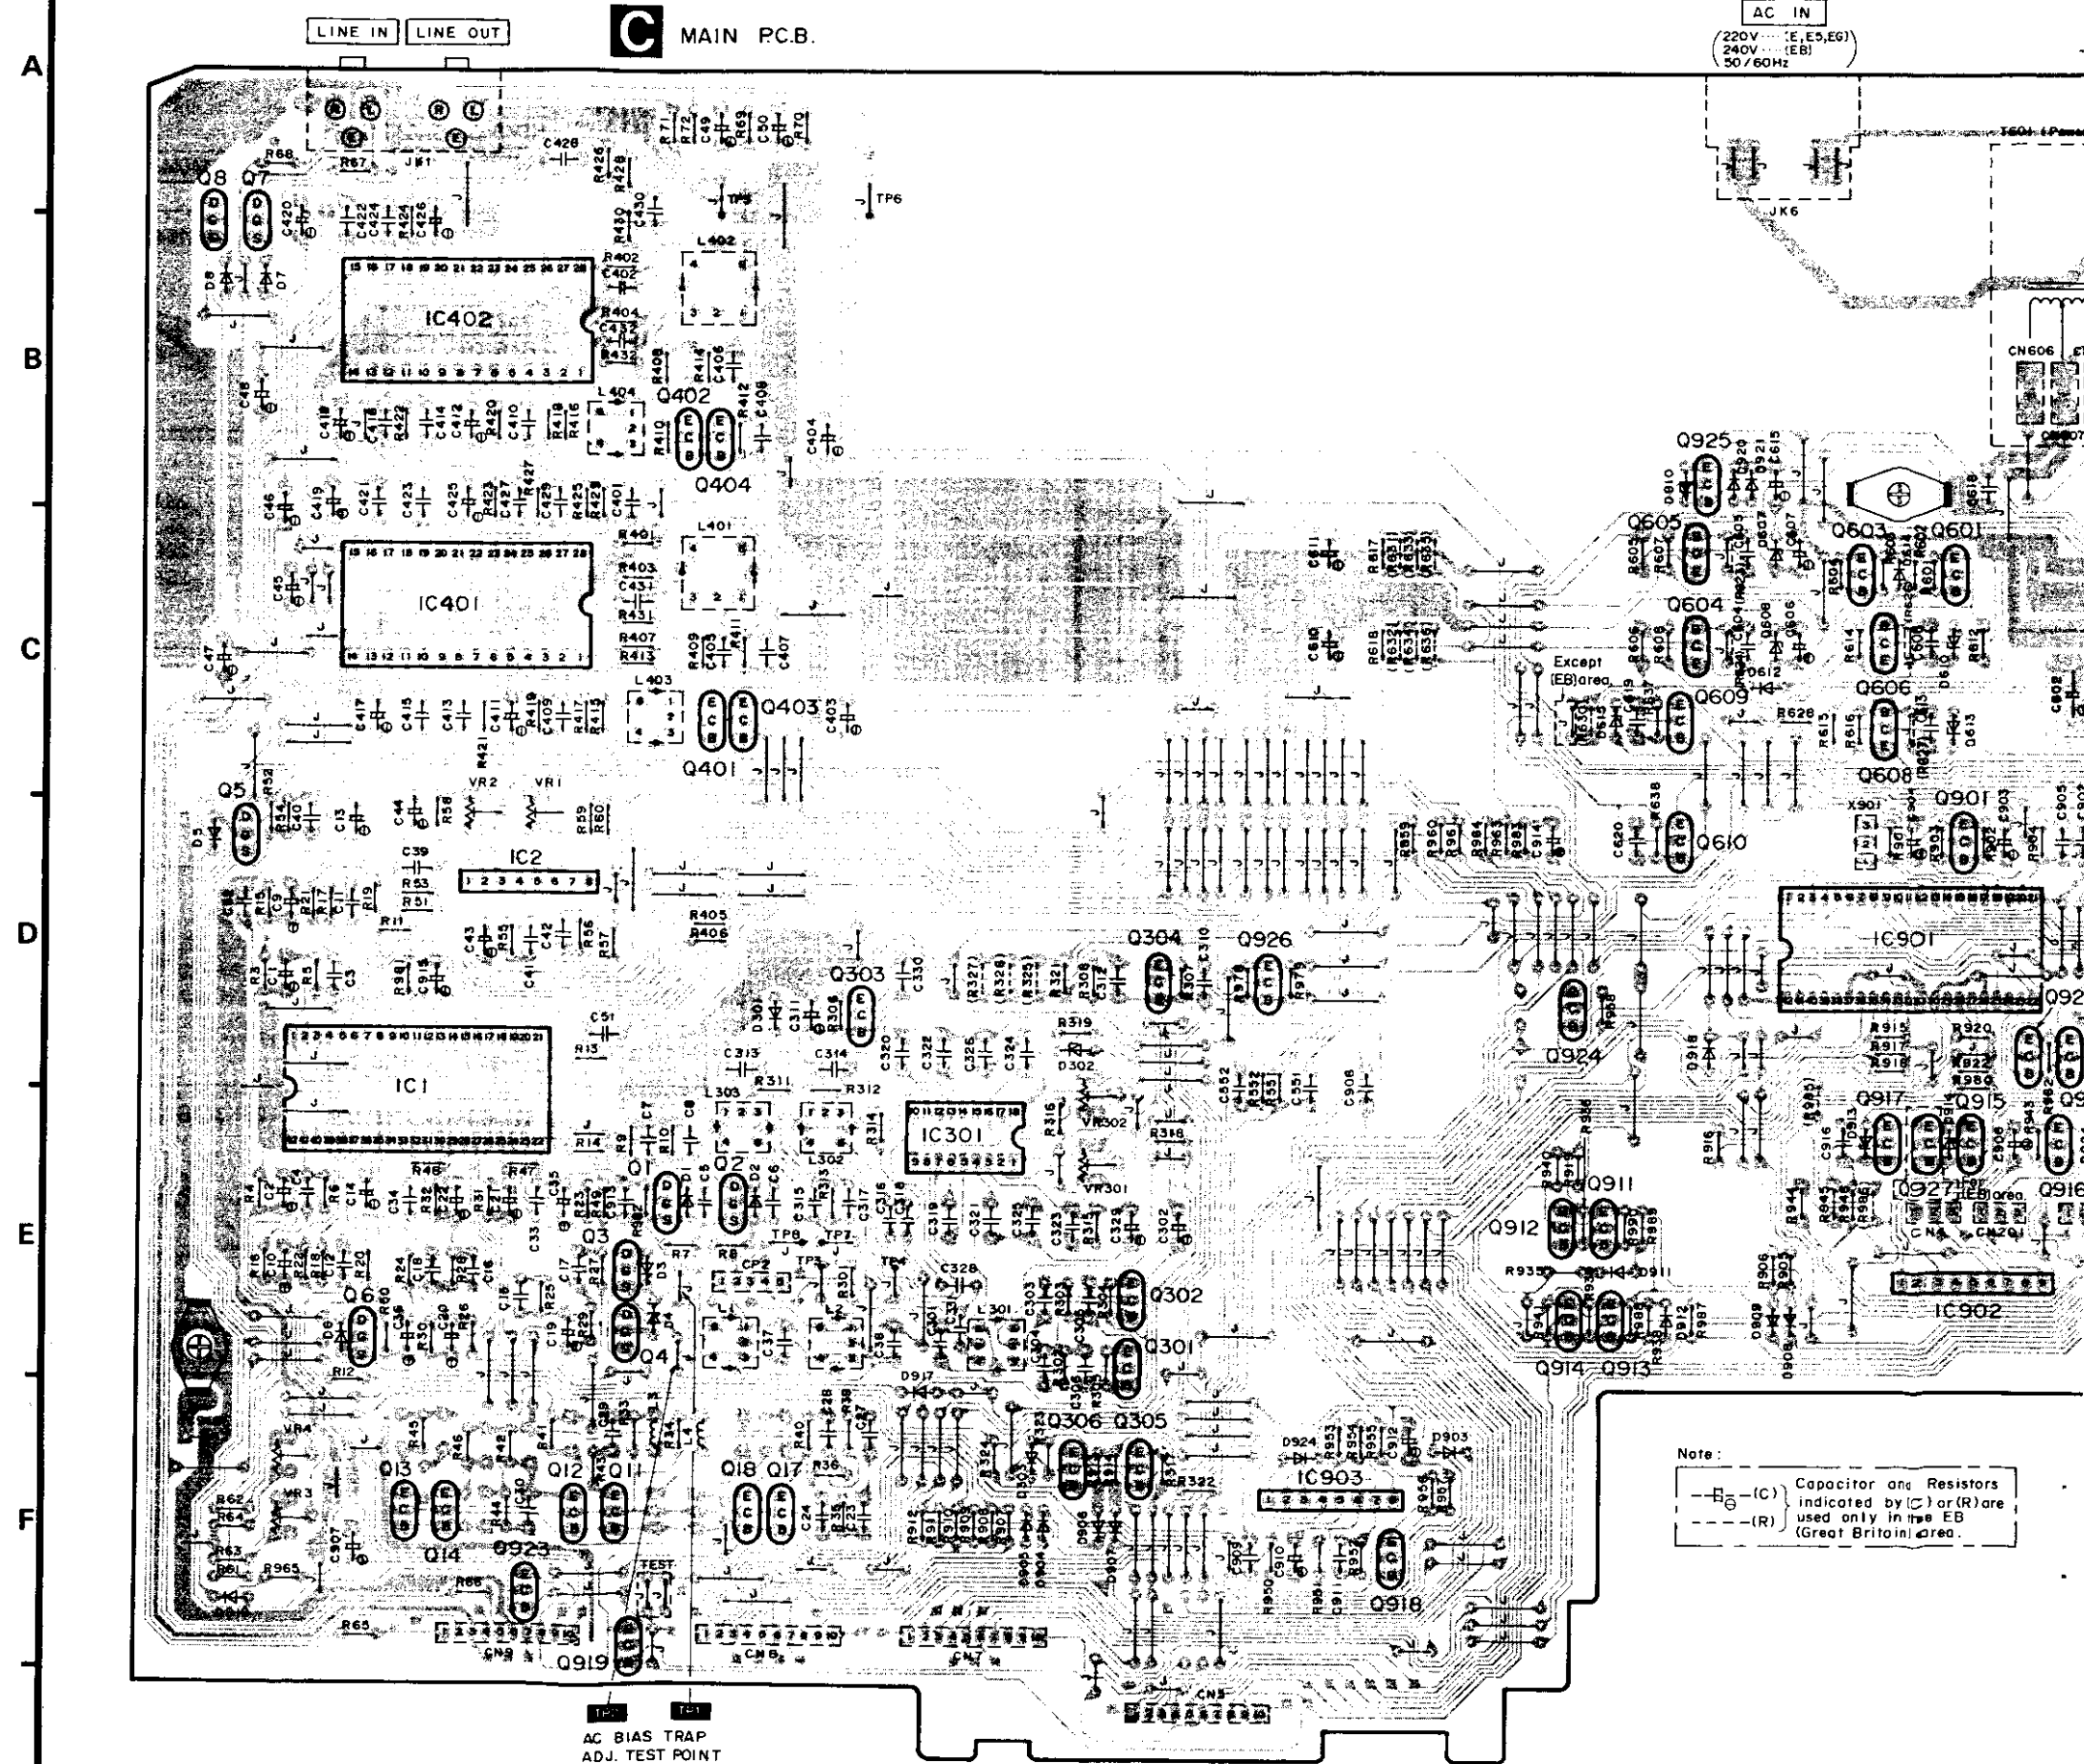


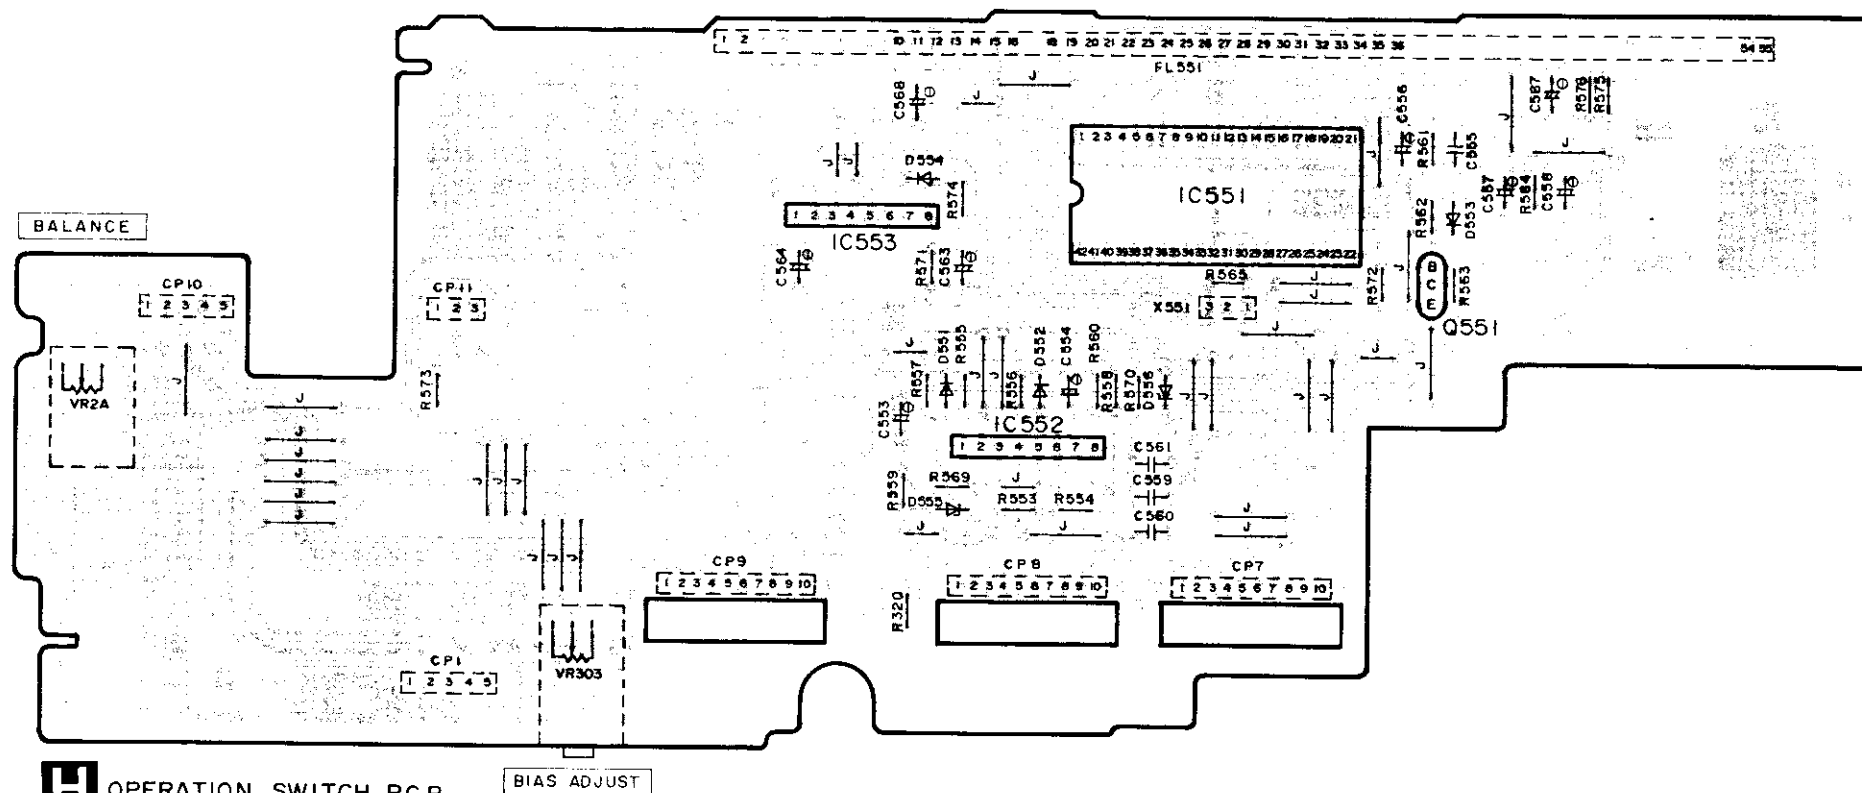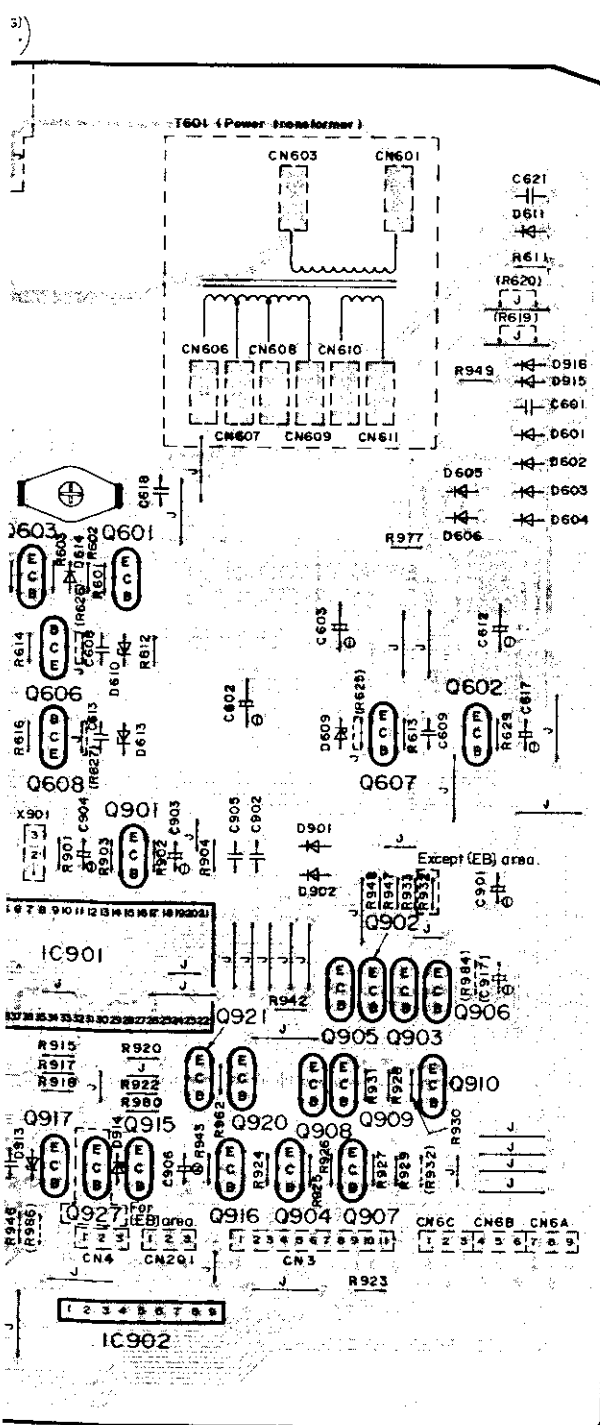B


H OPERATION SWITCH P.C.B.

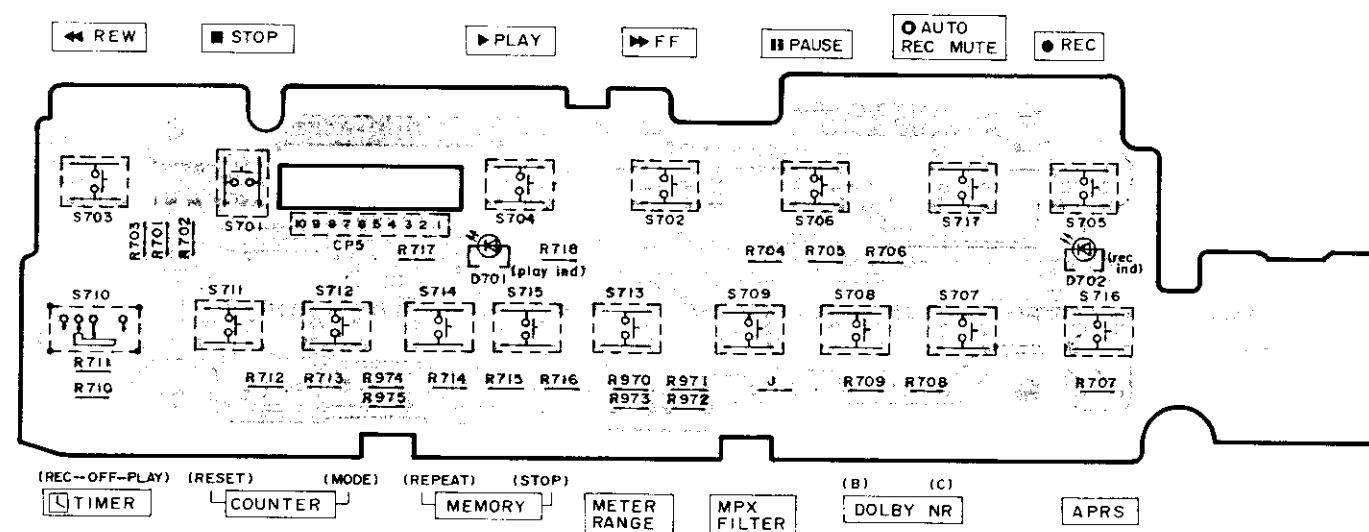


G POWER SWITCH/HEADPHONES JACK P.C.B.

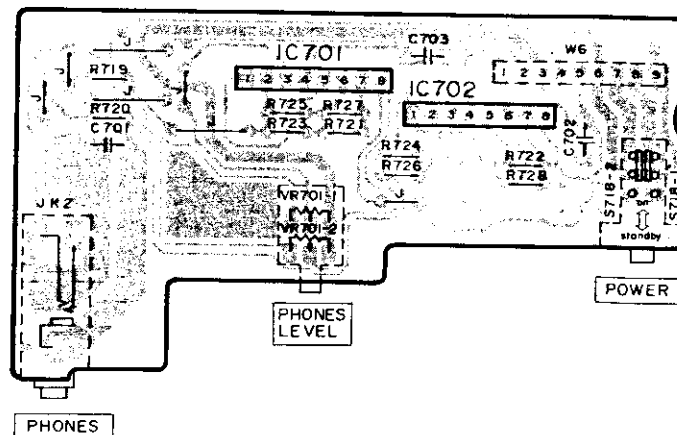


E REEL MOTOR P.C.B.

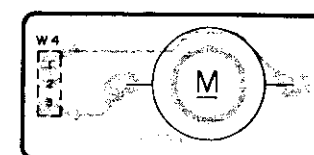

A MIC JACK P.C.B.

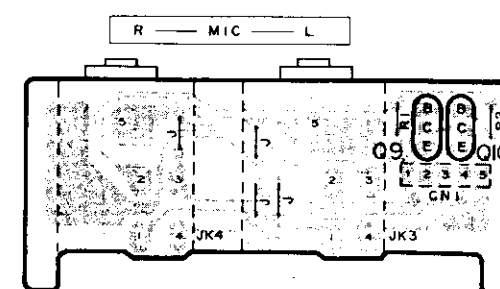


F REC LEVEL VR P.C.B.

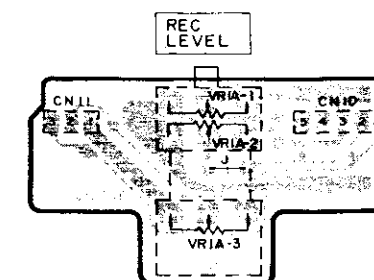


6 17 18 19 20 21


I CAPSTAN MOTOR (D.D) P.C.B.

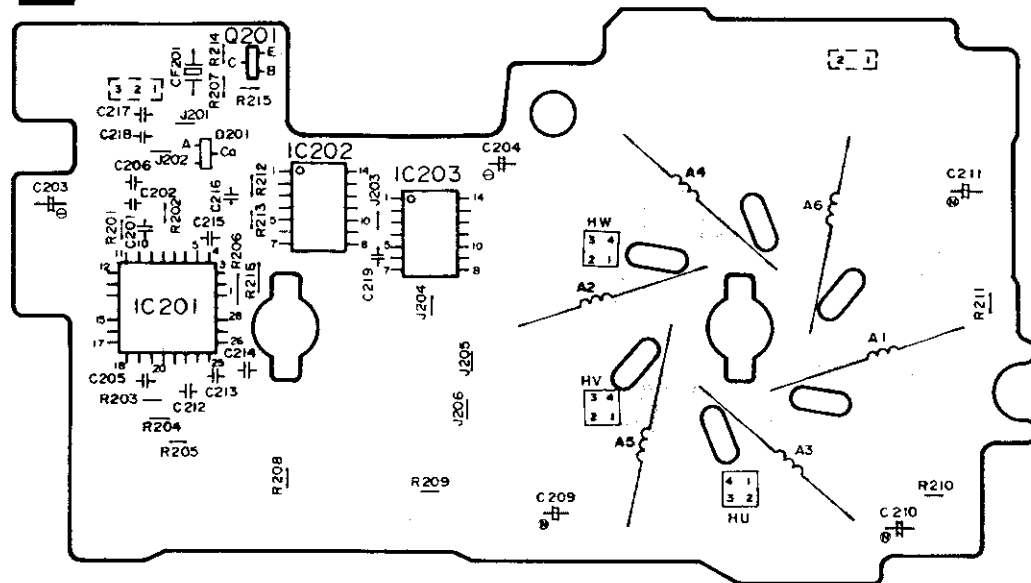

J FG P.C.B.

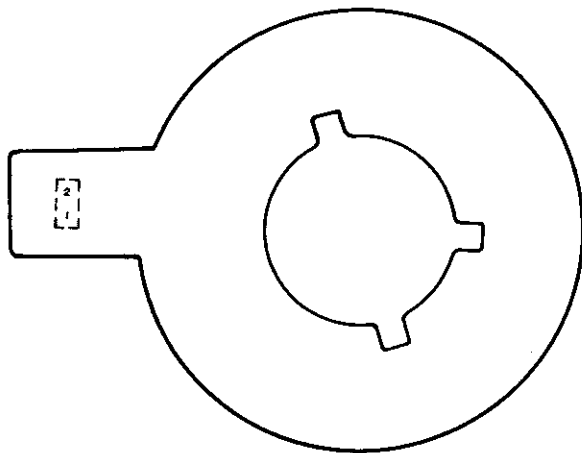


D MECHANISM P.C.B.



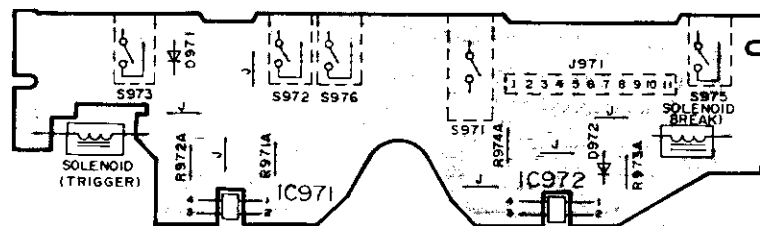


WIRING CONNECTION DIAGRAM


E REEL MOTOR P.C.B.

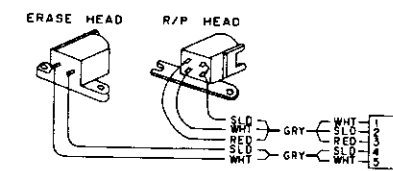

F REC LEVEL VR P.C.B.

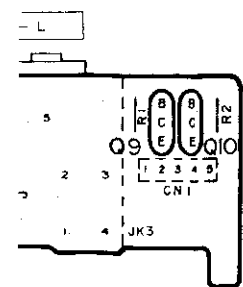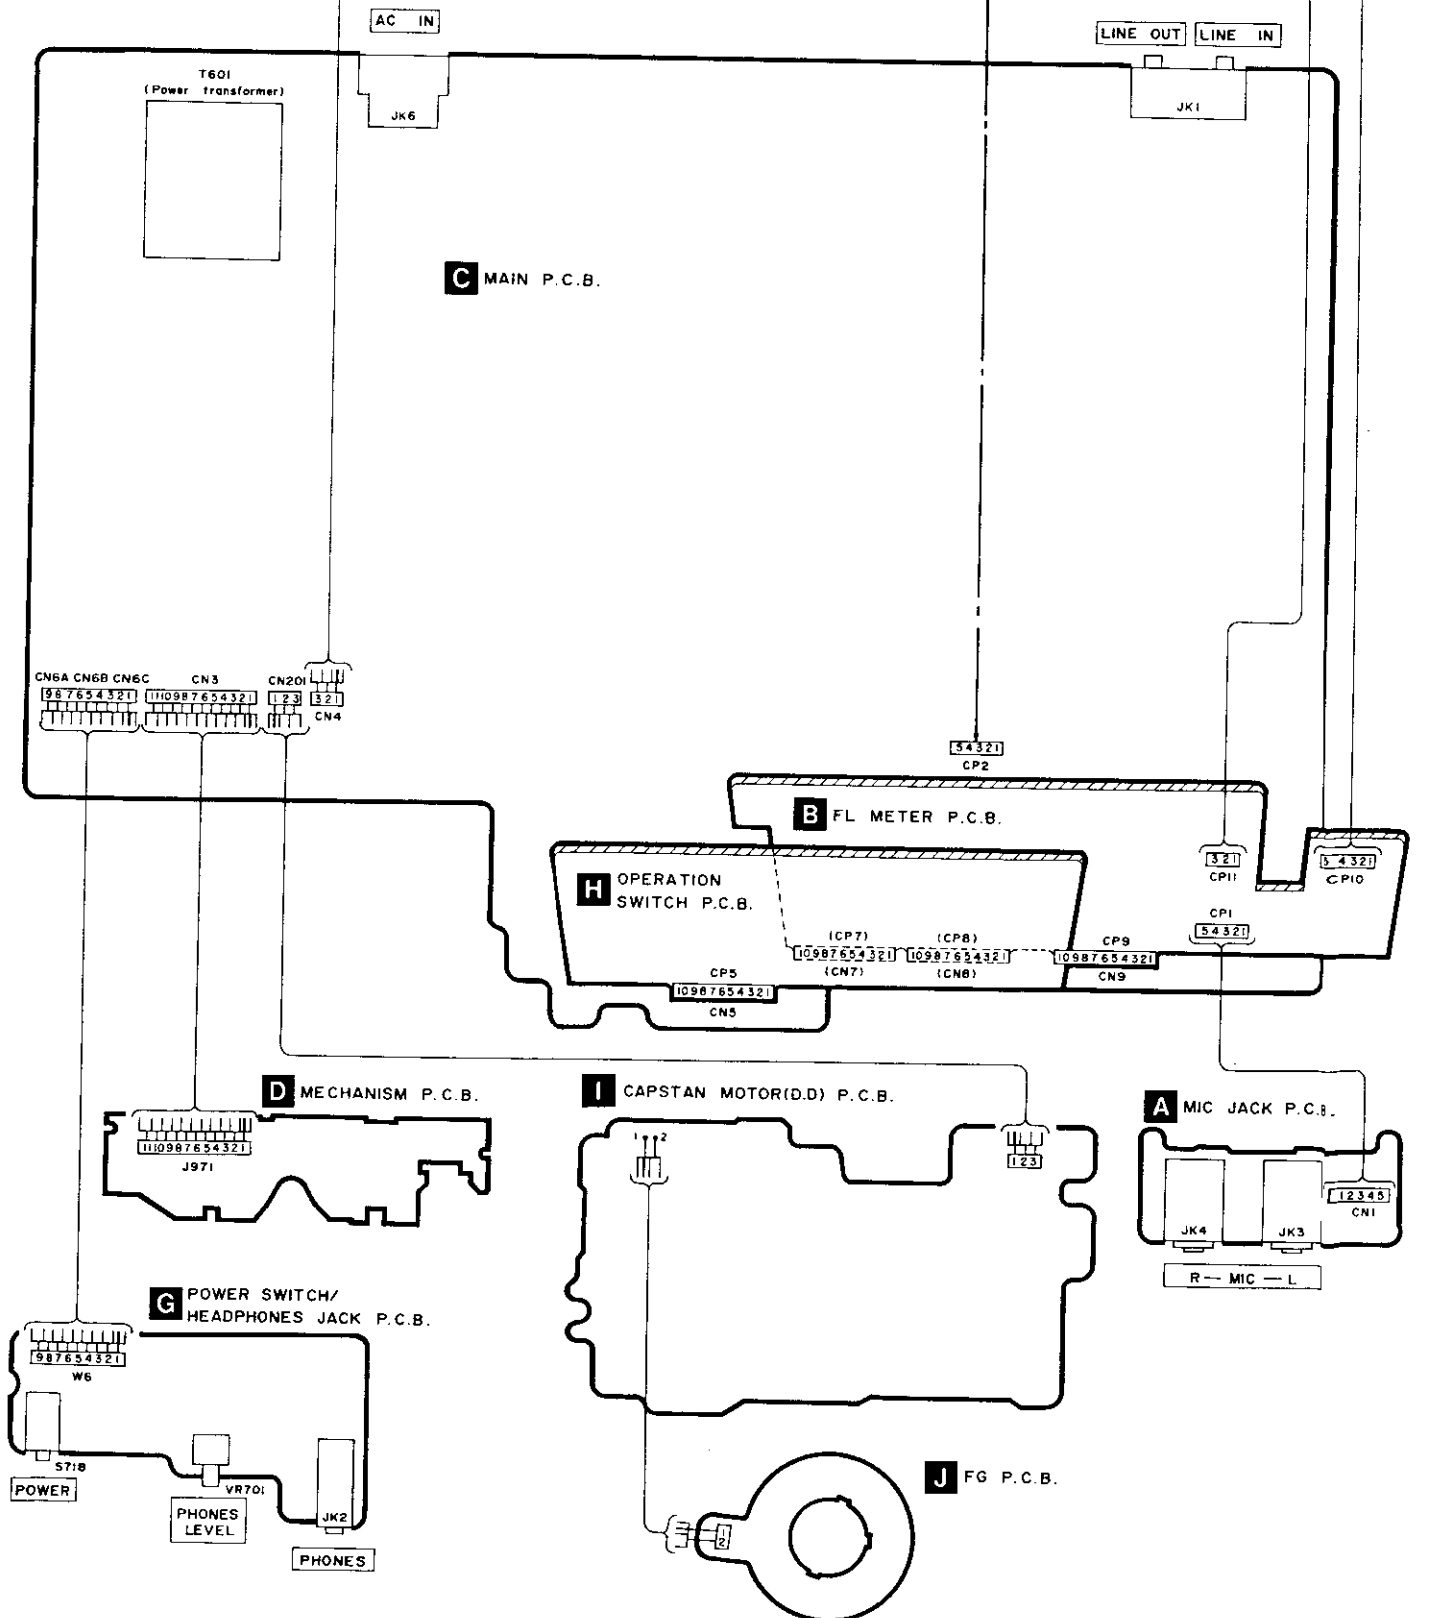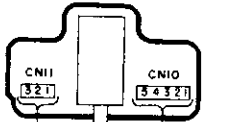

P.C.B.

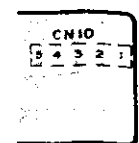

REPLACEMENT PARTS LIST

Notes :

- Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
- The parenthesized indications in the Remarks column specify the areas. (Refer to the cover page for area.) Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)	
IC1	AK7351K	IC, PLAYBACK EQ./MIC AMP	
IC2	ME218L	IC, PLAYBACK CORRECT PHASE	
IC201	HA1344MPEL	IC, MOTOR DRIVE	
IC202	SN74LS04MEL	IC, INVERTER	
IC203	SN74LS74MEL	IC, FLIP-FLOP	
IC301	UPC1297CA	IC, DOLBY NR PRO	
IC401, 402	TEA0655	IC, DOLBY B/C NR	
IC551	HD404302SA07	IC, MICROCOMPUTER; FL METER	
IC552	ME218L	IC, LEVEL METER AMP	
IC553	ME218L	IC, BUFFER AMP	
IC701, 702	ME218L	IC, Class AA : R.P. AMP	
IC901	MB88511-224N	IC, MICROCOMPUTER; MECHANICAL	
IC902	BA6218	IC, REEL MOTOR CONTROL	
IC903	ME218L	IC, MUSIC SELECTOR AMP	
IC971, 972	OP2505BC	IC, PHOTO COUPLER	
		TRANSISTOR(S)	
Q1, 2	ZSJ164PQRTA	TRANSISTOR	
Q3-6	ZSK381BCDTA	TRANSISTOR	
Q7, 8	ZSJ164PQRTA	TRANSISTOR	
Q8, 10	ZSD1450RSTA	TRANSISTOR	
Q11-14	ZSC3311AQSTA	TRANSISTOR	
Q17, 18	ZSA1309AQSTA	TRANSISTOR	
Q201	ZSD601RTW	TRANSISTOR	
Q301, 302	ZSC3311AQSTA	TRANSISTOR	
Q303	ZSB621ARSTA	TRANSISTOR	Δ
Q304	ZSD592A	TRANSISTOR	
Q305, 306	ZSA1309AQSTA	TRANSISTOR	
Q401-404	ZSC3311AQSTA	TRANSISTOR	
Q551	ZSA1309AQSTA	TRANSISTOR	
Q601	ZSA1309AQSTA	TRANSISTOR	Δ
Q602, 603	ZSC3311AQSTA	TRANSISTOR	Δ
Q604	ZSD2037EFTA	TRANSISTOR	
Q605	ZSB1357EFTA	TRANSISTOR	
Q606	ZSD2037EFTA	TRANSISTOR	
Q607	ZSB621ARSTA	TRANSISTOR	
Q608	ZSD2037EFTA	TRANSISTOR	
Q609	ZSC3311AQSTA	TRANSISTOR	Δ
Q901	ZSA1309AQSTA	TRANSISTOR	Δ
Q901	ZSC3311AQSTA	TRANSISTOR	
Q902	DTA114ESTP	TRANSISTOR	
Q903	DTA114ESTP	TRANSISTOR	
Q904	ZSB1030RSTTA	TRANSISTOR	Δ
Q905	DTA114ESTP	TRANSISTOR	
Q906	DTA114ESTP	TRANSISTOR	
Q907	ZSB1030RSTTA	TRANSISTOR	Δ
Q908	DTA114YSTP	TRANSISTOR	
Q909	ZSC3311AQSTA	TRANSISTOR	
Q910	ZSB1030RSTTA	TRANSISTOR	Δ
Q911	ZSC3311AQSTA	TRANSISTOR	
Q912	DTA114ESTP	TRANSISTOR	
Q913	ZSC3311AQSTA	TRANSISTOR	
Q914	DTA114ESTP	TRANSISTOR	
Q915	DTA114YSTP	TRANSISTOR	
Q916	ZSB1030RSTTA	TRANSISTOR	
Q917	ZSD692A	TRANSISTOR	
Q918	ZSC3311AQSTA	TRANSISTOR	
Q919-921	DTA114ESTP	TRANSISTOR	
Q923, 924	DTA114ESTP	TRANSISTOR	
Q925	DTA114ESTP	TRANSISTOR	
Q926	ZSB1030RSTTA	TRANSISTOR	
Q927	ZSC3311AQSTA	TRANSISTOR	(EB)
		DIODE(S)	
D1, 2	MA167TA	DIODE	
D3-8	MA165TA	DIODE	
D201	MA3056MTW	DIODE	
D301	MA165TA	DIODE	
D302	MA4056MTA	DIODE	
D303	MA165TA	DIODE	
D551-554	MA165TA	DIODE	
D555, 556	MA4051MTA	DIODE	
D601-606	1SR35200TB	DIODE	Δ
D607, 608	MA4091MTA	DIODE	
D609	MA4220M	DIODE	
D610	MA4062HTA	DIODE	
D611	1SR35200TB	DIODE	Δ
D612	MA165TA	DIODE	
D613	MA4120M	DIODE	
D614	MA165TA	DIODE	
D615	MA4330MTA	DIODE	
D701	RFNFSB655EAK	L.E.D. ASS'Y	
D702	RFNFSB655EBK	L.E.D. ASS'Y	
D901, 902	1SR35200TB	DIODE	
D903	MA165TA	DIODE	Δ
D904-909	MA165TA	DIODE	
D910	MA4051MTA	DIODE	
D911, 912	MA165TA	DIODE	
D913	MA4056H	DIODE	


Ref. No.	Part No.	Part Name & Description	Remarks
D914	MA4091MTA	DIODE	
D915, 916	MA165TA	DIODE	Δ
D917-921	MA165TA	DIODE	
D924	MA165TA	DIODE	
D971, 972	1SS133	DIODE	
		VARIABLE RESISTOR(S)	
VR1, 2	EYNDXAA00B53	V. R. PLAYBACK GAIN ADJ.	
VR1A	EWQJ2A02SA54	V. R. REC. LEVEL CONTROL	
VR2A	EYJ02SF06G15	V. R. BALANCE CONTROL	
VR3, 4	EYNDXAA00B14	V. R. OVERALL GAIN ADJ.	
VR301, 302	EYNDXAA00B14	V. R. OVERALL FREQ. ADJ.	
VR303	EYJ02VF04B53	V. R. BIAS CURRENT ADJ.	
VR701	EVU57A043A14	V. R. HEADPHONES CONTROL	
		COIL(S)	
L1, 2	RL20003	COIL	
L3, 4	SLQX272-1YT	COIL	
L301	SLD9B4-K	COIL	
L302, 303	SL9B1-K	COIL	
L401, 402	QLM8210K	COIL	
L403, 404	SLM1B8-K	COIL	
		TRANSFORMER(S)	
T601	RTPIK4B007-V	POWER TRANSFORMER	(EB) Δ
T601	RTPIK4E008-V	POWER TRANSFORMER	(E, ES, EG) Δ
		OSCILLATOR(S)	
X551	EF0CC4004T4	CERAMIC FILTER	
X901	EF0CC6004T4	CERAMIC FILTER	
		DISPLAY TUBE	
FL551	RLS0017-F	DISPLAY TUBE (FL METER)	
		SWITCH(ES)	
S701	EVQQTG05R	SW, STOP	
S702	EVQQTG05R	SW, F.F.	
S703	EVQQTG05R	SW, REV.	
S704	EVQQTG05R	SW, PLAYBACK	
S705	EVQQTG05R	SW, RECORD	
S706	EVQQTG05R	SW, PAUSE	
S707	EVQQTG05R	SW, DOLBY NR C	
S708	EVQQTG05R	SW, DOLBY NR B	
S709	EVQQTG05R	SW, MPX FILTER	
S710	SSS166	SW, TIMER	
S711	EVQQTG05R	SW, COUNTER RESET	
S712	EVQQTG05R	SW, COUNTER MODE	
S713	EVQQTG05R	SW, METER RANGE	
S714	EVQQTG05R	SW, MEMORY REPEAT	
S715	EVQQTG05R	SW, MEMORY STOP	
S716	EVQQTG05R	SW, APFS	
S717	EVQQTG05R	SW, AUTO REC. MUTE	
S718	SSH1230	SW, POWER	
S971	RSH1A89Z	SW, MODE	
S972	RSH1A90Z	SW, HALF	
S973	RSH1A90Z	SW, ATS	
S975	RSH1A90Z	SW, REC. 1MH/1BIT	
S976	RSH1A90Z	SW, ATS	
		CONNECTOR(S) AND SOCKET(S)	
CN1	SJT30545JQ	CONNECTOR (5P)	
CN3	SJSD1105	CONNECTOR (11P)	
CN4	RJS1A1703	CONNECTOR/CONNECTOR (3P)	
CN5	RJU003K010M	SOCKET (10P)	
CN6A-6C	RJS1A1703	CONNECTOR (3P)	
CN7-9	RJU003K010M	SOCKET (10P)	
CN10	SJT30545JQ	CONNECTOR (5P)	
CN11	SJT30345JQ	CONNECTOR (3P)	
CN201	RJS1A1703	CONNECTOR (3P)	
CN201A	RJS2T42A	CONNECTOR (2P)	
CN601	RJS1A1101	SOCKET (1P)	Δ
CN603	RJS1A1101	SOCKET (1P)	Δ
CN606-611	RJS1A1101	SOCKET (1P)	
CP1	SJS50578JQ	SOCKET (5P)	
CP2	SJTD513	CONNECTOR (5P)	
CP5	RJT003K010	CONNECTOR (10P)	
CP7-9	RJT003K010	CONNECTOR (10P)	
CP10	SJS50578JQ	SOCKET (5P)	
CP11	SJS50378JQ	SOCKET (3P)	
		GND. PART(S)	
E1-3	SNE1004-1	GND. PLATE	
E701	SJSD1105	GND. SPRING	
		JACK(S)	
JK1	SJF3069K	TERMINAL BOARD	
JK2	SJ1145B	JACK, HEADPHONES	
JK3, 4	RJ185MS01	JACK, MIC	
JN6	SJS0236	AC INLET	Δ
		CERAMIC FILTER(S)	
CF201	RSXA3M74S01	CERAMIC FILTER	
		JAMPER(S)	
J201, 206	ER16GEYOR00V	CHIP JAMPER	

Notes : • Important safety notice:
 Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 • The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS		40	RSC0076	SHIELD PLATE	
				41	RL00030	PANEL LIGHT	
				42	RN00009	BOTTOM BOARD	
1	RND036-K	CABINET		43	XTB3-10G	SCREW	
2	RYF0027	CASSETTE LID				PACKING MATERIAL	
3	RYQ0027	ORNAMENT					
4	SNE2129-1	SCREW		P1	RP00255	CARTON BOX	
5	XTB33-8JFZ1	SCREW		P2	RP00178	PAD, FRONT/BACK	
6	RND0021	FL HOLDER		P3	SPS185	PAD, ACCESSORIES	
7	RSC0048	SHIELD PLATE		P4	SPP256	PROTECTION COVER	
8	RGR0024-A	REAR PANEL	(E)			ACCESSORIES	
8	RGR0024-C	REAR PANEL	(E5)				
8	RGR0024-E	REAR PANEL	(EB)	A1	RQF0239	INSTRUCTION MANUAL	(EG)
8	RGR0024-L	REAR PANEL	(EG)	A1	RQF0240	INSTRUCTION MANUAL	(E, E5)
9	RGU0030	BUTTON, POWER		A1	RQF0241	INSTRUCTION MANUAL	(EB)
10	RGV0022	KNOB, TIMER		A2	SFAC0503	POWER CORD	(E, E5, EG) Δ
11	RND0032	KNOB, BALANCE LEVEL		A2	SJA193-1	POWER CORD	(EB) Δ
12	RND0033	KNOB, REC LEVEL		A3	SJP2249-3	STEREO CONNECTION CABLE	
13	RKAD009-1	FOOT					
14	RFKSB655EAK	FRONT GRILLE ASS'Y (1)					
14-1	RND0038	TRANSPARENT PLATE					
15	RFKSB655EBK	FRONT GRILLE ASS'Y (2)					
16	RND0040	BRACKET					
17	RND0056	SHIELD PLATE					
18	RND0026-1	CHASSIS					
19	RND0022	ORNAMENT					
20	RFKSB655E-K	FRONT PANEL ASS'Y					
21	RND117	ORNAMENT, BUTTON (A)					
22	RND118	ORNAMENT, BUTTON (B)					
23	RGU130	BUTTON, EJECT		MECH1	RAA0802	MECHANISM ASS'Y	
24	RGU131	BUTTON, COUNTER					
25	RGU132	BUTTON, NOISE REDUCTION					
26	RGU133	BUTTON, OPERATION					
27	RKF0020A-3	CASSETTE HOLDER					
27-1	QBP2006A	SPRING, TAPE PRESSURE		PWB1	REP0306A	MAIN P.C.B. ASS'Y	(E, E5, EG)
28	RME0032	SPRING		PWB1	REP0306B	MAIN P.C.B. ASS'Y	(EB)
29	RME0034	SPRING		PWB2	REP0307A	SUB P.C.B. ASS'Y	
30	RML0086	EJECT LEVER					
31	RMD153	DAMPER GEAR ASS'Y					
32	XTB3-10JFZ	SCREW					
33	SJD444-1	WASHER					
34	SHE187-2	HOLDER					
35	SNE4021-1	NUT					
36	XTB3-16G	SCREW					
37	XTB3-20J	SCREW					
38	XTB3-8JFZ	SCREW					
39	XTB26-4FFZ	SCREW					

EXPLODED VIEWS

• Cabinet parts

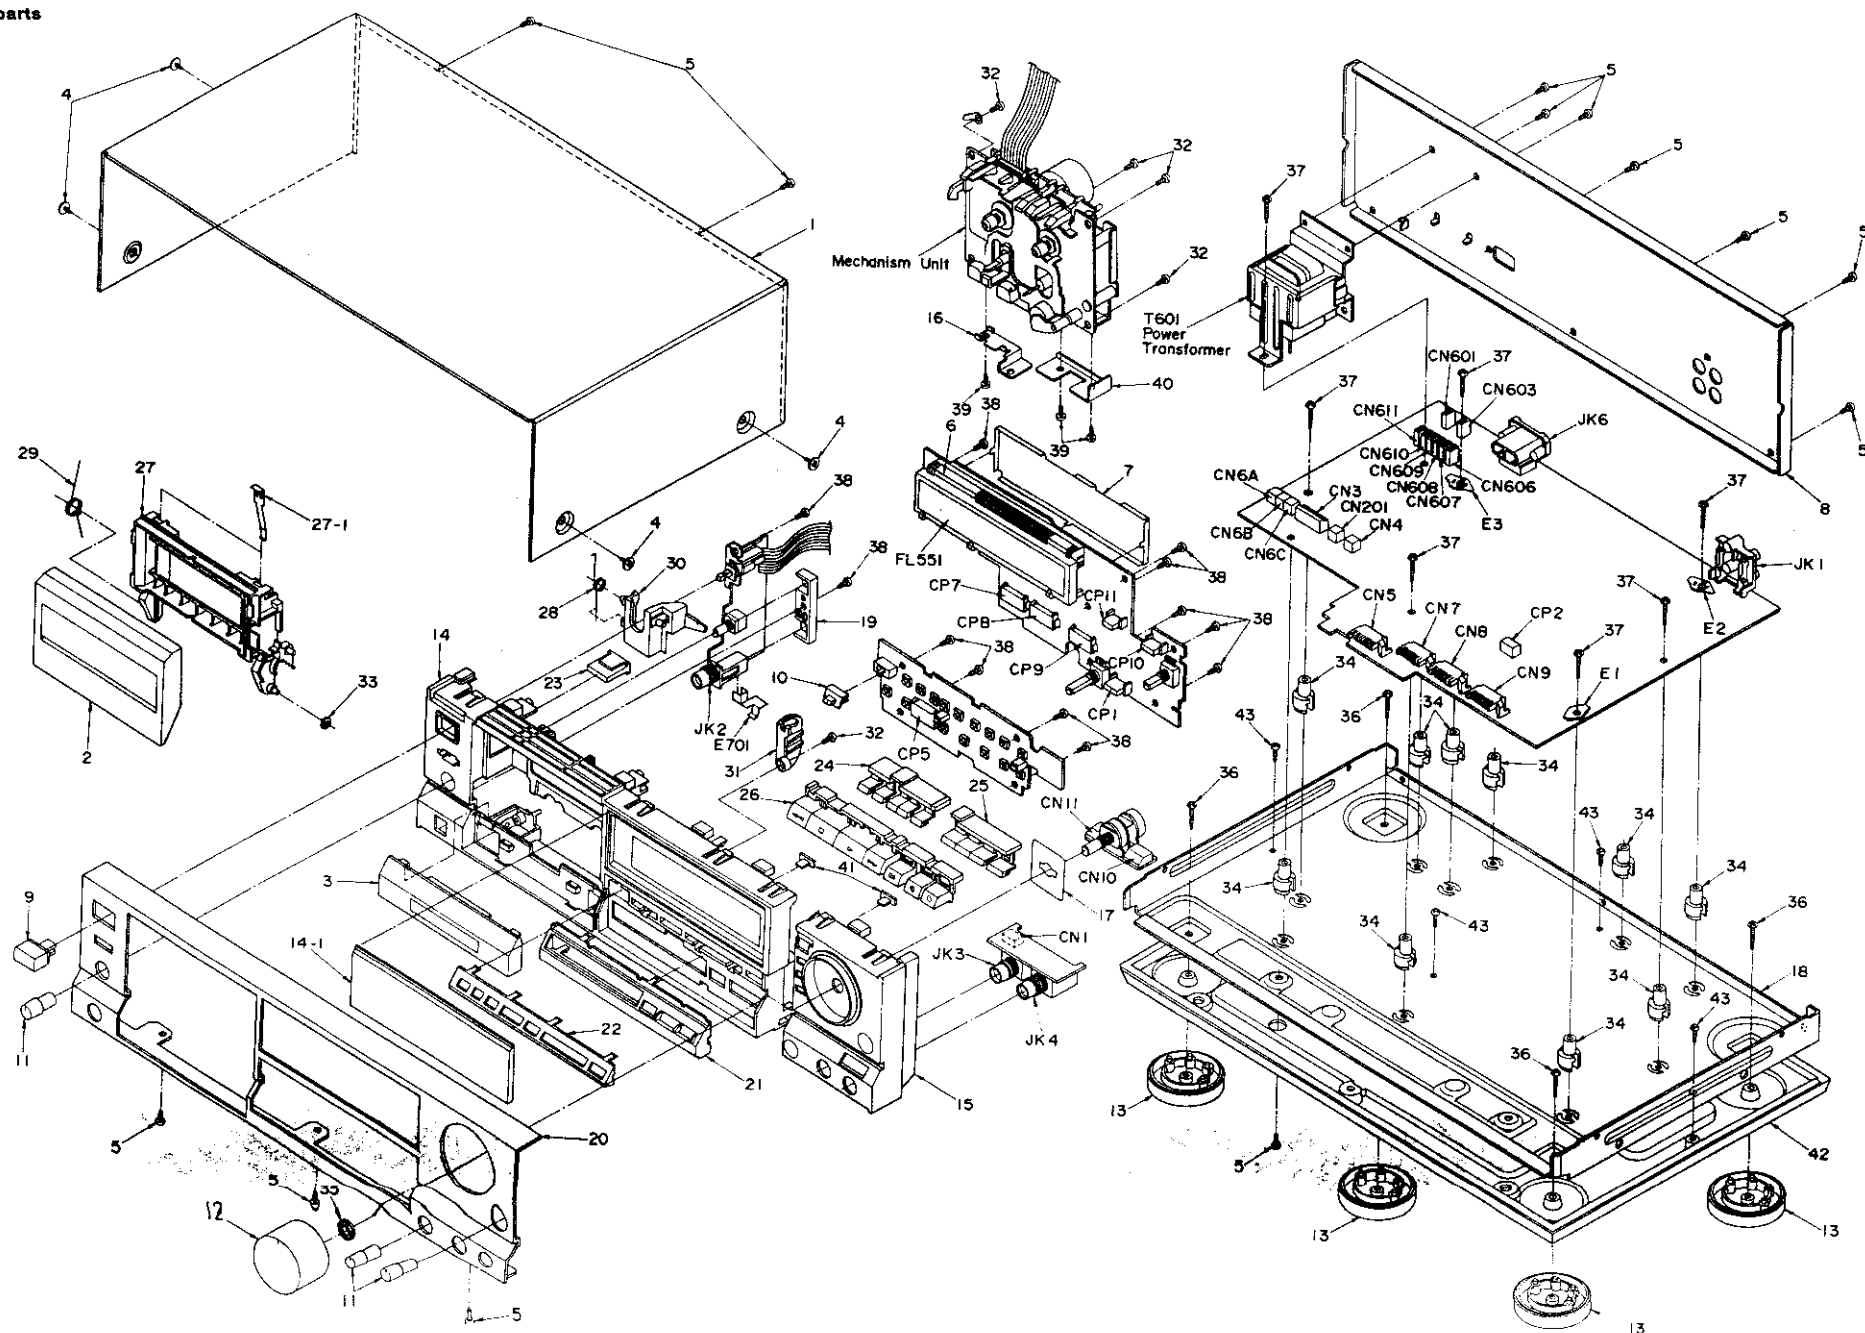


• Mechanical parts
(Top view)

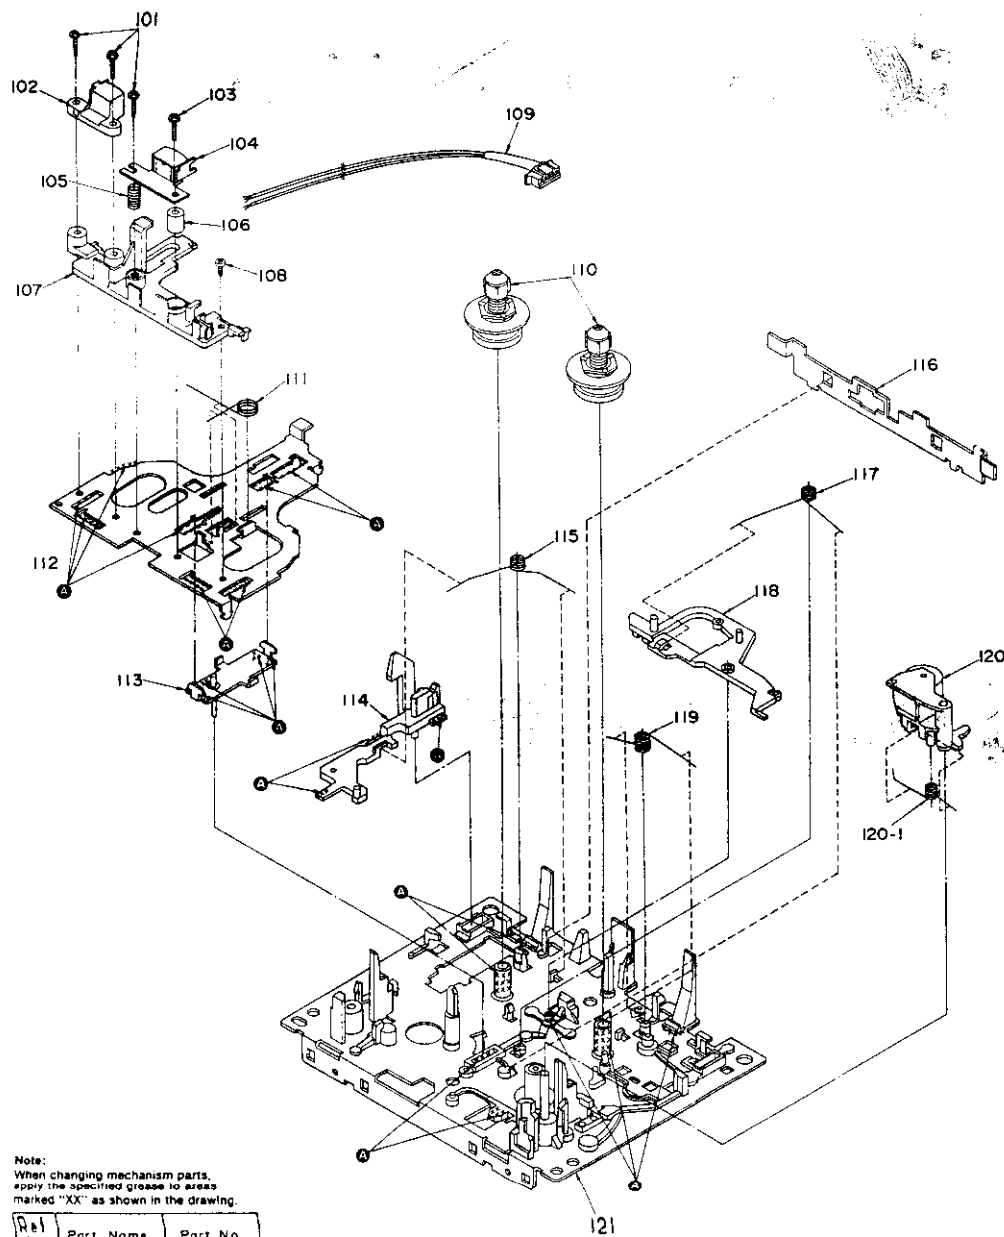

Note:
When changing mechanism parts,
apply the specified grease to areas
marked "XX" as shown in the drawing.

Ref No	Part Name	Part No.
A	FL0ILAK-152	SZZ0L18
G	FL0IL947P	RZZ0L02

(Bottom view)

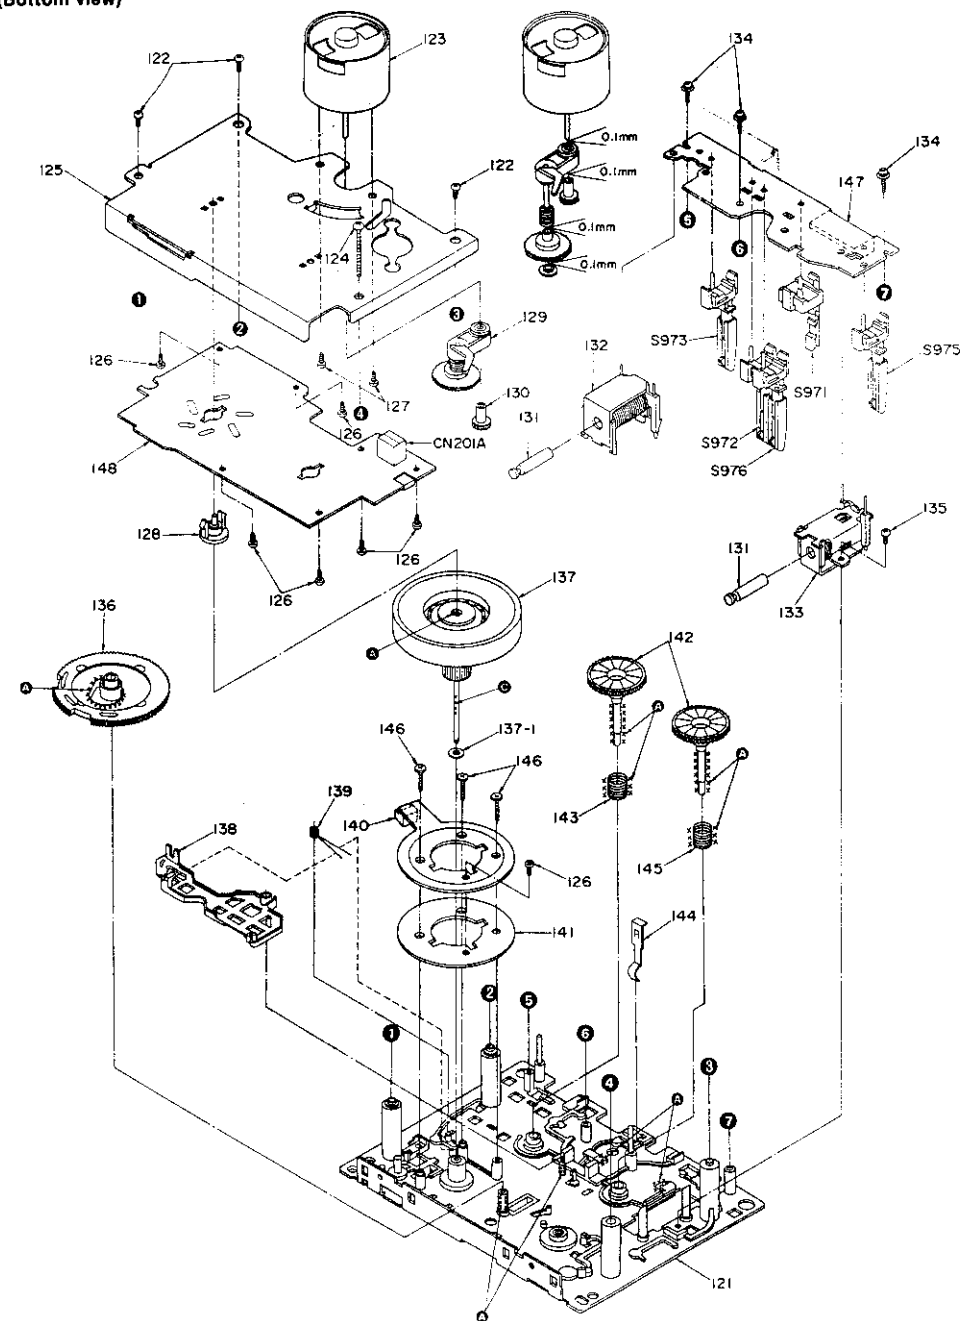

REPLACEMENT PARTS LIST

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		MECHANISM PARTS LIST		148	REPO268A	STATER P.C.B. ASS'Y	
101	QHQ1361A	SCREW					
102	SH86-1	E HEAD					
103	RHE52012A	SCREW					
104	RLHAC35GZAN	R/P HEAD					
105	QBC1278A	SPRING					
106	RHM2782A	SPACER					
107	RMD60130C	HEAD SPACER					
108	XTN2+5F	SCREW					
109	REX0075	LEAD WIRE BLOCK					
110	RQD0001	HEEL TABLE					
111	RUM1392A	SPRING					
112	RMA0047B	HEAD BASE					
113	RQD0078	MATH ROD ASS'Y					
114	RMD0112-2	EJECT ROD (L)					
115	RMD0010-1	SPRING					
116	RUBS022	LEVER					
117	RMD0020	SPRING					
118	RCL0007	BRAKE LEVER					
119	RUM1422A	SPRING					
120	RCP0004	PINCH ROLLER ARM					
120-1	RUM1402B	SPRING					
121	RFRS0555E-X	CHASSIS ASS'Y					
122	XTN26-7J	SCREW					
123	MMH-6F0A08	REEL MOTOR					
124	XTN26-25F	SCREW					
125	RMA0048A	FLYWHEEL PLATE					
126	XTN2+3F	SCREW					
127	XSN26-3	SCREW					
128	RMD0141	THRUST BEARING					
129	RQD0009	GEAR ASS'Y					
130	RQD0034	REEL MOTOR GEAR					
131	RUB4282	MOVING IRON CORE					
132	RSJ0003	SOLENOID					
133	RQD0011	BRAKE SOLENOID					
134	XTW2+8S	SCREW					
135	XTN26-4F	SCREW					
136	RQD0030	MATH GEAR					
137	RQF0008	FLYWHEEL					
137-1	RUM1392A	WASHER					
138	RML0037	LEVER					
139	RUM1472A	SPRING					
140	RJS2177A	CONNECTOR (2P)					
141	RMD0037	PG YONG					
142	RQD0003	HEEL TABLE GEAR					
143	RUM1122A	SPRING					
144	RUS6082	TAPE PRESSURE SPRING					
145	RUM1112A	SPRING					
146	RHE52042A	SCREW					
147	RJS11172A	CONNECTOR (11P)					

RESISTORS & CAPACITORS

Notes : • Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
• Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
RESISTORS			R304, 305	ERDS2TJ100T	1/4W 10	R602	ERDS2TJ472T	1/4W 4.7K
R1, 2	ERDS2TJ223T	1/4W 22K	R306	ERDS2TJ471T	1/4W 470	R603	ERDS2TJ103T	1/4W 10K
R3, 4	ERDS2TJ473T	1/4W 47K	R307	ERDS2TJ222T	1/4W 2.2K	R604	ERDS2TJ472T	1/4W 4.7K Δ
R5, 6	ERDS2TJ102T	1/4W 1K	R308	ERDS2TJ472T	1/4W 4.7K	R605	ERDS1FVJ150T	1/2W 15 (E, E5, EG)
R7, 8	ERDS2TJ225T	1/4W 2.2W	R311, 312	ERDS2TJ100T	1/4W 10			Δ
R9, 10	ERDS2TJ104T	1/4W 100K	R313, 314	ERDS2TJ154T	1/4W 150K	R606	ERDS1FVJ100T	1/2W 10 (E, E5, EG)
R11, 12	ERDS2TJ183T	1/4W 18K	R315, 316	ERDS2TJ153T	1/4W 15K			Δ
R13, 14	ERDS2TJ101T	1/4W 100	R317	ERDS2TJ822T	1/4W 8.2K	R606	ERDS2FCVG100T	1/4W 10 (E, E5, EG)
R15, 16	ERDS2TJ820T	1/4W 82	R318	ERDS2TJ272T	1/4W 2.7K	R607, 608	ERDS2TJ102T	1/4W 1K
R17, 18	ERDS2TJ153T	1/4W 15K	R319	ERDS2TJ102T	1/4W 1K	R611, 612	ERDS1FVJ270T	1/2W 27 (E, E5, EG)
R19, 20	ERDS2TJ103T	1/4W 10K	R320	ERDS2TJ332T	1/4W 3.3K			Δ
R21, 22	ERDS2TJ564T	1/4W 560K	R321	ERDS1FVJ121T	1/2W 120 (E, E5, EG)	R611, 612	ERDS2FCVG270T	1/4W 27 (E, E5, EG)
R23, 24	ERDS2TJ822T	1/4W 5.8K			Δ	R613	ERDS2TJ222T	1/4W 2.2K Δ
R25, 26	ERDS2TJ223T	1/4W 22K	R321	ERDS1FVJ561T	1/2W 560 (E, E5, EG)	R614	ERDS2TJ222T	1/4W 2.2K
R27, 28	ERDS2TJ103T	1/4W 10K	R322	ERDS2TJ563T	1/4W 56K	R615	ERDS2TJ180T	1/4W 1.8 Δ
R29, 30	ERDS2TJ472T	1/4W 4.7K	R323	ERDS2TJ103T	1/4W 10K	R616	ERDS2TJ391T	1/4W 390 Δ
R31, 32	ERDS2TJ392T	1/4W 3.9K	R324	ERDS2TJ563T	1/4W 56K	R617, 618	ERDS2TJ221T	1/4W 220 (E, E5, EG)
R33, 34	ERDS2TJ102T	1/4W 1K	R325-327	ERDS1FVJ561T	1/2W 560 (E, E5, EG)	R617, 618	ERDS2TJ560T	1/4W 56 (E, E5, EG)
R35, 36	ERDS2TJ820T	1/4W 82	R401, 402	ERDS2TJ101T	1/4W 100	R619, 620	ERQ16NKR15E	1/5W 0.15 (E, E5, EG)
R39, 40	ERDS2TJ121T	1/4W 120	R403, 404	ERDS2TJ272T	1/4W 2.7K	R623, 624	ERDS2TJ101T	1/4W 100 (E, E5, EG)
R41, 42	ERDS2TJ392T	1/4W 3.9K	R405, 406	ERDS2TJ103T	1/4W 10K	R625	ERDS2TJ181T	1/4W 180 (E, E5, EG)
R43, 44	ERDS2TJ152T	1/4W 1.5K	R407, 408	ERDS2TJ242	1/4W 2.4K	R625, 627	ERDS2TJ101T	1/4W 100 (E, E5, EG)
R45, 46	ERDS2TJ272T	1/4W 2.7K	R409, 412	ERDS2TJ684T	1/4W 680K	R628	ERDS2TJ103T	1/4W 10K
R47, 48	ERDS2TJ104T	1/4W 100K	R413, 414	ERDS2TJ562T	1/4W 5.6K	R629	ERDS2TJ472T	1/4W 4.7K Δ
R49, 50	ERDS2TJ564T	1/4W 560K	R415, 416	ERDS2TJ102T	1/4W 1K	R630	ERDS2FCVG100T	1/4W 10 (E, E5, EG)
R51-56	ERDS2TJ223T	1/4W 22K	R417, 418	ERDS2TJ332T	1/4W 3.3K	R631-636	ERDS2TJ221T	1/4W 220 (E, E5, EG)
R57, 58	ERDS2TJ153T	1/4W 15K	R419, 420	ERDS2TJ333T	1/4W 33K	R637, 638	ERDS2TJ391T	1/4W 390 Δ
R59, 60	ERDS2TJ182T	1/4W 1.8K	R421-424	ERDS2TJ823T	1/4W 82K	R701	ERDS2TJ821T	1/4W 820
R61, 62	ERDS2TJ333T	1/4W 33K	R425, 426	ERDS2TJ683T	1/4W 68K	R702	ERDS2TJ102T	1/4W 1K
R63, 64	ERDS2TJ472T	1/4W 4.7K	R427, 428	ERDS2TJ222T	1/4W 2.2K	R703	ERDS2TJ122T	1/4W 1.2K
R65, 66	ERDS2TJ102T	1/4W 1K	R429, 430	ERDS2TJ512T	1/4W 5.1K	R704	ERDS2TJ152T	1/4W 1.5K
R67, 68	ERDS2TJ223T	1/4W 22K	R431, 432	ERDS2TJ242	1/4W 2.4K	R705	ERDS2TJ182T	1/4W 1.8K
R69, 70	ERDS2TJ472T	1/4W 4.7K	R551, 552	ERDS2TJ104T	1/4W 100K	R706	ERDS2TJ222T	1/4W 2.2K
R71, 72	ERDS2TJ561T	1/4W 560	R553, 554	ERDS2TJ563T	1/4W 56K	R707	ERDS2TJ332T	1/4W 3.3K
R201	ERJ6GEYJ333V	1/10W 33K	R555, 556	ERDS2TJ104T	1/4W 100K	R708	ERDS2TJ472T	1/4W 4.7K
R202	ERJ6GEYJ683V	1/10W 68K	R557, 558	ERDS2TJ220T	1/4W 22	R709	ERDS2TJ682T	1/4W 6.8K
R203-205	ERJ6GEYJ185V	1/10W 1.5	R559, 560	ERDS2TJ152T	1/4W 1.5K	R710	ERDS2TJ123T	1/4W 12K
R206	ERJ6GEYJ222V	1/8W 2.2K	R561	ERDS2TJ102T	1/4W 1K	R711	ERDS2TJ223T	1/4W 22K
R207	ERJ6GEYJ182V	1/10W 1.8K	R562	ERDS2TJ471T	1/4W 470	R712	ERDS2TJ821T	1/4W 820
R208	ERJ6GEYJ222V	1/10W 2.2K	R563, 564	ERDS2TJ103T	1/4W 10K	R713	ERDS2TJ102T	1/4W 1K
R209-211	ERJ6GEYJ474V	1/10W 4.7K	R565	ERDS2TJ105T	1/4W 1M	R714	ERDS2TJ122T	1/4W 1.2K
R212, 213	ERJ6GEYJ152V	1/10W 1.5K	R569, 570	ERDS2TJ101T	1/4W 100	R715	ERDS2TJ152T	1/4W 1.5K
R214	ERJ6GEYJ822V	1/10W 8.2K	R571	ERDS2TJ152T	1/4W 1.5K	R716	ERDS2TJ182T	1/4W 1.8K
R215	ERJ6GEYJ101V	1/10W 100	R572	ERDS2TJ102T	1/4W 1K	R717	ERDS2TJ181T	1/4W 180
	ERJ6GEYJ222V	1/8W 2.2K	R573	ERDS2TJ560T	1/4W 56	R718	ERDS2TJ331T	1/4W 330
			R574	ERDS2TJ270T	1/4W 22	R719, 720	ERDS2TJ180	1/4W 18
			R575	ERDS2TJ681T	1/4W 680	R721, 722	ERDS2TJ330T	1/4W 33
R301	ERDS2TJ180T	1/4W 1.8	R576	ERDS2TJ681T	1/4W 680	R723, 724	ERDS2TJ100T	1/4W 10
R302, 303	ERDS2TJ183T	1/4W 18K	R501	ERDS2TJ472T	1/4W 4.7K Δ			

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R725, 726	ERDS2TJ102T	1/4W 1K	R958	ERDS2TJ103T	1/4W 10K	C39, 40	ECQB1H152J23	50V 1500P
R727, 728	ERDS2TJ332T	1/4W 3.3K	R959	ERDS2TJ152T	1/4W 1.5K	C41, 42	ECBT1H470J5	50V 47P
R901	ERDS2TJ105T	1/4W 1M	R960	ERDS2TJ472T	1/4W 4.7K	C43, 44	ECEA1CK1008	16V 10U
R902	ERDS2TJ183T	1/4W 18K	R961	ERDS2TJ821T	1/4W 820	C45, 46	ECEA1EK47B	25V 4.7U
R903	ERDS2TJ471T	1/4W 470	R962	ERDS2TJ183T	1/4W 18K	C47, 48	ECEA1H80108	50V 1U
R904	ERDS2TJ103T	1/4W 10K	R963	ERDS2TJ473T	1/4W 47K	C49, 50	ECEA1CK1008	16V 10U
R905	ERDS2TJ182T	1/4W 1.8K	R964	ERDS2TJ392T	1/4W 3.9K	C51, 52	ECQV1H1032F	50V 0.01U
R906	ERDS2TJ682T	1/4W 6.8K	R965	ERDS2TJ104T	1/4W 100K	C201	ECQV1E153MB	25V 0.015U
R907	ERDS2TJ103T	1/4W 10K	R970	ERDS2TJ222T	1/4W 2.2K	C202	ECQV1E104KB	25V 0.1U
R908	ERDS2TJ392T	1/4W 3.9K	R971	ERDS2TJ332T	1/4W 3.3K	C203, 204	ECEV1CA100R	16V 10U
R909	ERDS2TJ272T	1/4W 2.7K	R971A	ERDS2TJ271T	1/4W 270	C205, 206	ECQV1E104KB	25V 0.1U
R910	ERDS2TJ103T	1/4W 10K	R972	ERDS2TJ472T	1/4W 4.7K	C209-211	ECEV1EN47R	25V 4.7U
R911	ERDS2TJ392T	1/4W 3.9K	R972A	ERDS2TJ183T	1/4W 18K	C212-214	ECQV1H1032F4	50V 0.01U
R912	ERDS2TJ272T	1/4W 2.7K	R973	ERDS2TJ682T	1/4W 6.8K	C215	ECQV1H472KB	50V 4700P
R913	ERDS2TJ561T	1/4W 560	R973A	ERDS2TJ271T	1/4W 270	C216	ECQV1E562KB	25V 5600P
R914	ERDS2TJ102T	1/4W 1K	R974	ERDS2TJ123T	1/4W 12K	C217-219	ECQV1E104KB	25V 0.1U
R915	ERDS2TJ103T	1/4W 10K	R974A	ERDS2TJ183T	1/4W 18K	C301	ECQV1153J2	100V 0.015U
R916	ERDS2TJ332T	1/4W 3.3K	R975	ERDS2TJ223T	1/4W 22K	C302	ECEA1EK47B	25V 4.7U
R917, 918	ERDS2TJ103T	1/4W 10K	R977	ERDS2TJ223T	1/4W 22K Δ	C303	ECQV1H92KB	50V 3900P
R919, 920	ERDS2TJ223T	1/4W 22K	R978	ERDS2TJ473T	1/4W 47K	C304, 305	ECQV1H22KB	50V 2200P
R922	ERDS2TJ472T	1/4W 4.7K	R979	ERDS2TJ272T	1/4W 2.7K	C306	ECQV1H62KB	50V 6800P
R923	ERDS2TJ152T	1/4W 1.5K	R980	ERDS2TJ472T	1/4W 4.7K	C310	ECQV1H1032KB	50V 4700P
R924	ERDS2TJ223T	1/4W 22K	R981	ERDS2TJ392T	1/4W 3.9K	C311	ECEA1AU101B	10V 100U
R925	ERDS2TJ821T	1/4W 820	R982	ERDS2TJ223T	1/4W 22K	C312	ECQV1H1032F	50V 0.01U
R926	ERDS2TJ223T	1/4W 22K Δ	R983	ERDS2TJ103T	1/4W 10K	C313, 314	ECQV1H223F	50V 0.022U
R927	ERDS2TJ821T	1/4W 820	R984	ERDS2TJ472T	1/4W 4.7K (E, E5, EG)	C315, 316	ECBT1H221KB5	50V 820P
R928	ERQ1S1J50	1W 15 Δ	R985	ERDS2TJ222T	1/4W 2.2K (E, E5, EG)	C317, 318	ECBT1H121KB5	50V 120P
R929	ERQ1S1J80E	1W 18 Δ	R986	ERDS2TJ332T	1/4W 3.3K (E, E5, EG)	C319, 320	ECQV1H563J23	50V 0.056U
R930	ERDS2TJ223T	1/4W 22K Δ	R987	ERDS2TJ822T	1/4W 8.2K	C321, 322	ECQV1H223J23	50V 0.022U
R931	ERDS2TJ821T	1/4W 820	R988	ERDS2TJ473T	1/4W 47K	C323, 324	ECQV1H103J23	50V 0.01U
R932	ERDS2TJ472T	1/4W 4.7K (E, E5, EG)	R989	ERDS2TJ822T	1/4W 8.2K	C325, 326	ECQV1H22KB	50V 1200P
R933	ERDS2TJ103T	1/4W 10K	R990	ERDS2TJ473T	1/4W 47K	C328, 328	ECQV1H80J5	50V 18P
R934	ERDS2TJ472T	1/4W 4.7K			CAPACITORS	C329	ECEA1EK1008	25V 10U
R935	ERDS2TJ682T	1/4W 6.8K				C330	ECQV1H1032F	50V 0.01U Δ
R936	ERDS2TJ223T	1/4W 22K				C331	ECBT1H180J5	50V 18P
R938	ERDS2TJ682T	1/4W 6.8K	C1, 2	ECEA1EK47B	25V 4.7U	C401, 402	ECBT1H20KB5	50V 82P
R939	ERDS2TJ223T	1/4W 22K	C3, 4	ECBT1H881KB5	50V 680P	C403, 404	ECEA1EK47B	25V 4.7U
R940, 941	ERDS2TJ562T	1/4W 5.6K	C5, 6	ECBT1H102KB5	50V 1000P	C405, 406	ECQV1H122KB	50V 1200P
R942	ERDS2TJ821T	1/4W 820	C7, 8	ECBT1H561KB5	50V 560P	C407, 408	ECQV1H152KB	50V 1500P
R943	ERDS2TJ223T	1/4W 22K	C9, 10	ECQV1H101B	6.3V 100U	C409, 410	ECQV1H472J23	50V 4700P
R944, 945	ERDS1FVJ180T	1/2W 1.8 Δ	C11, 12	ECQV1H562J23	50V 5600P	C411, 412	ECEA1CK1008	16V 10U
R946	ERDS2TJ102T	1/4W 1K	C13, 14	ECEA1EK47B	25V 4.7U	C413, 414	ECQV1H473J23	50V 0.047U
R947, 948	ERDS2TJ103T	1/4W 10K	C15, 16	ECBT1H101KB5	50V 100P	C415, 416	ECQV1H224J23	50V 0.22U
R949	ERDS2TJ472T	1/4W 4.7K	C17, 18	ECQV1H822J23	50V 8200P	C417-420	ECEA1H686B	50V 0.68U
R950	ERDS2TJ821T	1/4W 820	C19, 20	ECEA1H6847B	50V 0.47U	C421, 422	ECQV1H103J23	50V 0.01U
R951	ERDS2TJ101T	1/4W 100	C21, 22	ECEA1CK1008	16V 10U	C423, 424	ECQV1H473J23	50V 0.047U
R952	ERDS2TJ823T	1/4W 82K	C23, 24	ECQV1H273J2	50V 0.027U	C425, 426	ECEA1CK1008	16V 10U
R953	ERDS2TJ993T	1/4W 39K	C27, 28	ECQV1H822J23	50V 8200P	C427, 428	ECQV1H472J23	50V 4700P
R954	ERDS2TJ472T	1/4W 4.7K	C29, 30	ECQV1H563J23	50V 0.056U	C429, 430	ECQV1H103J23	50V 0.01U
R955	ERDS2TJ102T	1/4W 1K	C33, 34	ECBT1H101KB5	50V 100P	C431, 432	ECQV1H102KB	50V 0.001U
R956	ERDS2TJ473T	1/4W 47K	C35, 36	ECEA1H80108	50V 1U	C551, 552	ECQV1H104J23	50V 0.1U
R957	ERDS2TJ153T	1/4W 15K	C37, 38	ECQV1121J2	100V 120P	C553, 554	ECEA1H101B	6.3V 100U

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks			
C555	ECCT1H103ZF	50V 0.01U	C619, 620	ECCT1H103ZF	50V 0.01U Δ			
C556	ECEA1CK100B	16V 10U	C621	ECCT2H682PEL	500V 6800P Δ			
C557	ECEA1EKAR7B	25V 4.7U	C701	ECCT1H223ZF	50V 0.022U			
C558	ECEA1HND10B	50V 1U	C702, 703	ECCT1H103ZF	50V 0.01U			
C559-561	ECBT1C103MS5	16V 0.01U	C901	ECEA1J222B	6.3V 2200U			
C563, 564	ECEA1J222E	6.3V 100U	C902	ECCT1H103ZF	50V 0.01U			
C567	ECEA1VK100B	35V 10U	C903	ECEA1HND10B	50V 1U			
C568	ECEA1VK100B	35V 10U	C904	ECEA1EKAR7B	25V 4.7U			
C601	ECCT2H682PEL	500V 6800P	C905	ECCT1H103ZF	50V 0.01U			
C602, 603	ECEA1J222E	25V 2200U Δ	C906	ECEA1CN100SB	16V 10U			
C604, 605	ECCT1H103ZF	50V 0.01U	C907	ECEA1HND10B	50V 1U			
C606, 607	ECEA1J222B	10V 220U	C908	ECCT1H103ZF	50V 0.01U			
C608, 609	ECCT1H103ZF	50V 0.01U	C909	ECCT1H223ZF	50V 8200P			
C610, 611	ECEA1J222B	10V 1000U	C910	ECEA1CK100B	16V 10U			
C612	ECEA1J222E	25V 2200U Δ	C911	ECBT1H470J5	50V 47P			
C613	ECCT1H103ZF	50V 0.01U	C912	ECEA1HND10B	50V 1U			
C615	ECEA1EK100B	25V 10U	C913	ECCT1H103ZF	50V 0.01U			
C617	ECEA1H470B	50V 47U	C914	ECEA1EKAR7B	25V 4.7U			
C618	ECCT1H103ZF	50V 0.01U	C915	ECEA1J222B	6.3V 100U			
C619, 620	ECCT1H103ZF	50V 0.01U Δ	C916	ECCT1H103ZF	50V 0.01U			
C621	ECCT2H682PEL	500V 6800P Δ	C917	ECEA1HND10B	50V 1U (EB)			
C701	ECCT1H223ZF	50V 0.022U	C918	ECCT1H103ZF	50V 0.01U			

Cassette Deck

DEUTSCH

RS-B555
RS-B655

MESSUNGEN UND EINSTELL METHODEN

Tonkopf-Azimuth-Einstellung

1. Spielen Sie auf dem Testband (QZZCFM) den Teil für die Azimuth-Einstellung (8kHz, -20dB) ab. Drehen Sie die Azimuth-Einstellschraube so lange, bis die Abgaben des L-K und R-K den Höchstwert erreichen, und die Lissajossche wellenförmig sich, wie abgebildet, 0 Grad nähert.

Anmerkung:

- When L-K und R-K nicht auf demselben Punkt ihren Höchstwert erreichen, stellen Sie beide Kanäle auf den jeweiligen Höchstwert und gleichen dann aus.
2. Nehmen Sie denselben Einstellvorgang in der Wiedergabestellung vor.

Prüfung des Pegelunterschiedes bei Vorwärts- und Rückwärtsdrehung

3. Den Abschnitt für Verstärkungseinstellung (315Hz, 0dB) des Prüfbandes (QZZCFM) wiedergeben und sicherstellen, daß der Pegelunterschied bei Vorwärts- und Rückwärtsdrehung kleiner als 1dB ist.
4. Nach der Einstellung Schrauben-Sicherungsmittel an die Azimuth-Einstellschraube geben.

Einstellung der Wiedergabeverstärkungsregelung

1. Spielen Sie auf dem Testband (QZZCFM) den Teil für die Einstellung der Verstärkungsregelung (315Hz, 0dB) ab.
2. Stellen Sie VR1 (L-K) [VR2 (R-K)] so ein, daß die Abgabe den Normwert erfüllt.

Wiedergabefrequenzaang


1. Spielen Sie auf dem Testband (QZZCFM) den Teil für den Frequenzgang (315Hz, 12.5kHz~63Hz, -20dB) ab.
2. Achten Sie darauf, daß der Frequenzgang für beide Kanäle (L-K, R-K) in dem in Abb.5 gezeigten Bereich liegt.

Wechselstrom-Vorrichtungseinstellung

1. Das unbespielte Metalltestband (QZZCRZ) einlegen, und das Gerät auf Aufnahme Schalten.
2. L1 (L-CH) (L2 (R-CH)) so einstellen, daß die Ausgangsspannung zwischen TP1 (TP2) und GND geringer als der Minimalwert ist.

PACKING

(Parts list on page 36.)

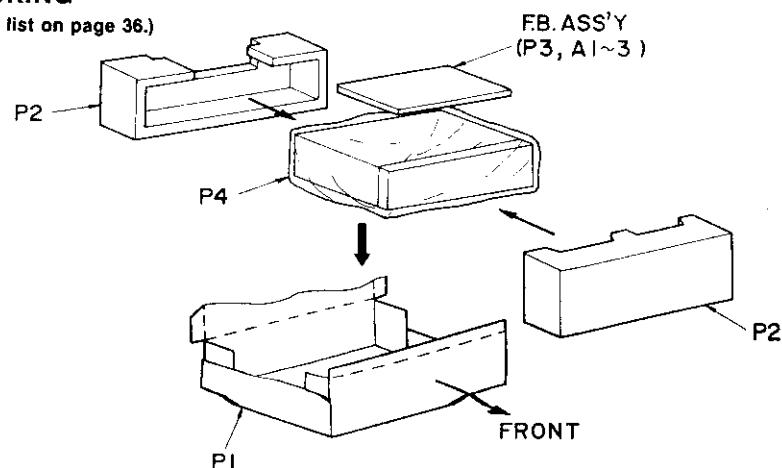

Service Manual

Cassette Deck
RS-B655

Supplement

Dolby NR-Equipped
Stereo Cassette Deck

Color

(K)....Black Type



*HX Pro headroom extension originated by Bang Olufsen and manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY", the double-D symbol, and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Area

Country Code	Area	Color
(E, E5)	Continental Europe.	(K)
(EB)	Great Britain.	
(EG)	F.R. Germany & Italy.	

Please file and use this supplement manual together with the service manual for Model No. RS-B655, Order No. AD8907232C2.

Note:

- This supplement has been issued to correct an error in the "Replacement Parts List" on page 36.

DELETION

■ REPLACEMENT PARTS LIST (Page 36 of service manual.)

Note:

- Please remove the MECHANISM UNIT ASS'Y and the PRINTED CIRCUIT BOARD ASS'Y from the parts list because they are out of object in the replacement parts lists.

Ref. No.	Change of Part No.	Part Name & Description	Remarks
	ORIGINAL		
MECHANISM UNIT			
MECH1	RAA0802	MECHANISM ASS'Y	Deletion
PRINTED CIRCUIT BOARDS			
PWB1 (E, E5, EG)	REP0306A	MAIN P.C.B. ASS'Y	Deletion
PWB1 (EB)	REP0306B	MAIN P.C.B. ASS'Y	Deletion
PWB2	REP0307A	SUB P.C.B. ASS'Y	Deletion

Gesamtfrequenzgang

- Legen Sie das normale Leertestband (QZZCRA) ein und stellen das Gerät auf Aufnahme-/Pause-Betrieb.
- Geben Sie über einen Lautstärkerregler ein Bezugseingabesignal (1kHz, -24dB) ein.
- Stellen Sie das Signal auf 20dB und justieren die Frequenz von 50Hz~10kHz.
- Nehmen Sie das Wobbelnsignal auf.
- Geben Sie das aufgenommene Signal wieder und achten darauf, daß dieses sich im Vergleich zur Bezugsfrequenz (1kHz) in dem in Abb. 8 aufgezeichneten Bereich befindet.
- Sollte das Signal nicht im Normbereich liegen, justieren Sie VR301 (L-K) und VR302 (R-K), so daß der Frequenzpegel mit der Norm übereinstimmt.
- Wiederholen Sie die Schritte 2~6 und verwenden das CrO₂ Band (QZZCRX) und das Metallband (QZZCRZ). Der Frequenzbereich wird auf 12.5kHz (50Hz~12.5kHz) angehoben.
- Achten Sie darauf, daß sich der Frequenzpegel in dem in Abb. 9 aufgezeigten Bereich befindet.

Einstellung der Gesamtverstärkungsregelung

- Legen Sie das normale Leertestband (QZZCRA) ein und stellen das Gerät auf Aufnahme-/Betrieb.
- Legen Sie ein Bezugseingabesignal (1kHz, -24dB) an. Stellen Sie das Ausgangssignal auf einen Pegel von 0.4V ein.
- Nehmen Sie das Eingabesignal auf.
- Geben Sie das in Schritt 3 oben aufgenommene Signal wieder und achten Sie darauf, daß das Ausgangssignal mit dem Normwert übereinstimmt.
- Sollte der Wert nicht innerhalb der Norm liegen, justieren Sie VR3 (L-K) und VR4 (R-K).
- Wiederholen Sie die Schritte 2~5 von oben so lange, bis das Ausgangssignal im Normbereich liegt.

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

Printed in Japan
K890908250HK

FRANÇAIS

METHODES DES MEASURES ET REGLAGES

Reglage Azimutal de la tete

1. Faire jouer la portion du réglage de l'azimuth (8kHz, -20dB) de la bande d'essai (QZZCFM). Ajuster la vis de la mise au point azimutale jusqu'à ce que les sorties du canal de gauche et du canal de droite soient maximisées et que la forme d'onde de Lissajous, comme il est illustré, approche de 0 degré.

Nota:

Si le canal de gauche et canal de droite ne sont pas maximisés au même point, régler le point où les niveaux de chaque canal sont maximisés et égaux.

2. Effectuer la même règle 19 mglage sur le mode d'audition.

Vérification de la différence de niveau pour les deux sens de rotation

3. Introduire une bande métal vierge prévue pour les essais (QZZCPZ) et vérifier que la différence de niveau pour les deux sens de rotation est inférieure à 1dB.
4. Après cela, mettre une goutte de vernis de blocage sur la vis de réglage de l'azimut.

Reglage de L'amplification de Lecture

1. Faire jouer la partie réglée de l'amplification (315Hz, 0dB) de la bande d'essai (QZZCFM).
2. Régler la platine 1: VR1 (canal de gauche) et VR2 (canal de droite) de telle sorte que la sortie soit en deçà de la valeur standard.

Reponse en Frequence de la Lecture

1. Faire jouer la partie de la réponse en fréquence (315Hz, 12.5kHz, -63Hz, -20dB) de la bande d'essai (QZZCFM).
2. S'assurer que la réponse en fréquence soit en deçà de la plage montrée dans la Fig. 5, à la fois pour le canal de gauche et le canal de droite.

Réglage du bouchon de polarisation

1. Introduire la cassette d'essai vierge (QZZCRZ) et régler l'appareil pour l'enregistrement.
2. Régler L1 (L-CH) et L2 (R-CH) de sorte que la tension entre TP1 (TP2) et la masse (GND) soit inférieure à la valeur minimale.

Reponse en Frequence Totale

1. Introduire la bande d'essai vierge normale (QZZCRA) et régler l'appareil sur le mode d'intermission d'un disque.
2. Appliquer un signal d'entrée de référence (1kHz, -24dB) par l'intermédiaire d'un atténuateur.
3. Diminuer le signal de 20dB et régler la fréquence de 50Hz~10kHz.
4. Enregistrer le balayage de fréquence.
5. Faire jouer le signal enregistré et s'assurer qu'il soit en deçà de la plage montrée à la Fig. 8 en comparaison à la fréquence de référence (1kHz).
6. S'il n'est pas en deçà de la plage standard, régler VR301 (canal de gauche) et VR302 (canal de droite) de telle sorte que le niveau de fréquence soit en deçà de la plage standard.
7. Répéter les étapes 2~6 ci-dessus en utilisant la bande CrO₂ (QZZCRX) et la bande métallisée (QZZCRZ) en augmentant la plage de fréquence à 12.5kHz (50Hz~12.5kHz).
8. S'assurer que le niveau soit en deçà de la plage montrée à la Fig. 8.

Reglage de L'amplification Totale

1. Introduire la bande d'essai vierge normale (QZZCRA) et régler l'appareil sur le mode d'intermission d'un disque.
2. Appliquer un signal d'entrée de référence (1kHz, -24dB). Diminuer la sortie de telle sorte que son niveau devienne de 0.4V.
3. Enregistrer ce signal d'entrée.
4. Faire jouer le signal enregistré à l'étape 3 ci-dessus, et s'assurer que la sortie en deçà de la valeur standard.
5. Si elle n'est pas en deçà de la valeur standard, régler VR3 (canal de gauche) et VR4 (canal de droite).
6. Répéter les étapes 2~5 ci-dessus jusqu'à ce que la sortie soit en deçà de la valeur standard.

ESPAÑOL

METODOS DE AJUSTE Y MEDIDA

Ajuste Azimutal de Cabeza

1. Reproducir la porción de ajuste azimutal (8kHz, -20dB) de la cinta de prueba (QZZCFM). Variar el tornillo de ajuste azimutal hasta que las salidas del CH-I y CH-D se maximicen y forma de onda de lissajous, como ilustrado, se acerque a grado 0.

Nota:

- Si CH-I y CH-D no son maximizados en el mismo punto, ajustar al punto donde los niveles de cada canal sean maximizados e igualados.
2. Efectuar el mismo ajuste en la modalidad de reproducción.

Comprobación de la diferencia de nivel de giro hacia adelante y hacia atrás

3. Reproduzca la parte del ajuste de ganancia (315Hz, 0dB) de la cinta de prueba (QZZCFM) y luego asegúrese de que la diferencia de nivel de giro hacia adelante y hacia atrás sea menor que 1dB.
4. Después del ajuste, aplique pintura de fijación al tornillo de ajuste del azimut.

Ajuste de Ganancia de Reproduccion

1. Reproducir la porción ajustada de ganancia (315Hz, 0dB) de la cinta de prueba (QZZCFM).
2. Ajustar la Platina 1: VR1 (CH-I) [[VR2 (CH-D)]] de manera que la salida esté dentro del valor estándar.

Respuesta de Frecuencia de Reproduccion

1. Reproducir la parte de respuesta de frecuencia de reproducción (315Hz, 12.5kHz~63Hz, -20dB) de la cinta de prueba (QZZCFM).
2. Asegurarse de que la respuesta de frecuencia esté dentro de la gama mostrada en la Fig. 5 para ambos CH-I y CH-D.

Ajuste del Circuito Trampa de Polarizacion

1. Introduzca la cinta virgen de metal (QZZCRZ) para pruebas y ponga el aparato en el modo de grabación.
2. Ajuste L1 (canal izq.) ((L2 (canal der.)) de manera que la tensión de salida entre TP1 (TP2) y GND (Tierra) sea menor que el valor mínimo.

Respuesta de Frecuencia Total

1. Poner una cinta virgen normal (QZZCRA) y poner la unidad en la modalidad de Pausa de Grabación.
2. Aplicar la señal de entrada de referencia (1kHz, -24dB) a través de un atenuador.
3. Atenuar la señal por 20dB y ajustar la frecuencia de 50Hz~10kHz.
4. Grabar el barrido de frecuencia.
5. Reproducir la señal grabada y asegurarse de que esté dentro de la gama mostrada en la Fig. 8 en comparación con la frecuencia de referencia (1kHz).
6. Si no está dentro de la gama de frecuencia, ajustar VR301 (CH-I) y VR302 (CH-D) de manera que el nivel de frecuencia esté dentro de la gama estándar.
7. Repetir los pasos 2~8 de arriba utilizando la cinta CrO₂ (QZZCRX) y la cinta metálica (QZZCRZ) incrementando la gama de frecuencia a 12.5kHz (50Hz~12.5kHz).
8. Asegurarse de que el nivel esté dentro de la gama mostrada en la Fig. 9.

Ajuste de Ganancia Total

1. Insertar la cinta de prueba en blanco normal (QZZCRA) y poner la unidad en modalidad de pausa de Grabación.
2. Aplicar la señal de entrada de referencia (1kHz, -24dB). Atenuar la salida de manera que su nivel se haga 0.4V.
3. Grabar la señal de entrada.
4. Reproducir la señal grabada en el paso 3 de arriba y asegurarse de que la salida esté dentro del valor estándar.
5. Si no está dentro del valor estándar, ajustar VR3 (CH-I) y VR4 (CH-D).
6. Repetir el paso 2~5 de arriba hasta que la salida esté dentro del valor estándar.